

PARTS LIST

MST-2200VDR - TIER4 360° ROTATION-TYPE RUBBER CRAWLER CARRIER

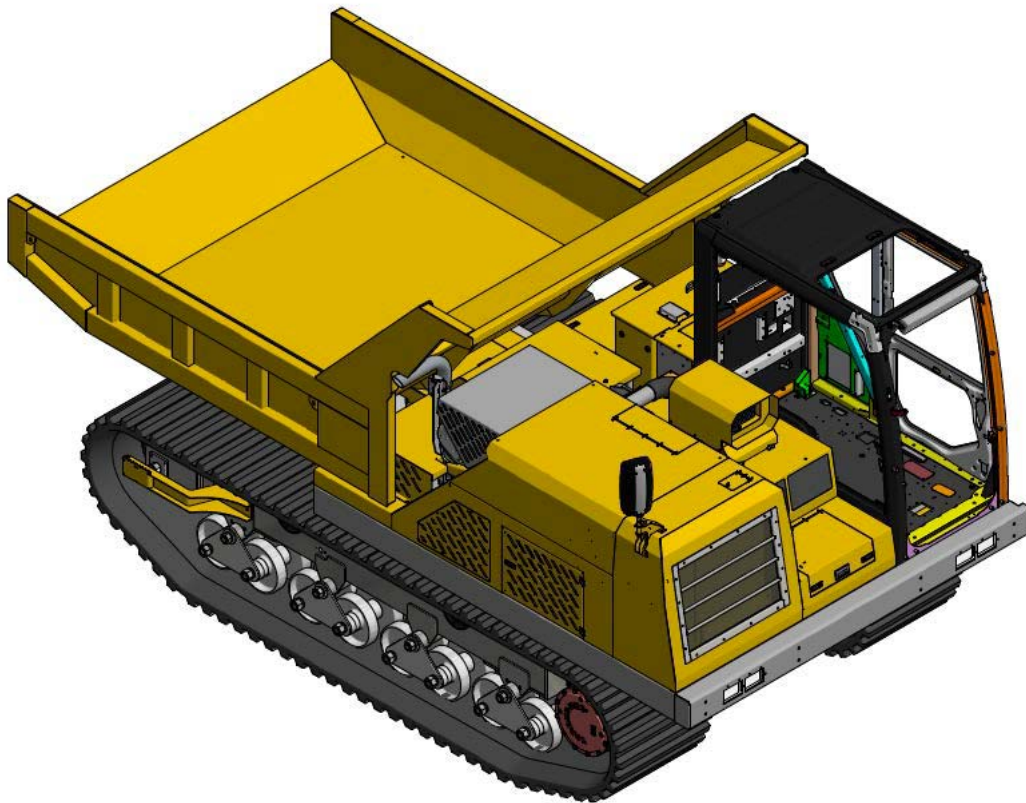

MOROOKA

Serial No. AR224101 and Up

LIST OF FIGURES

Figure	Title	Page
01-01	ENGINE	01-2
01-02	HEATER HOSE	01-4
01-03	DEF TANK	01-6
01-04	OIL COOLER COVER	01-8
01-05	BATTERY COVER	01-10
01-06	AIR INTAKE ASSEMBLY	01-12
01-07	FUEL LINES	01-14
02-01	FRAME AND PLATFORM	02-2
02-02	RADIATOR COVER, SIDE WALL, AND MIRROR	02-4
02-03	VDR EXHAUST AND COVER	02-8
02-04	FUEL TANK CAP ASSEMBLY	02-10
02-05	TOOL BOX AND REAR LOWER COVERS	02-12
02-06	HYDRAULIC OIL TANK	02-14
02-07	LOWER FRAME	02-16
02-08	FLOOR PAN	02-20
03-01	MOUNTING GP-PLATFORM. PO 332-4978	03-2
03-02	SUPPORT GP-SEAT. PO 305-0449	03-4
03-03	SEAT BELT GP-SEAT. PO 440-9256	03-6
03-04	SEAT AND MOUNTING GP	03-8
03-05	SEAT GP-SUSPENSION. PO316-8881	03-10
03-06	SEAT GP-HIGH BACK PO 316-8882	03-12
03-07	SUSPENSION GP-SEAT-MECHANICAL	03-14
03-08	DUCT GP-CAB AIR	03-16
03-09	FRAME GP-AIR FILTER-CAB	03-18
03-10	RADIO GP-AM/FM	03-20
03-11	PANEL GP-SWITCH-ENGINE SPEED, START	03-22
03-12	PANEL GP-SWITCH-ENGINE START	03-24
03-13	SWITCH GP-START	03-26
03-14	WIPER GP-WINDOW-UPPER	03-28
03-15	WIRING GP-CAB-ROOF	03-30
03-16	WIRING GP-CONVERTER	03-34
03-17	PLATFORM GP-OPERATOR	03-36
03-18	HATCH GP-ROOF	03-38
03-19	HATCH GP-ROOF	03-40
03-20	MOUNTING GP-ROPS	03-42
03-21	LINES GP-WINDOW WASHER	03-44

LIST OF FIGURES (Continued)

Figure	Title	Page
03-22	LINES GP-WINDOW WASHER	03-46
03-23	CAB GP	03-48
03-24	COVER GP-CAB	03-50
03-25	CAB GP	03-52
03-26	BRACKET GP-MOUNTING	03-54
03-27	CAB GP-INTERIOR	03-56
03-28	COVER GP-CAB-REAR	03-58
03-29	COVER GP-CONSOLE-WIPER MOTOR	03-60
03-30	COVER GP-CAB-RH	03-62
03-31	DOOR GP-CAB-PARTIAL	03-64
03-32	SPACER-RUBBER	03-68
03-33	LATCH GP-WINDOW	03-70
03-34	CAB GP-EXTERIOR (SHEET 1 OF 2)	03-73
03-34	CAB GP-EXTERIOR (SHEET 2 OF 2)	03-74
03-35	MIRROR GP-REAR VIEW	03-78
03-36	LEVER GP-CAB DOOR	03-80
03-37	LEVER GP-CAB DOOR	03-82
03-38	COVER GP-CAB-EXTERIOR	03-84
03-39	BRACKET GP-MOUNTING-MIRROR	03-86
03-40	COVER GP-CAB	03-88
03-41	DOOR GP-CAB-PARTIAL	03-90
03-42	FUSE BOX	03-94
03-44	WINDOW GP-CAB-FRONT, UPPER	03-98
03-45	WINDOW GP-CAB-FRONT, UPPER	03-100
03-46	STRIKER GP-LATCH-WINDOW	03-102
03-47	WINDOW GP-CAB-FRONT, REAR, SIDE	03-104
03-48	AIR CONDITIONER & MOUNTING GP	03-106
03-49	AIR CONDITIONER GP (SHEET 1 OF 2)	03-109
03-49	AIR CONDITIONER GP (SHEET 2 OF 2)	03-110
03-50	FOOTREST GP	03-114
03-51	CONSOLE GP - OPR	03-116
03-52	CONSOLE GP-OPERATOR-RH	03-118
03-53	ARMREST GP-RH	03-120
03-54	ARMREST GP	03-122
03-55	WIRE COVER	03-124
04-01	A/C SYSTEM	04-2


LIST OF FIGURES (Continued)

Figure	Title	Page
05-01	TENSIONER ASSEMBLY	05-2
05-02	ROLLERS, PLANETARY GEAR	05-4
05-03	CHASSIS STEPS	05-6
06-01	MAIN PUMPS	06-2
06-02	HYDRAULIC PUMP LINES	06-4
06-03	OIL COOLER AND AUXILIARY PUMP	06-6
06-04	TRAVEL MOTOR LINES	06-10
06-05	DUMP LINES	06-12
06-06	SWIVEL TOP LINES	06-14
06-07	HYDRAULIC FILTER LINES	06-16
06-08	HYDRAULIC TANK LINES	06-20
07-01	DUMP BED	07-2
08-01	ECM HARNESS AND PROXIMITY HARNESS	08-2
08-02	BATTERY CABLES	08-4
08-03	FORWARD HARNESS	08-8
08-04	BACK UP CAMERA AND ALARM	08-10
09-01	DECALS	09-2
	NUMERICAL INDEX	Index-1

THIS PAGE INTENTIONALLY LEFT BLANK

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 01-01 ENGINE

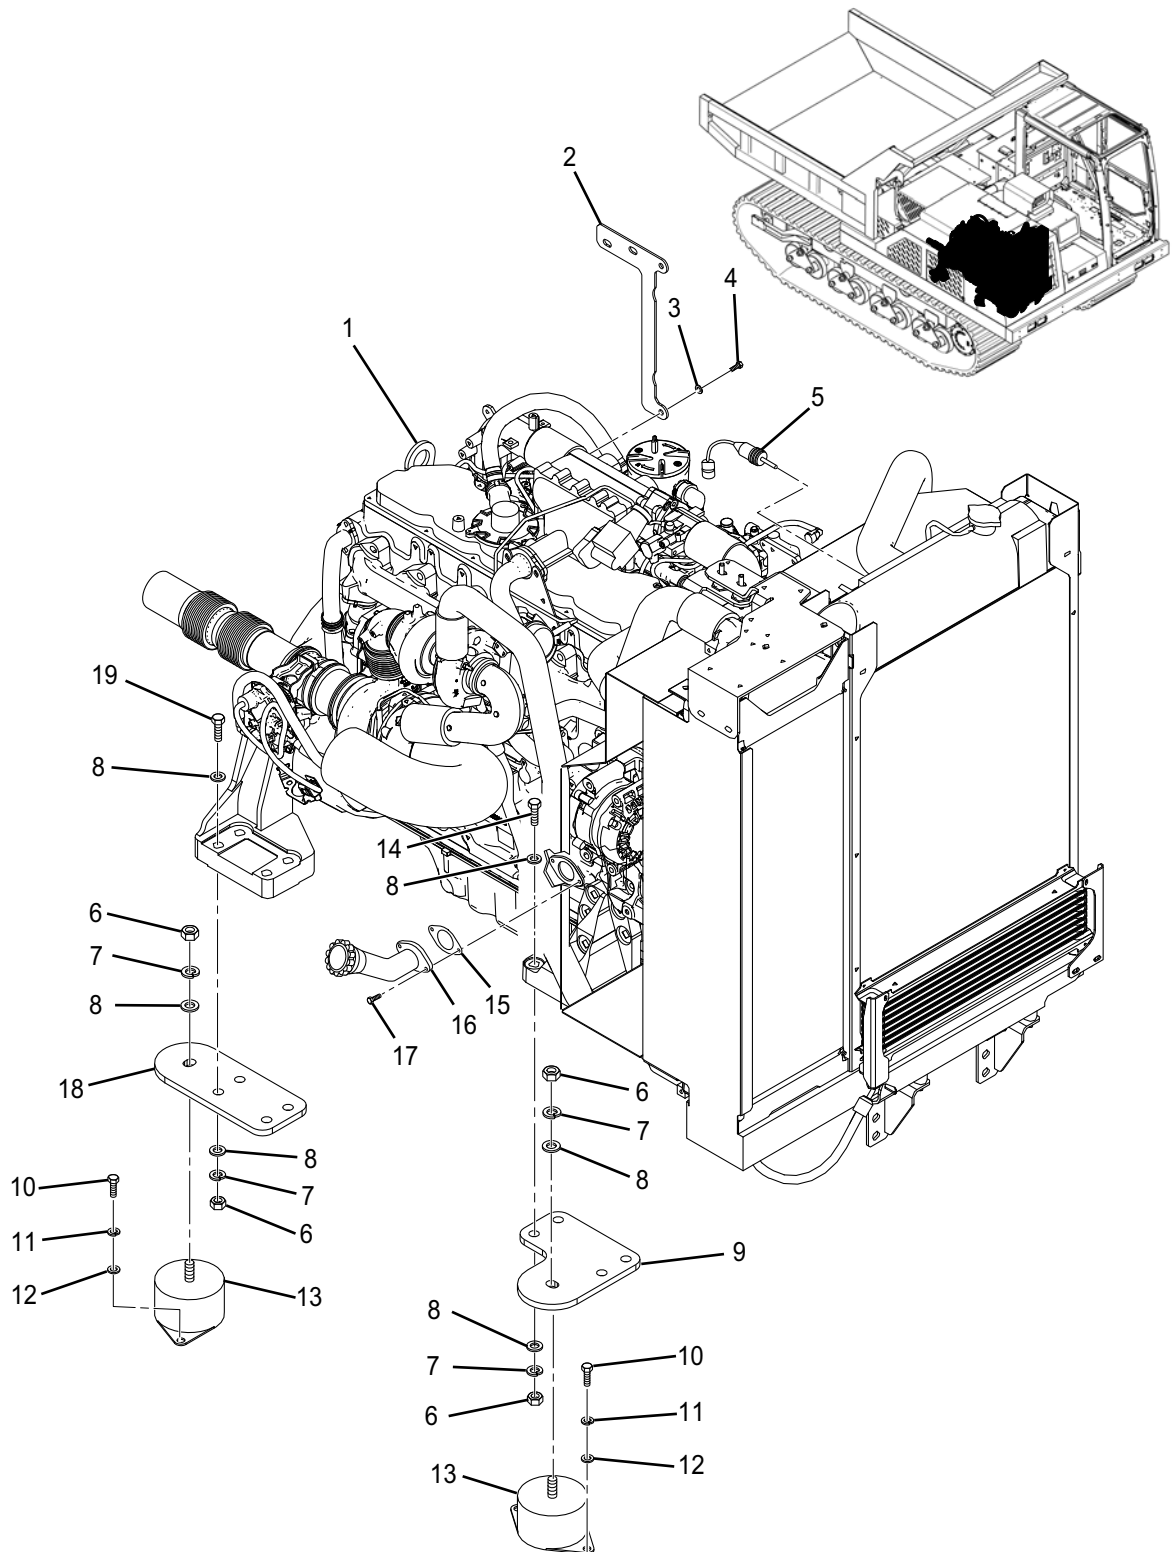


Refer to CAT manuals for engine and DEF breakdown information.

TABLE FOR FIGURE 01-01:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-04211-700	ENGINE CAT C7.1 MST2200VDR	1	
2	A-04311-222	ECM PLUG BRACKET	1	
3	278-5203	CAT WASHER	1	
4	6J-0456	CAT BOLT	1	
5	430-9449	WATER LEVEL SENSOR	1	
6	0-1200-31613	M16 NUT	20	
7	0-1100-31640	M16 LOCK WASHER	20	
8	0-1140-31645	M16 WASHER	36	
9	A-04311-257	MOTOR MOUNT PLATE, FRONT	2	
10	0-1000-31225	M12 X 25 HEX BOLT	8	
11	0-1100-31230	M12 LOCK WASHER	8	
12	0-1140-31232	M12 WASHER	8	
13	1-39110-1210	MOUNT, CUSHION	4	
14	0-1000-31670	M16 X 70 HEX BOLT	8	
15	278-0017	GASKET	1	
16	385-5363	OIL FILLER GROUP	1	
17	6I-0260	BOLT	2	
18	A-04311-238	MOTOR MOUNT PLATE, REAR	2	
19	0-1000-31680	M16 X 80 HEX BOLT	8	

FIGURE 01-02 HEATER HOSE

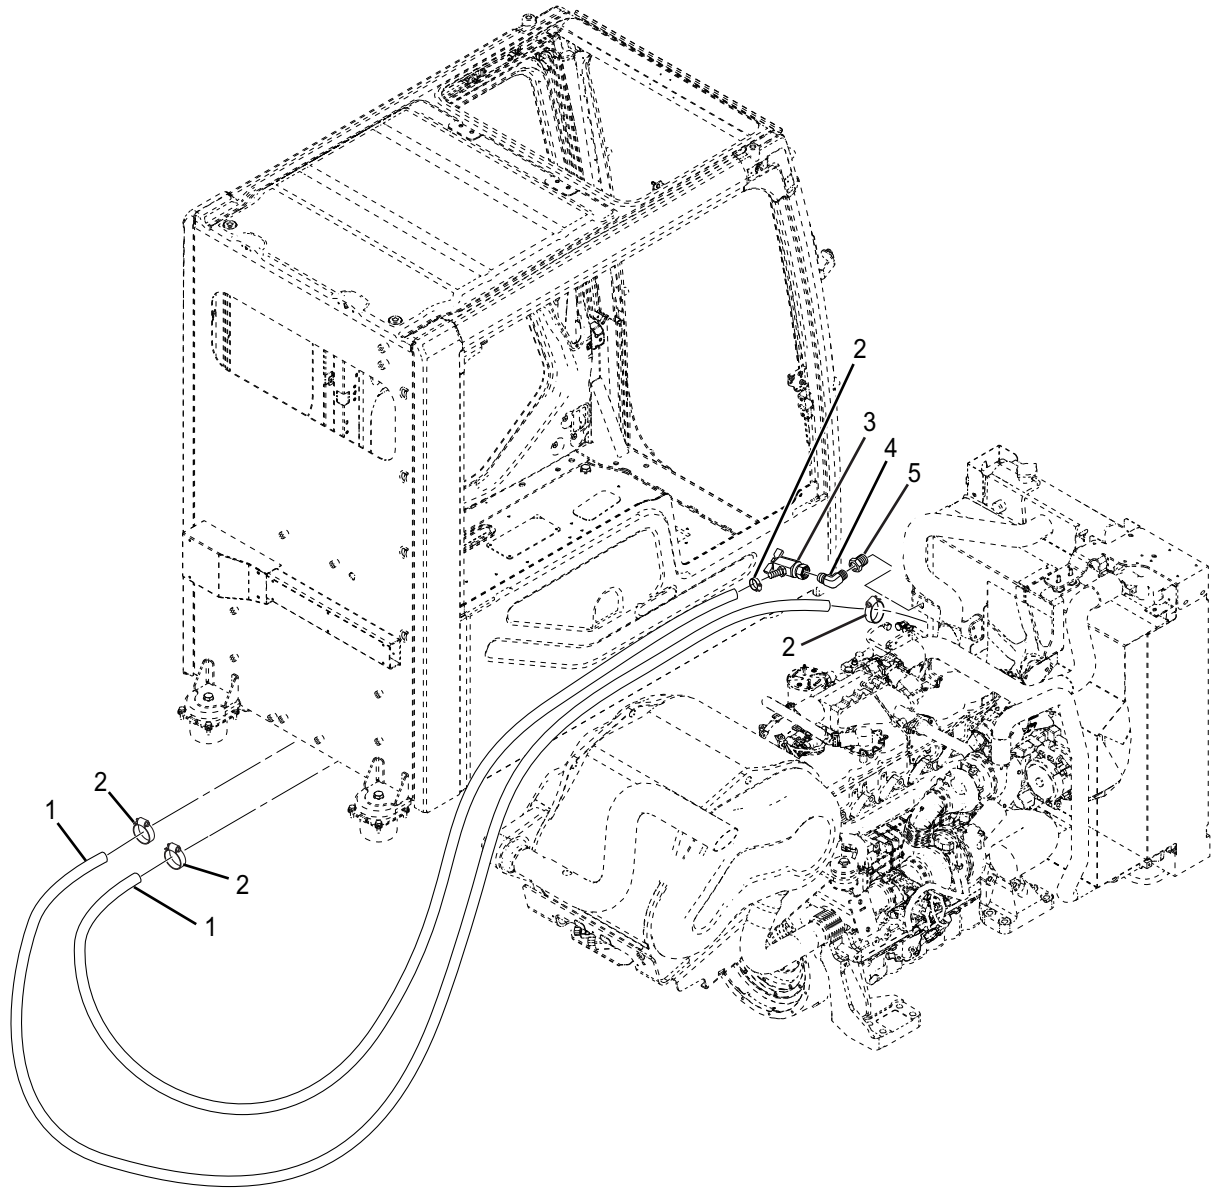


Refer to CAT manuals for engine and DEF breakdown information.

TABLE FOR FIGURE 01-02:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-04391-700	HEATER HOSE	2	
2	A-04291-704	CLAMP (SAE12)	4	
3	211273A	WATER VALVE	1	
4	5502-08-06	ELBOW	1	
5	4404-10-08	BEADED MALE CONNECTOR	1	

FIGURE 01-03 DEF TANK

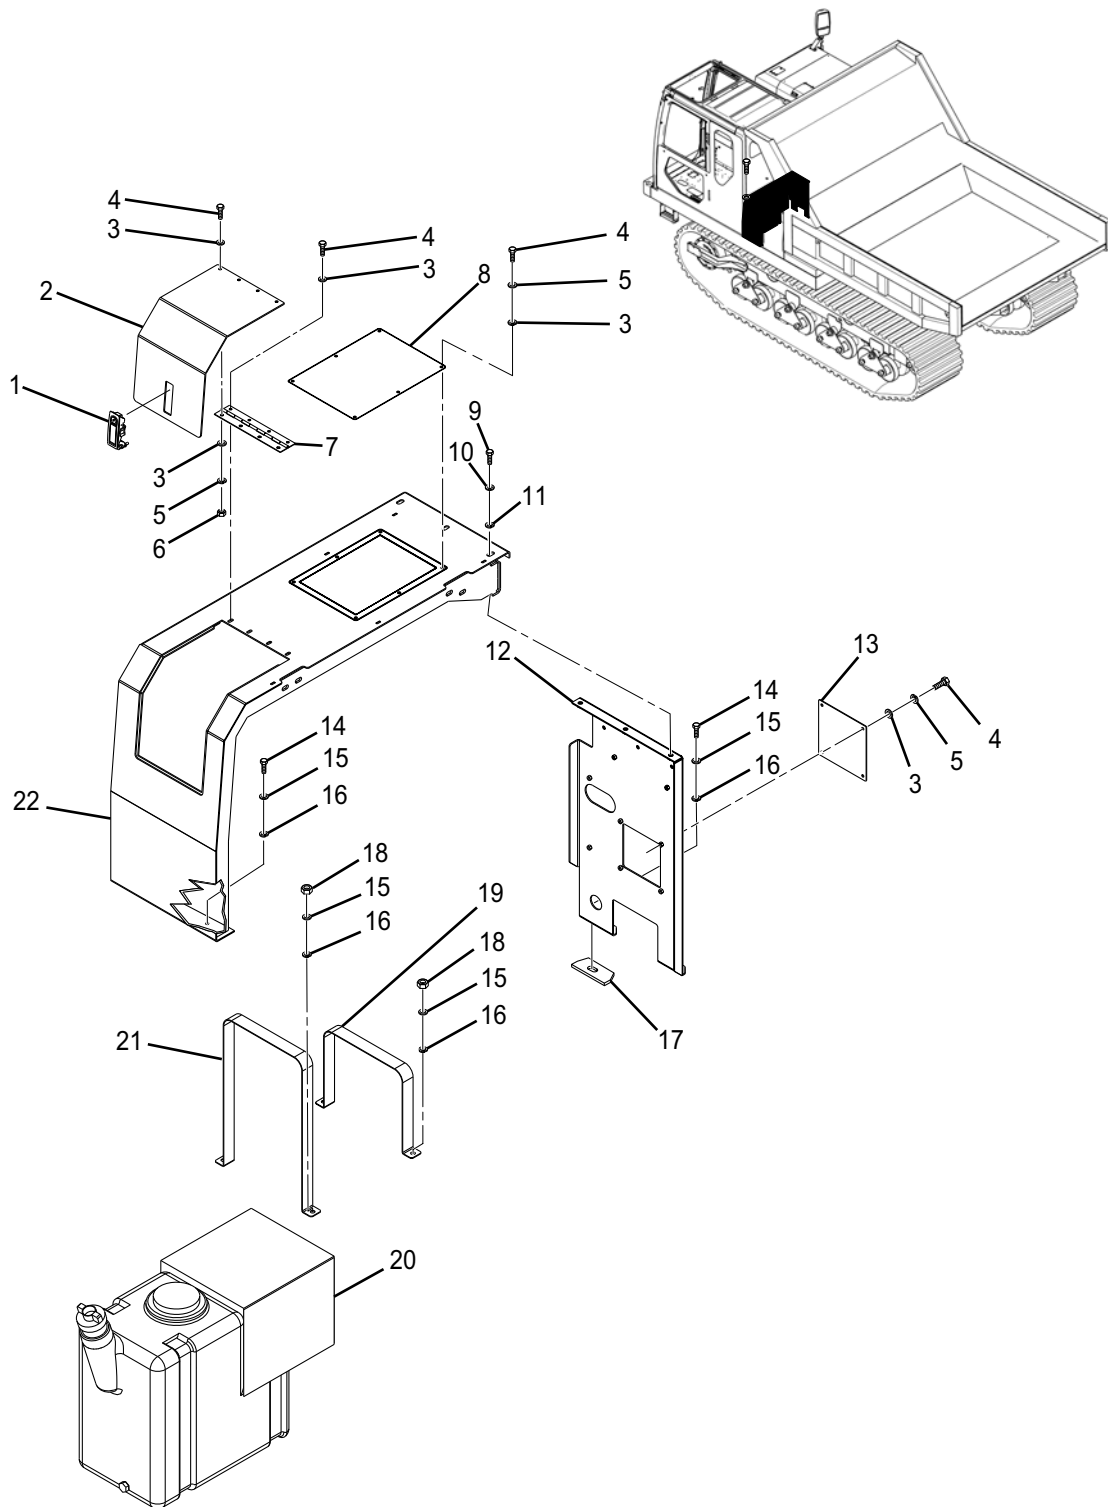


Refer to CAT manuals for engine and DEF breakdown information.

TABLE FOR FIGURE 01-03:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-04352-701	LATCH, DEF TANK	1	
2	A-04317-202	DOOR, DEF TANK	1	
3	0-1120-00616	M6 WASHER	26	
4	0-1000-00620	M6 X 20 HEX BOLT	18	
5	0-1100-00615	M6 LOCK WASHER	18	
6	0-1200-00605	M6 NUT	8	
7	A-04317-140	HINGE, DEF TANK DOOR	1	
8	A-04317-203	ACCESS PLATE, DEF TANK	1	
9	0-1000-00830	M8 X 30 HEX BOLT	3	
10	0-1100-00820	M8 LOCK WASHER	3	
11	0-1120-00816	M8 WASHER	3	
12	A-04317-210	REAR PLATE, DEF TANK	1	
13	A-04317-211	REAR ACCESS PLATE	1	
14	0-1000-01025	M10 X 25 HEX BOLT	4	
15	0-1100-01025	M10 LOCK WASHER	8	
16	0-1120-01020	M10 WASHER	8	
17	A-04317-212	FLANGE SHIM	1	
18	0-1200-01008	M10 NUT	4	
19	A-04317-265	STRAP, DEF TANK, SHORT	1	
20	389-2688	DEF TANK SYSTEM	1	
21	A-04317-264	STRAP, DEF TANK, TALL	1	
22	A-04317-139	DEF TANK COVER	1	

FIGURE 01-04 OIL COOLER COVER

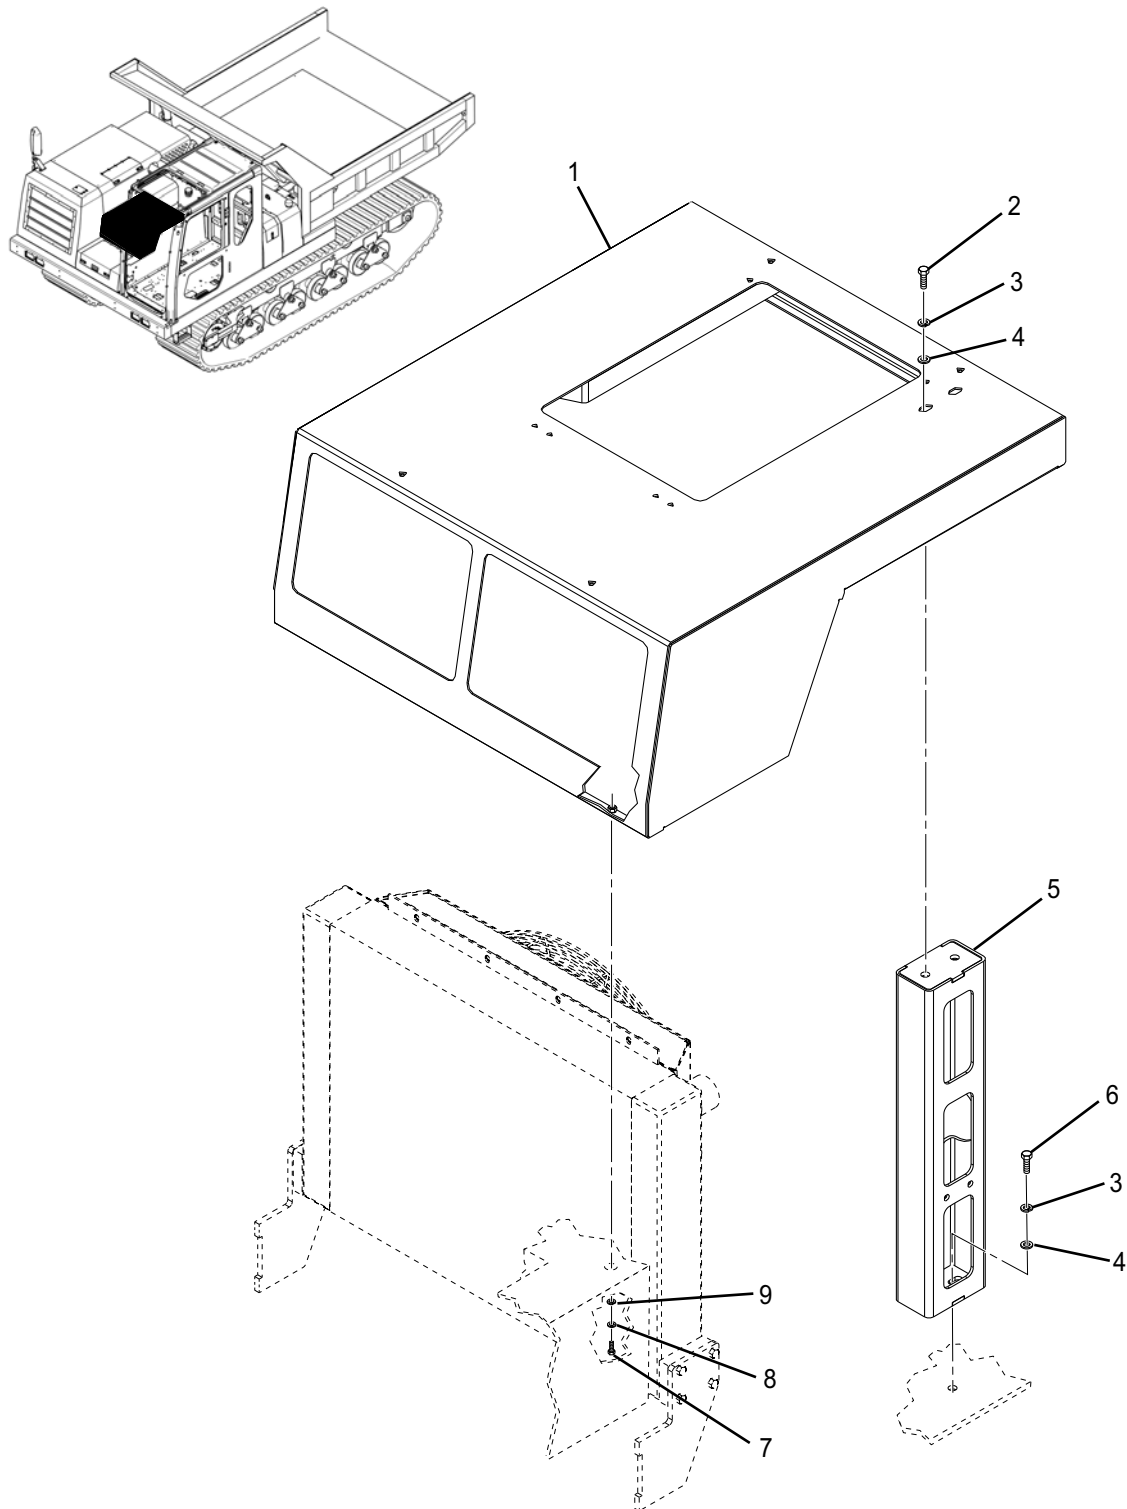


Refer to CAT manuals for engine and DEF breakdown information.

TABLE FOR FIGURE 01-04:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-04369-130	OIL COOLER COVER	1	
2	0-1000-01025	M10 X 25 HEX BOLT	2	
3	0-1100-01025	M10 LOCK WASHER	4	
4	0-1120-01020	M10 WASHER	4	
5	A-04369-131	SUPPORT, OIL COOLER COVER	1	
6	0-1000-01020	M10 X 20 HEX BOLT	2	
7	0-1000-00825	M8 x 25 HEX BOLT	3	
8	0-1100-00820	M8 LOCK WASHER	3	
9	0-1120-00816	M8 WASHER	3	

FIGURE 01-05 BATTERY COVER

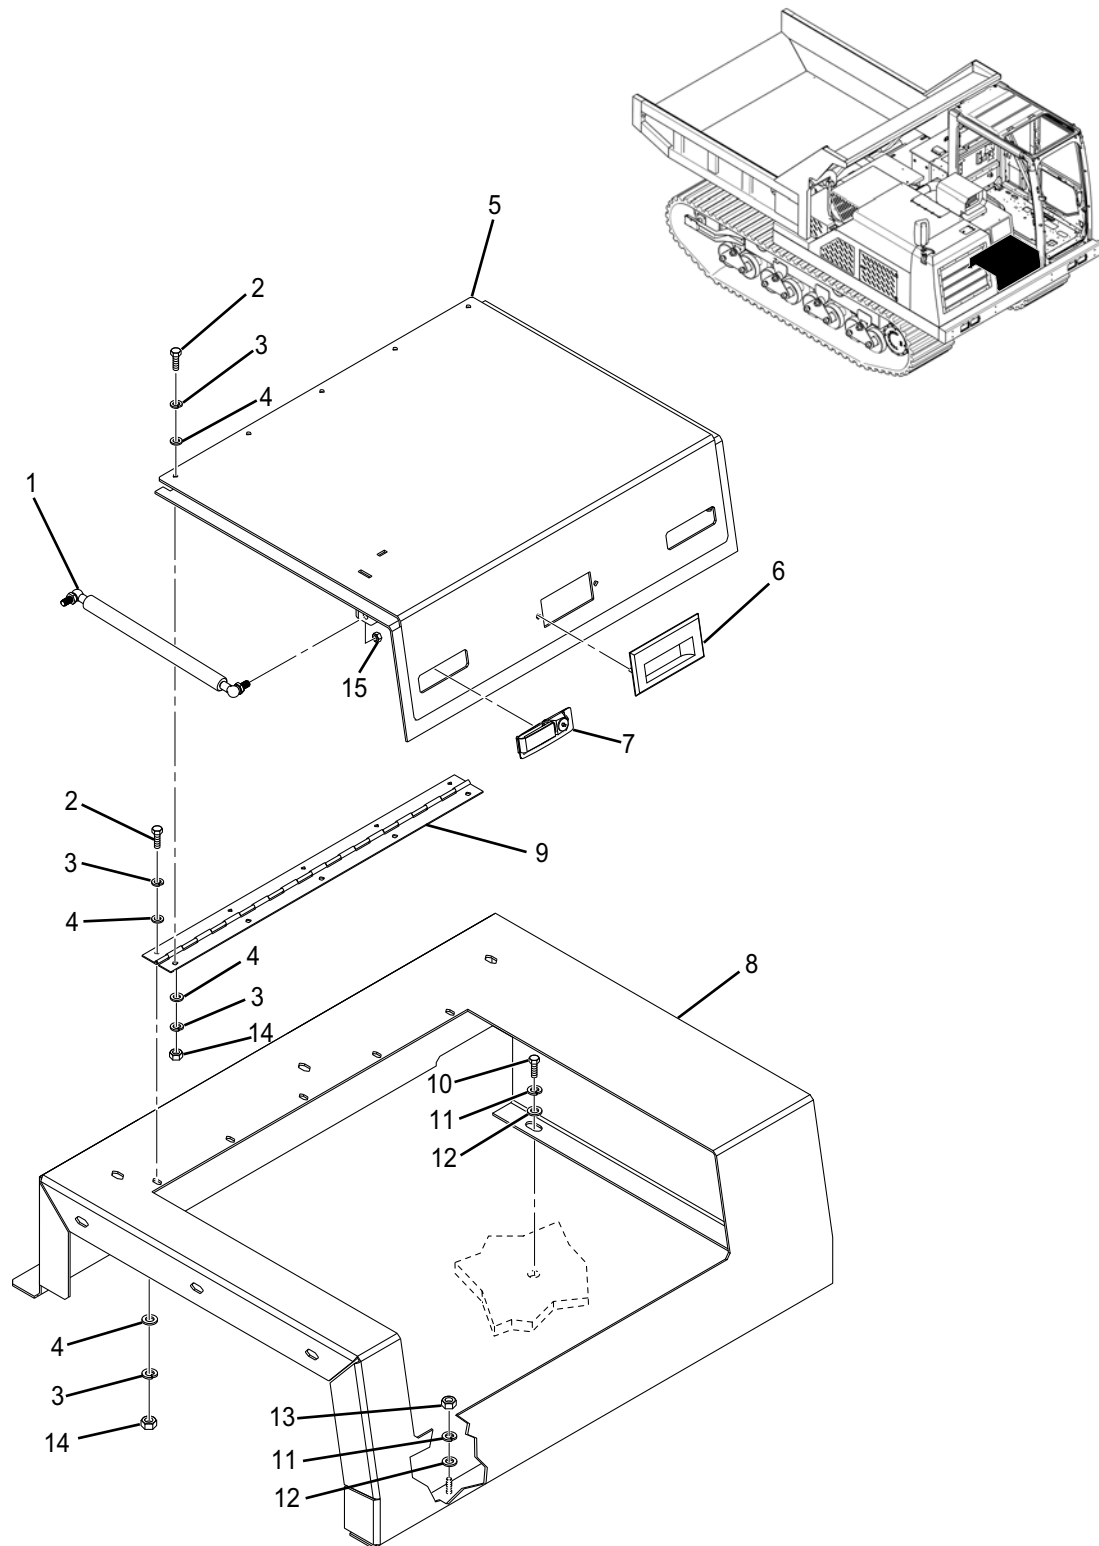


Refer to CAT manuals for engine and DEF breakdown information.

TABLE FOR FIGURE 01-05:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-04352-714	LIFT SUPPORT	1	
2	0-1000-00616	M6 X 16 HEX BOLT	10	
3	0-1100-00615	M6 LOCK WASHER	10	
4	0-1120-00616	M6 WASHER	20	
5	A-04352-273	DOOR	1	
6	A-04352-730	PULL HANDLE	1	
7	A-04352-701	LATCH	2	
8	A-04352-129	BATTERY BOX	1	
9	A-04352-130	HINGE, DOOR	1	
10	0-1000-01025	M10 X 25 HEX BOLT	4	
11	0-1100-01025	M10 LOCK WASHER	7	
12	0-1120-01020	M10 WASHER	7	
13	0-1200-01008	M10 NUT	3	
14	0-1200-00605	M6 NUT	10	
15	A-04299-801	5/16 NUT	2	

FIGURE 01-06 AIR INTAKE ASSEMBLY

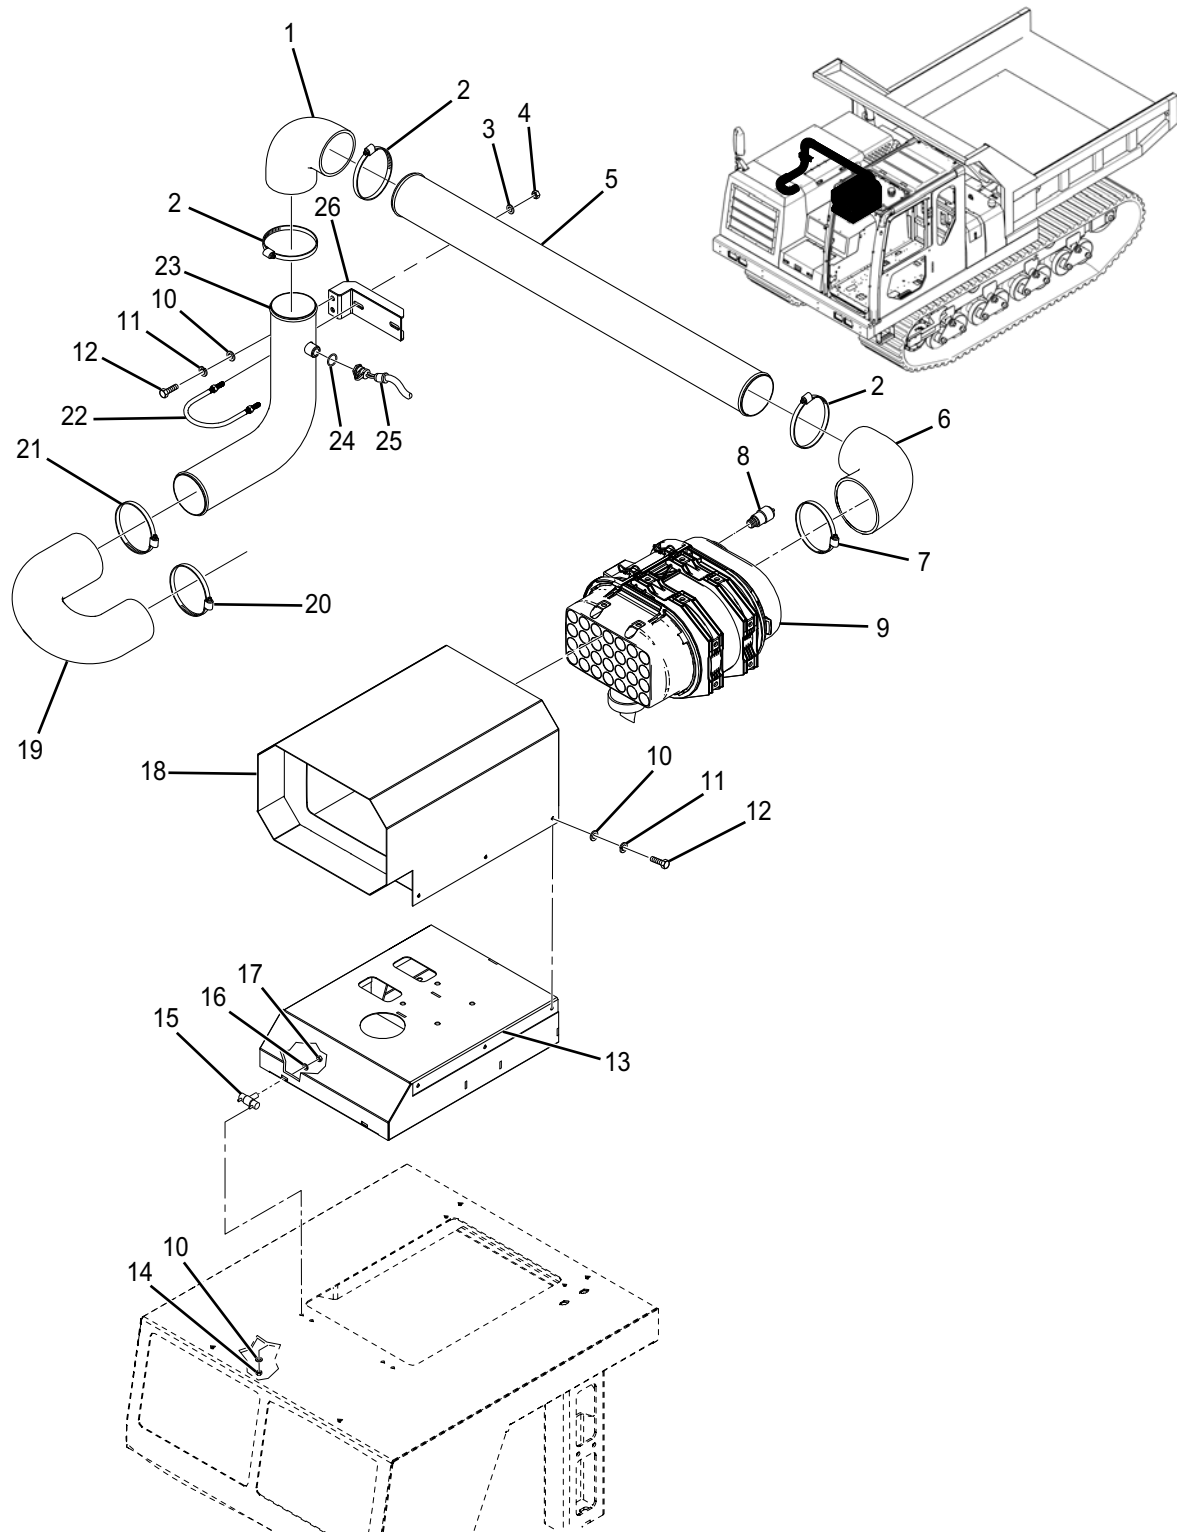


Refer to CAT manuals for engine and DEF breakdown information.

TABLE FOR FIGURE 01-06:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-04312-800	ELBOW, 90 DEGREE	1	
2	840-475	CLAMP (4-3/4)	3	
3	0-1100-01025	M10 LOCK WASHER	2	
4	A-08013-703	3/8-16 NUT	2	
5	A-04312-203	INTAKE PIPE	1	
6	A-04312-801	ELBOW, 90 DEGREE	1	
7	840-550	CLAMP	1	
8	A-04312-701	INDICATOR	1	
9	A-04312-700	AIR CLEANER	1	
10	0-1120-00816	M8 WASHER	12	
11	0-1100-00820	M8 LOCK WASHER	8	
12	0-1000-00820	M8 X 20 HEX BOLT	8	
13	A-04312-135	COVER, BREATHER BASE	1	
14	0-1200-00806	M8 NUT	4	
15	A-04352-703	HINGE, AIR SCOOP	2	
16	0-1120-01020	M10 WASHER	2	
17	0-1200-01008	M10 NUT	2	
18	A-04312-134	COVER, BREATHER TOP	1	
19	354-7383	U HOSE	1	
20	209-4588	CLAMP, E-INTAKE TURBO	1	
21	276-6740	CLAMP, E-INTAKE PIPE	1	
22	A-08013-702	U-BOLT	1	
23	A-04312-103	ELBOW, BREATHER	1	
24	228-7103	O-RING, AIR INTAKE TEMP SENSOR	1	
25	256-6454	SENSOR, AIR INTAKE TEMP	1	
26	A-04312-166	BRACKET, INTAKE	1	

FIGURE 01-07 FUEL LINES

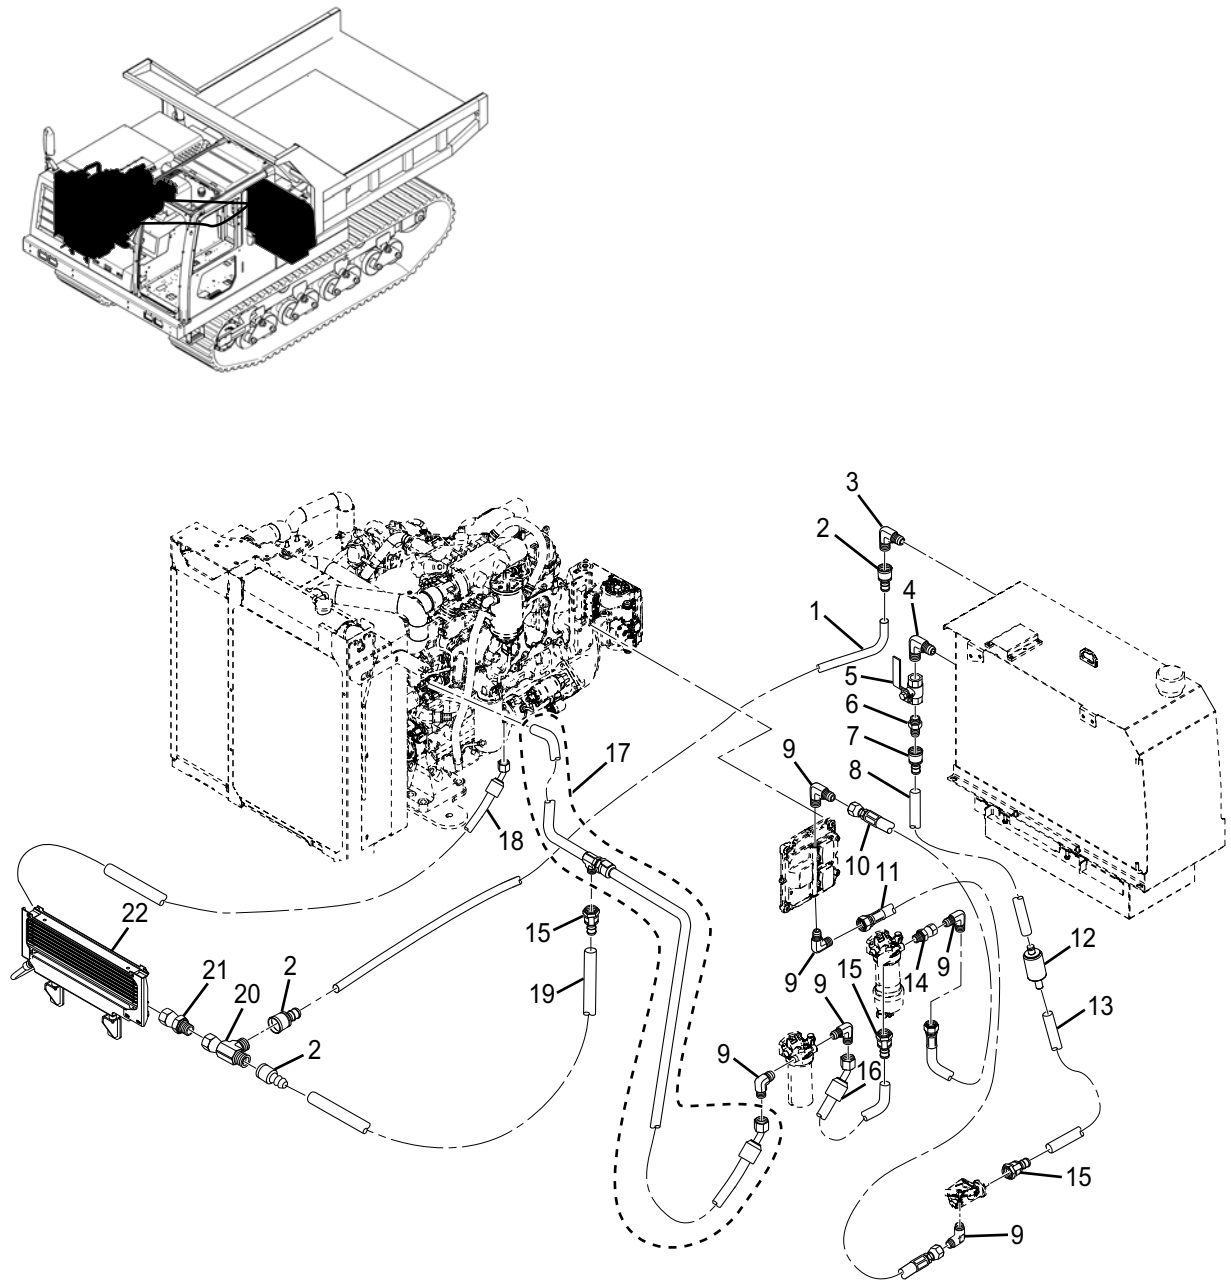

Refer to CAT manuals for engine and DEF breakdown information.

TABLE FOR FIGURE 01-07:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-04315-802	FUEL HOSE	1	
2	10006B-606	HOSE CONNECTOR	3	
3	2501-06-06	MALE ELBOW	1	
4	5500-06-06-FG	MALE PIPE ELBOW	1	
5	2BLV2006F	FUEL VALVE	1	
6	2404-08-06	MALE CONNECTOR	1	
7	10008B-608	HOSE CONNECTOR	1	
8	A-04315-801	FUEL HOSE	1	
9	A-04315-829	HOSE COUPLER ELBOW	6	
10	A-04315-805	FUEL HOSE	1	
11	A-04315-804	FUEL HOSE	1	
12	384-8512	INLINE FUEL FILTER	1	
13	A-04315-803	FUEL HOSE	1	
14	A-04315-850	FITTING	1	
15	A-04315-820	HOSE COUPLER	3	
16	A-04315-806	FUEL HOSE	1	
17	383-3479	HOSE WITH TEE	1	
18	A-04315-810	FUEL HOSE	1	
19	A-04315-809	FUEL HOSE	1	
20	6602-06-06-06	SWIVEL NUT RUN TEE	1	
21	FS6504-06-06	FITTING	1	
22	363-2712	FUEL COOLER	1	

THIS PAGE INTENTIONALLY LEFT BLANK

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 02-01 FRAME AND PLATFORM

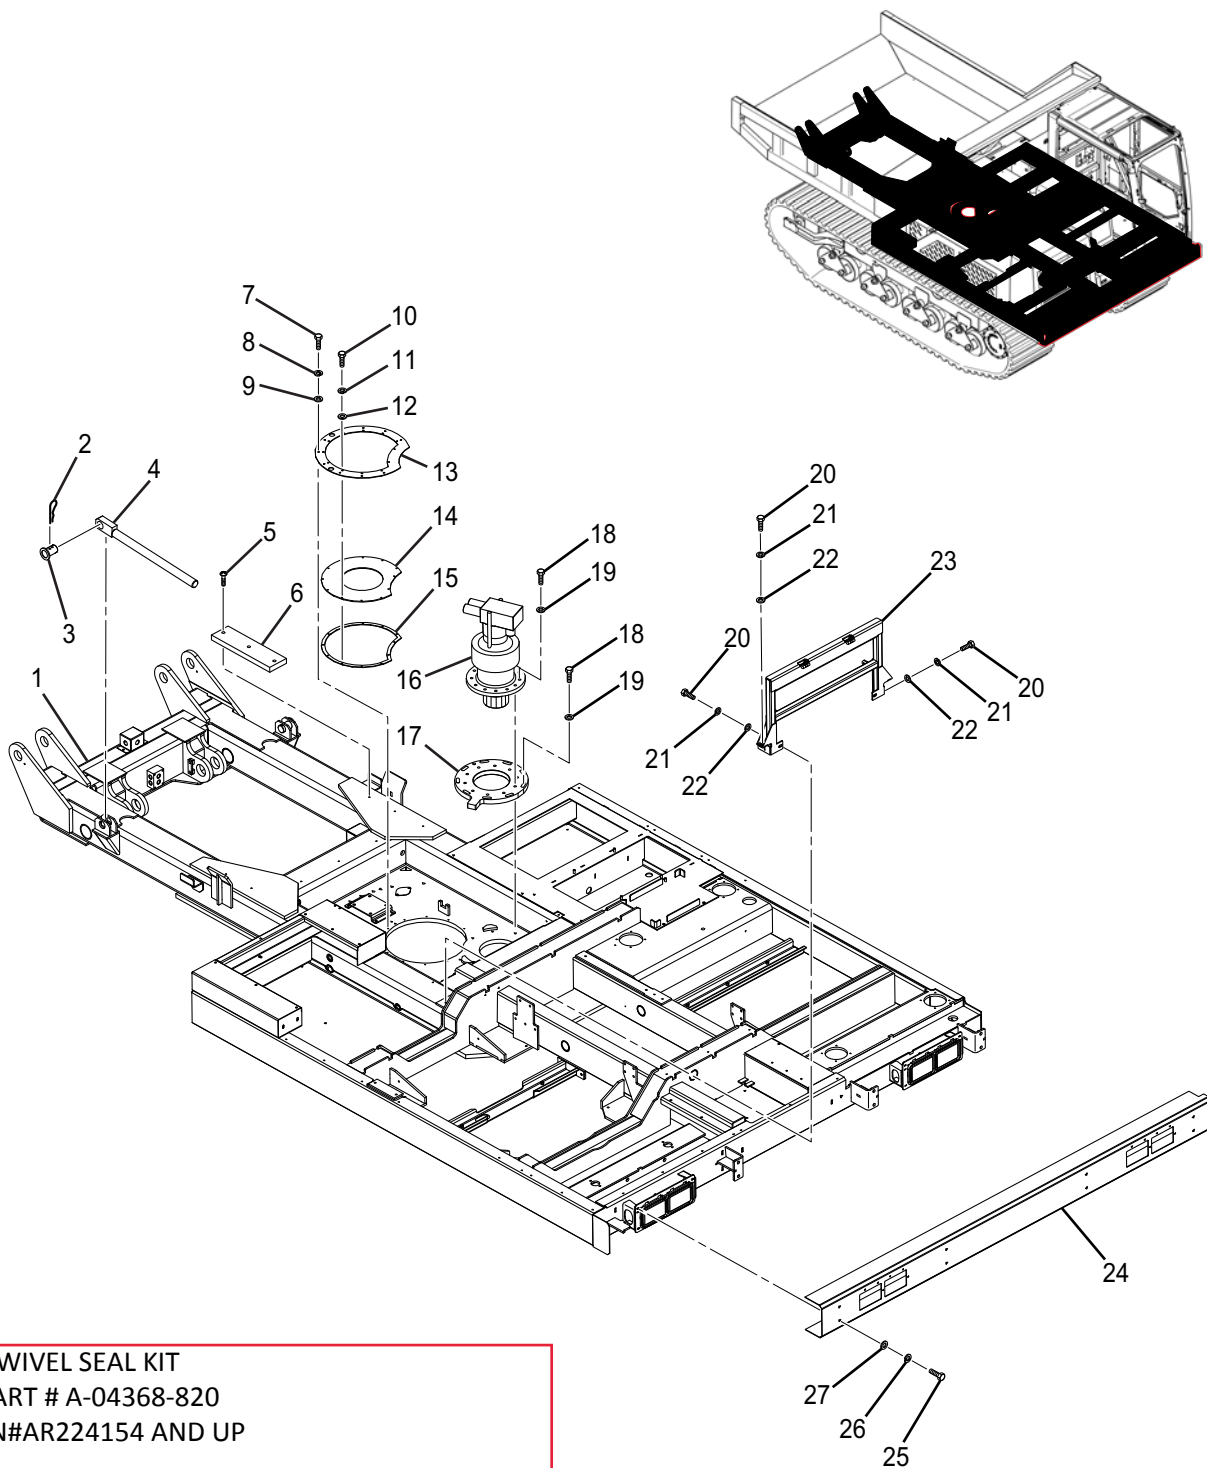


TABLE FOR FIGURE 02-01:

INDEX	PART NUMBER	DESCRIPTION	QTY	SERIAL NO.
1	A-04351-100	UPPER FRAME	1	
2	A-04371-223	COTTER PIN	2	
3	A-04371-222	PIN, SAFETY BAR PIN	2	
4	A-04371-110	SAFETY BAR	2	
5	0-1020-31030	M10 X 30 SOCKET HEAD BOLT	6	
6	A-04371-208	CUSHION BLOCK	2	
7	0-1000-00820	M8 X 20 HEX BOLT	10	
8	0-1100-00820	M8 LOCK WASHER	10	
9	0-1120-00816	M8 WASHER	10	
10	0-1000-00620	M6 X 20 HEX BOLT	10	
11	0-1100-00615	M6 LOCK WASHER	10	
12	0-1120-00616	M6 WASHER	10	
13	A-04368-201	SEAL FLANGE, SWIVEL	1	
14	A-04368-710	GASKET	1	
15	A-04368-202	SEAL, PLATE	1	
16	1-68630-0010	SWING MOTOR	1	
17	A-04368-254	ECCENTRIC SWING PLATE	1	
18	0-1000-31650	M16 X 50 HEX BOLT	18	
19	0-1140-31645	M16 WASHER	18	
20	0-1000-01025	M10 X 25 HEX BOLT	6	
21	0-1100-01025	M10 LOCK WASHER	6	
22	0-1120-01020	M10 WASHER	6	
23	A-04352-183	FRAME, CENTER COVER	1	
24	A-04351-120	BUMPER	1	
25	0-1000-01230	M12 X 30 HEX BOLT	8	
26	0-1100-01230	M12 LOCK WASHER	8	
27	0-1120-01223	M12 WASHER	8	

FIGURE 02-02 RADIATOR COVER, SIDE WALL, AND MIRROR

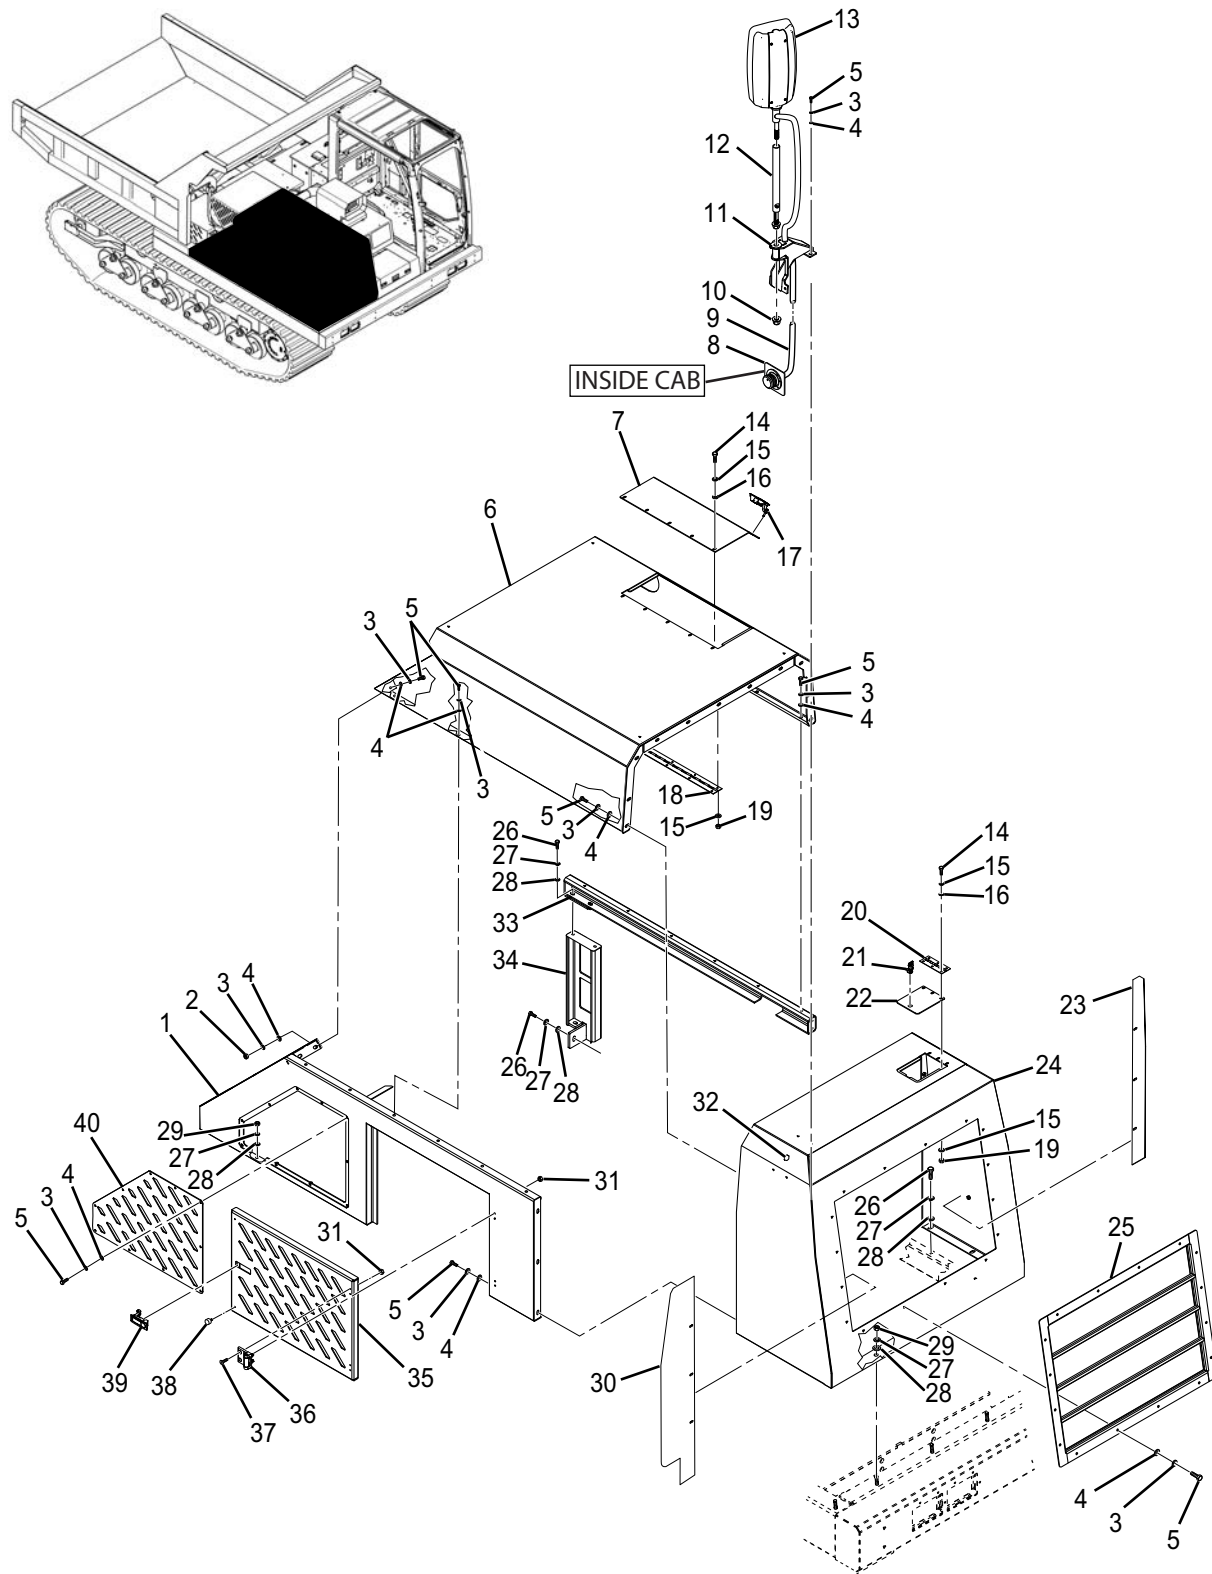


TABLE FOR FIGURE 02-02:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-04352-133	COVER, ENGINE SIDE	1	
2	0-1200-00806	M8 NUT	2	
3	0-1100-00820	M8 LOCK WASHER	57	
4	0-1120-00816	M8 WASHER	57	
5	0-1000-00825	M8 x 25 HEX BOLT	55	
6	A-04352-132	TOP COVER	1	
7	A-04352-306	DOOR, HOOD	1	
8	A-04225-701	MIRROR REMOTE SWITCH	1	
9	A-04225-702	HARNESS, MIRROR	1	
10	A-04352-384	LOCKNUT, FLANGED	1	
11	A-04252-118	BRACKET, MIRROR	1	
12	A-04352-143	MIRROR STEM STR	1	
13	A-04225-700	MIRROR, DUAL LENS	1	
14	0-1000-00610	M6 X 10 HEX BOLT	16	
15	0-1100-00615	M6 LOCK WASHER	32	
16	0-1120-00616	M6 WASHER	16	
17	A-04352-701	LATCH	2	
18	A-04352-131	HINGE, ENGINE DOOR	1	
19	0-1200-00605	M6 NUT	16	
20	A-04352-225	HINGE, RADIATOR DOOR	1	
21	A-04252-754	KNOB, WING	1	
22	A-04352-223	COVER, RADIATOR CAP	1	
23	A-04352-227	AIR DAM1	1	
24	A-04352-125	SHROUD, ENGINE	1	
25	A-04352-126	RADIATOR GRILLE	1	
26	0-1000-01025	M10 X 25 HEX BOLT	6	
27	0-1100-01025	M10 LOCK WASHER	19	

TABLE FOR FIGURE 02-02: (Cont.)

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
28	0-1120-01020	M10 WASHER	19	
29	0-1200-01008	M10 NUT	13	
30	A-04352-228	AIR DAM2	1	
31	0-1260-00506	M5 FLANGE NUT	8	
32	A-04252-701	GROMMET	1	
33	A-04352-127	SIDE RAIL	1	
34	A-04352-128	SUPPORT	1	
35	A-04352-312	VDR DOOR (ENGINE SIDE)	1	
36	A-04352-710	OFFSET HINGE	2	
37	A-04399-702	FLAT HEAD SCREW	8	
38	A-04352-740	THREADED BUMPER	2	
39	A-04252-702	LATCH	2	
40	A-04352-313	COVER, PERFORATED	1	

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 02-03 VDR EXHAUST AND COVER

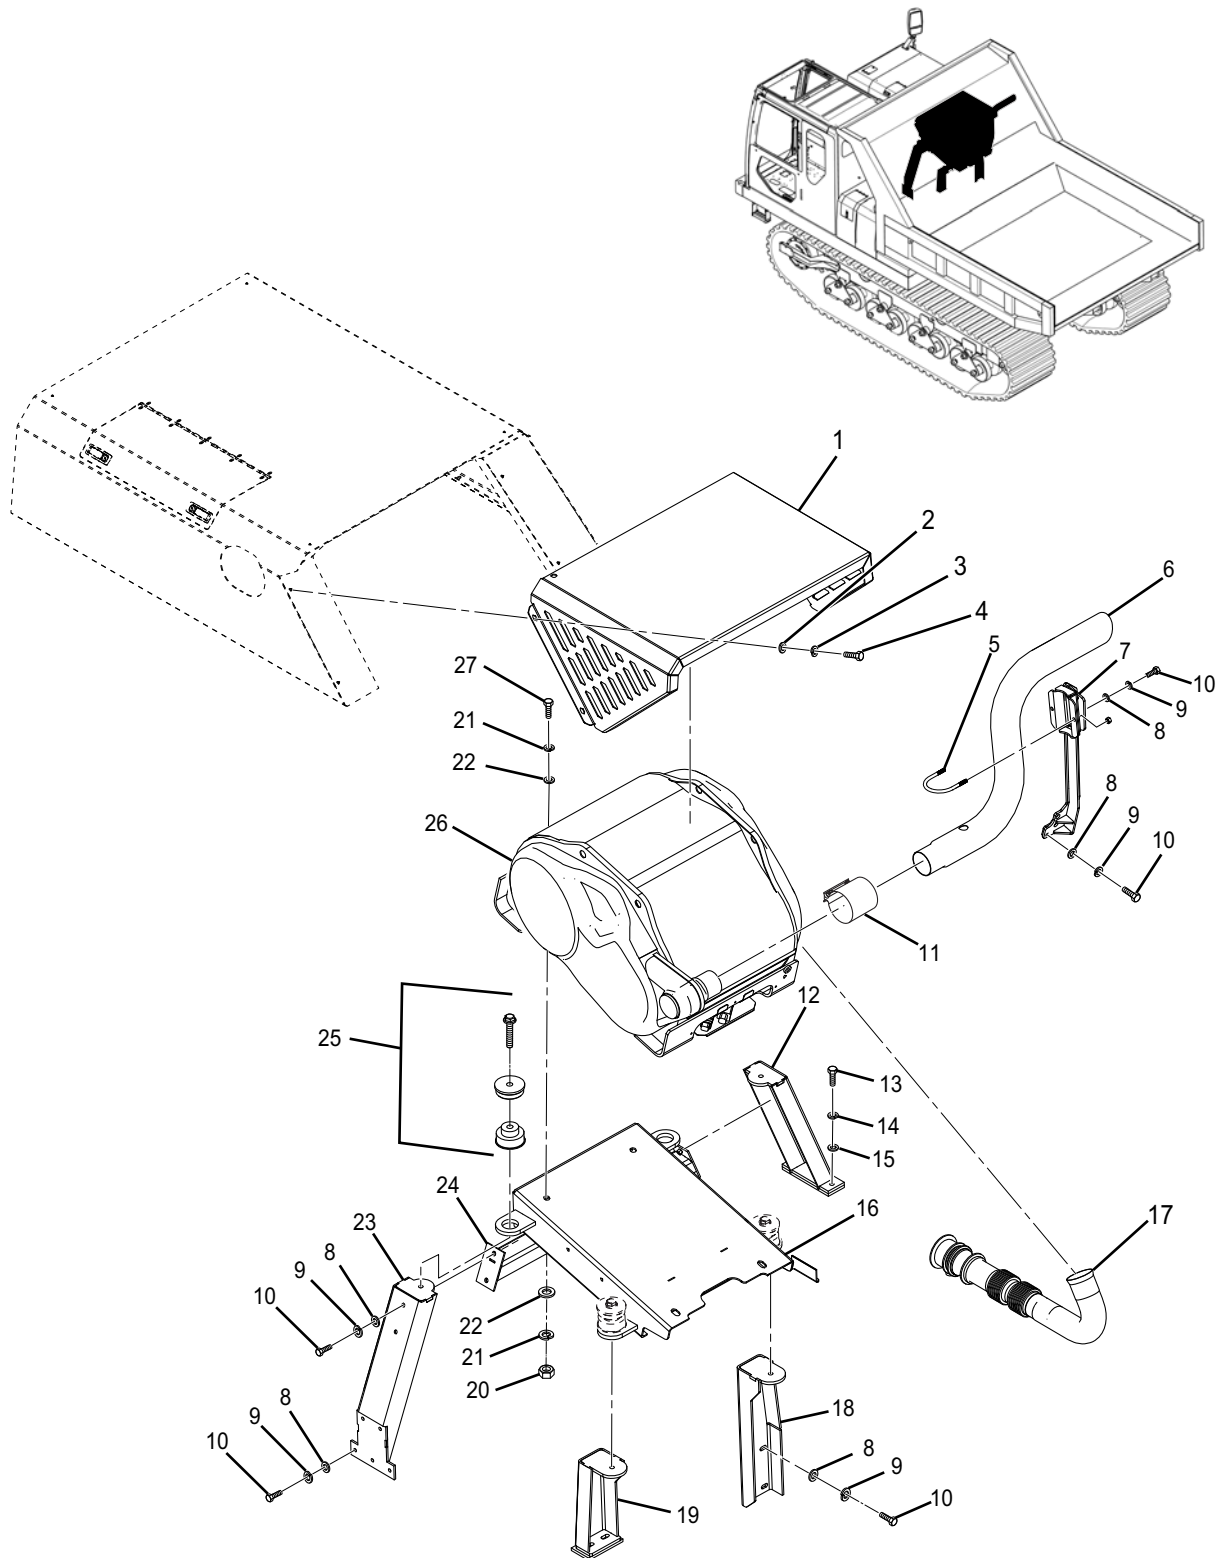


TABLE FOR FIGURE 02-03:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-04313-232	COVER, AFTER TREATMENT	1	
2	0-1120-00816	M8 WASHER	4	
3	0-1100-00820	M8 LOCK WASHER	4	
4	0-1000-00825	M8 X 25 HEX BOLT	4	
5	A-04313-800	U-BOLT WITH NUTS	1	
6	A-04313-104	PIPE, EXHAUST	1	
7	A-04313-002	BRACKET, EXHAUST MOUNT	1	
8	0-1120-01020	M10 WASHER	16	
9	0-1100-01025	M10 LOCK WASHER	16	
10	0-1000-01025	M10 X 25 HEX BOLT	16	
11	A-04213-701	CLAMP, EXHAUST	1	
12	A-04313-192	SUPPORT, FRONT RIGHT	1	
13	0-1000-31225	M12 X 25 HEX BOLT	4	
14	0-1100-01230	M12 LOCK WASHER	4	
15	0-1120-01223	M12 WASHER	4	
16	A-04313-191	PLATE, AFTER TREATMENT	1	
17	A-04313-112	AFTER TREATMENT CONNECTION PIPE	1	
18	A-04313-194	SUPPORT, REAR RIGHT	1	
19	A-04313-195	SUPPORT, REAR LEFT	1	
20	0-1200-31613	M16 NUT	4	
21	0-1100-31640	M16 LOCK WASHER	8	
22	0-1140-31645	M16 WASHER	8	
23	A-04313-193	SUPPORT, FRONT LEFT	1	
24	A-04313-196	STIFFENER, HORIZONTAL	1	
25	341-3348	MOUNT, AFTER TREATMENT	4	
26	454-8385	AFTER TREATMENT SYSTEM	1	
27	0-1000-01630	M16 X 30 HEX BOLT	4	

FIGURE 02-04 FUEL TANK CAP ASSEMBLY

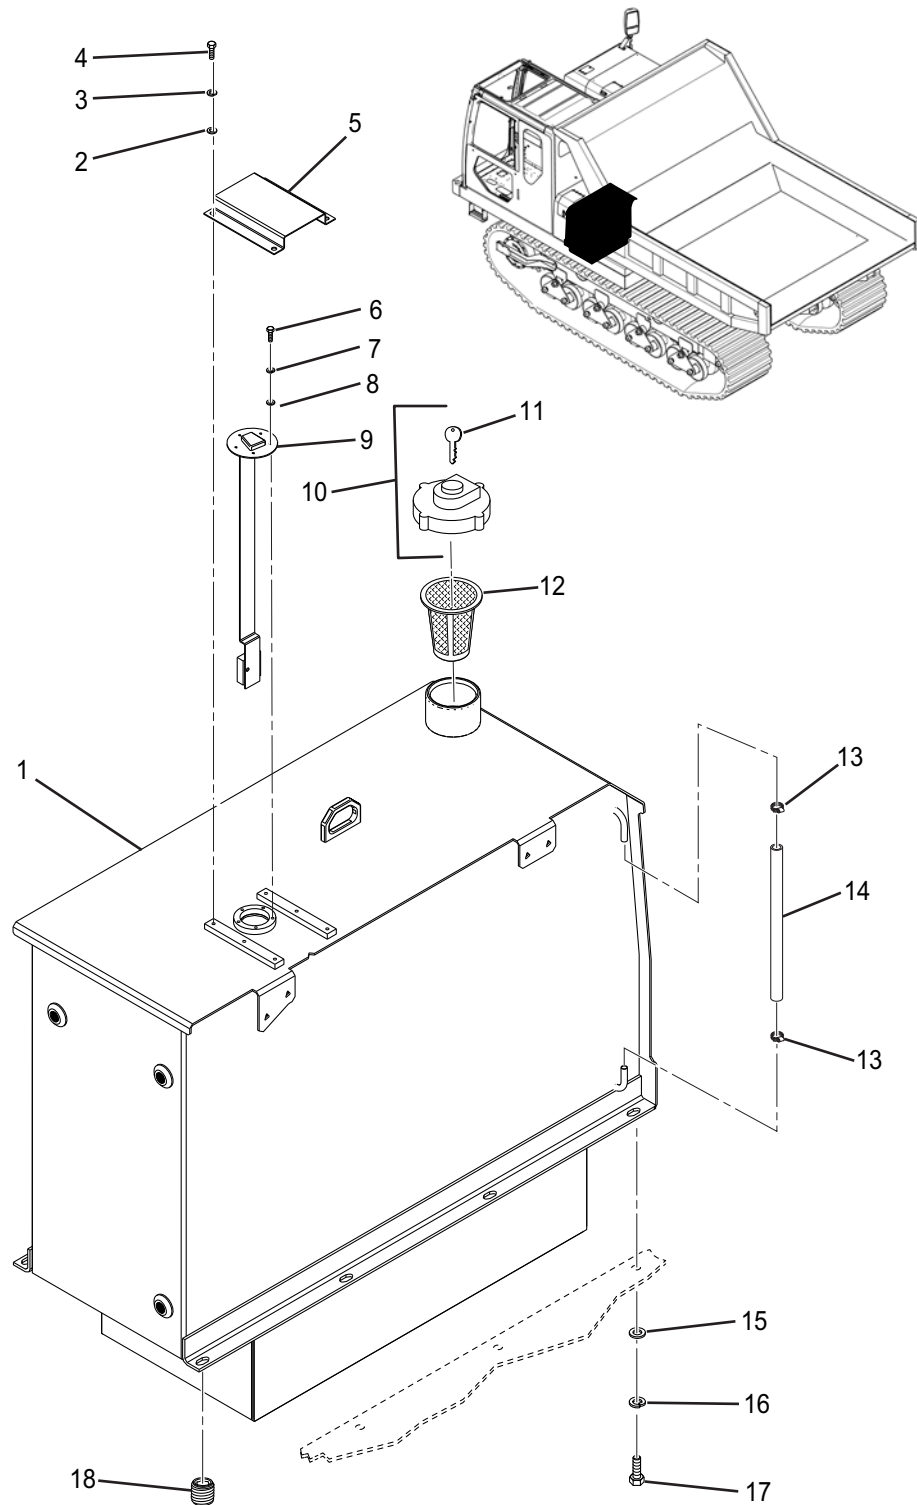


TABLE FOR FIGURE 02-04:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-04315-140	TANK, FUEL	1	
2	0-1120-00616	M6 WASHER	6	
3	0-1100-00615	M6 LOCK WASHER	6	
4	0-1000-00610	M6 X 10 HEX BOLT	6	
5	A-04215-220	COVER, SENDING UNIT	1	
6	0-1000-00512	M5 X 12 HEX BOLT	5	
7	0-1100-00513	M5 LOCK WASHER	5	
8	0-1120-00510	M5 WASHER	5	
9	1-68150-0020	FUEL LEVEL SENSOR	1	
10	1-51150-1200	FUEL TANK CAP ASSEMBLY	1	
11	1-51150-1180	•KEY	1	
12	1-51150-1130	•STRAINER	1	
13	A-04215-706	CLAMP	2	
14	A-04215-705	TUBE, FUEL LEVEL	1	
15	0-1120-01020	M10 WASHER	8	
16	0-1100-01025	M10 LOCK WASHER	8	
17	0-1000-01025	M10 X 25 HEX BOLT	8	
18	5406-HP-08	DRAIN PLUG	1	

FIGURE 02-05 TOOL BOX AND REAR LOWER COVERS

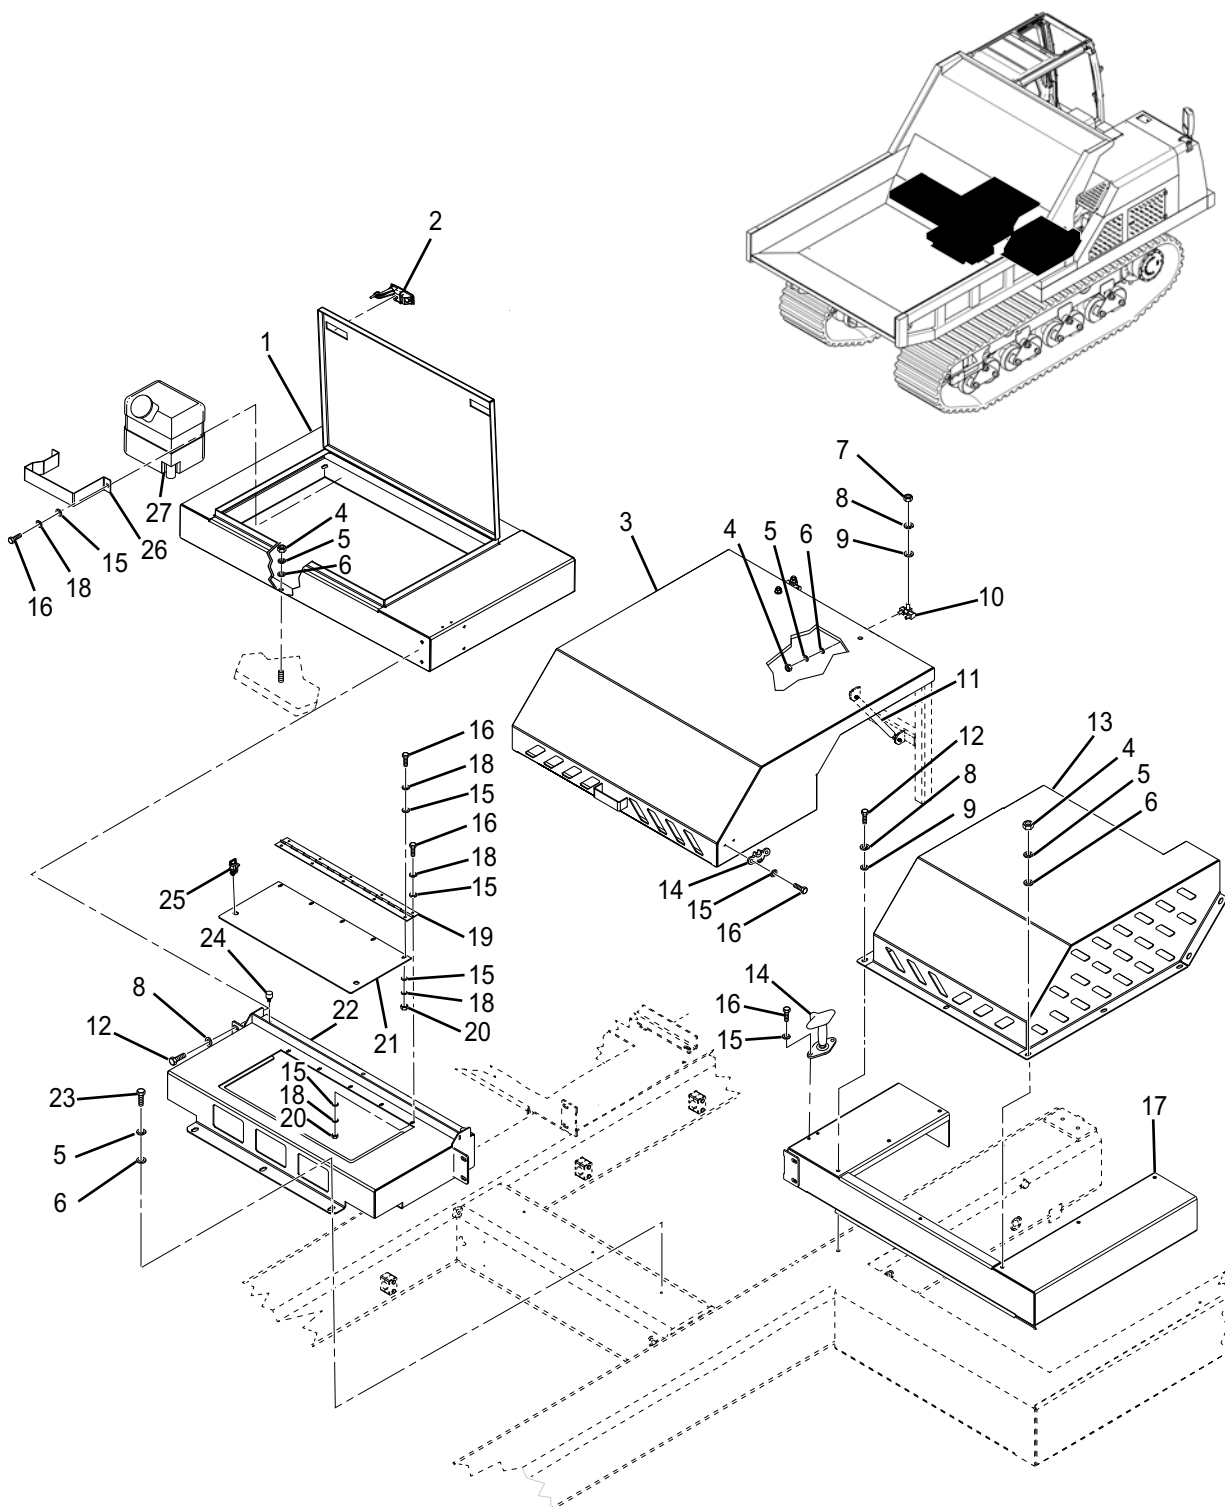


TABLE FOR FIGURE 02-05:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-04352-113	TOOL BOX	1	
2	A-04252-702	LATCH	2	
3	A-04352-138	CENTER COVER	1	
4	0-1200-01008	M10 NUT	15	
5	0-1100-01025	M10 LOCK WASHER	17	
6	0-1120-01020	M10 WASHER	17	
7	0-1200-00806	M8 NUT	2	
8	0-1100-00820	M8 LOCK WASHER	15	
9	0-1120-00816	M8 WASHER	15	
10	A-04352-703	HINGE, HOOD	2	
11	A-04352-713	LIFT SUPPORT	2	
12	0-1000-00825	M8 X 25 HEX BOLT	13	
13	A-04361-135	COVER, PUMP	1	
14	A-04352-731	LATCH, SPRING	2	
15	0-1120-00616	M6 WASHER	30	
16	0-1000-00610	M6 X 10 HEX BOLT	20	
17	A-04361-136	PUMP COVER FRAME	1	
18	0-1100-00615	M6 LOCK WASHER	22	
19	A-04352-139	HINGE	1	
20	0-1200-00605	M6 NUT	10	
21	A-04352-347	COVER, CENTER	1	
22	A-04352-137	ENCLOSURE, HAND CONTROL	1	
23	0-1000-01025	M10 X 25 HEX BOLT	17	
24	A-04352-741	LARGE RUBBER BUMPER	3	
25	A-04252-754	KNOB, WING	2	
26	A-04253-701	BRACKET (WASHER TANK)	1	
27	176-1931	WASHER TANK	1	

TABLE FOR FIGURE 02-06:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-04366-202	LID, TANK	1	02-06
2	1-11660-1160	CAP	1	02-06
3	1-11660-1170	STRAINER	1	02-06
4	1-11660-1220	BOLT	3	02-06
5	1-11660-1140	BREATHER	1	02-06
6	1-11660-1150	GASKET	1	02-06
7	A-04366-800	GASKET	1	02-06
8	0-1000-01220	M12 X 20 HEX BOLT	4	02-06
9	0-1100-01230	M12 LOCK WASHER	4	02-06
10	0-1120-01223	M12 WASHER	4	02-06
11	A-04366-116	BRACKET, HYDRAULIC FILTER	1	02-06
12	0-1120-01020	M10 WASHER	4	02-06
13	0-1100-01025	M10 LOCK WASHER	4	02-06
14	0-1000-01020	M10 X 20 HEX BOLT	4	02-06
15	A-04266-705	MAGNET	1	02-06
16	1-19660-1231	FILTER, SUCTION, LARGE	2	02-06
17	1-11660-1231	FILTER, SUCTION, SMALL	1	02-06
18	5406-HP-08	DRAIN PLUG	1	02-06
19	A-04225-708	HYDRAULIC OIL TEMP SENSOR	1	02-06
20	A-04266-700	GAUGE ASSEMBLY, OIL LEVEL	1	02-06
21	A-04266-721	•BOLT, BANJO	2	02-06
22	A-04266-720	•GAUGE, OIL LEVEL	1	02-06
23	A-04266-723	•GASKET	2	02-06
24	A-04366-115	TANK, HYDRAULIC	1	02-06
25	0-1120-00816	M8 WASHER	22	02-06
26	0-1100-00820	M8 LOCK WASHER	22	02-06
27	0-1050-00825	M8 X 25 FLANGE BOLT	22	02-06

FIGURE 02-07 LOWER FRAME

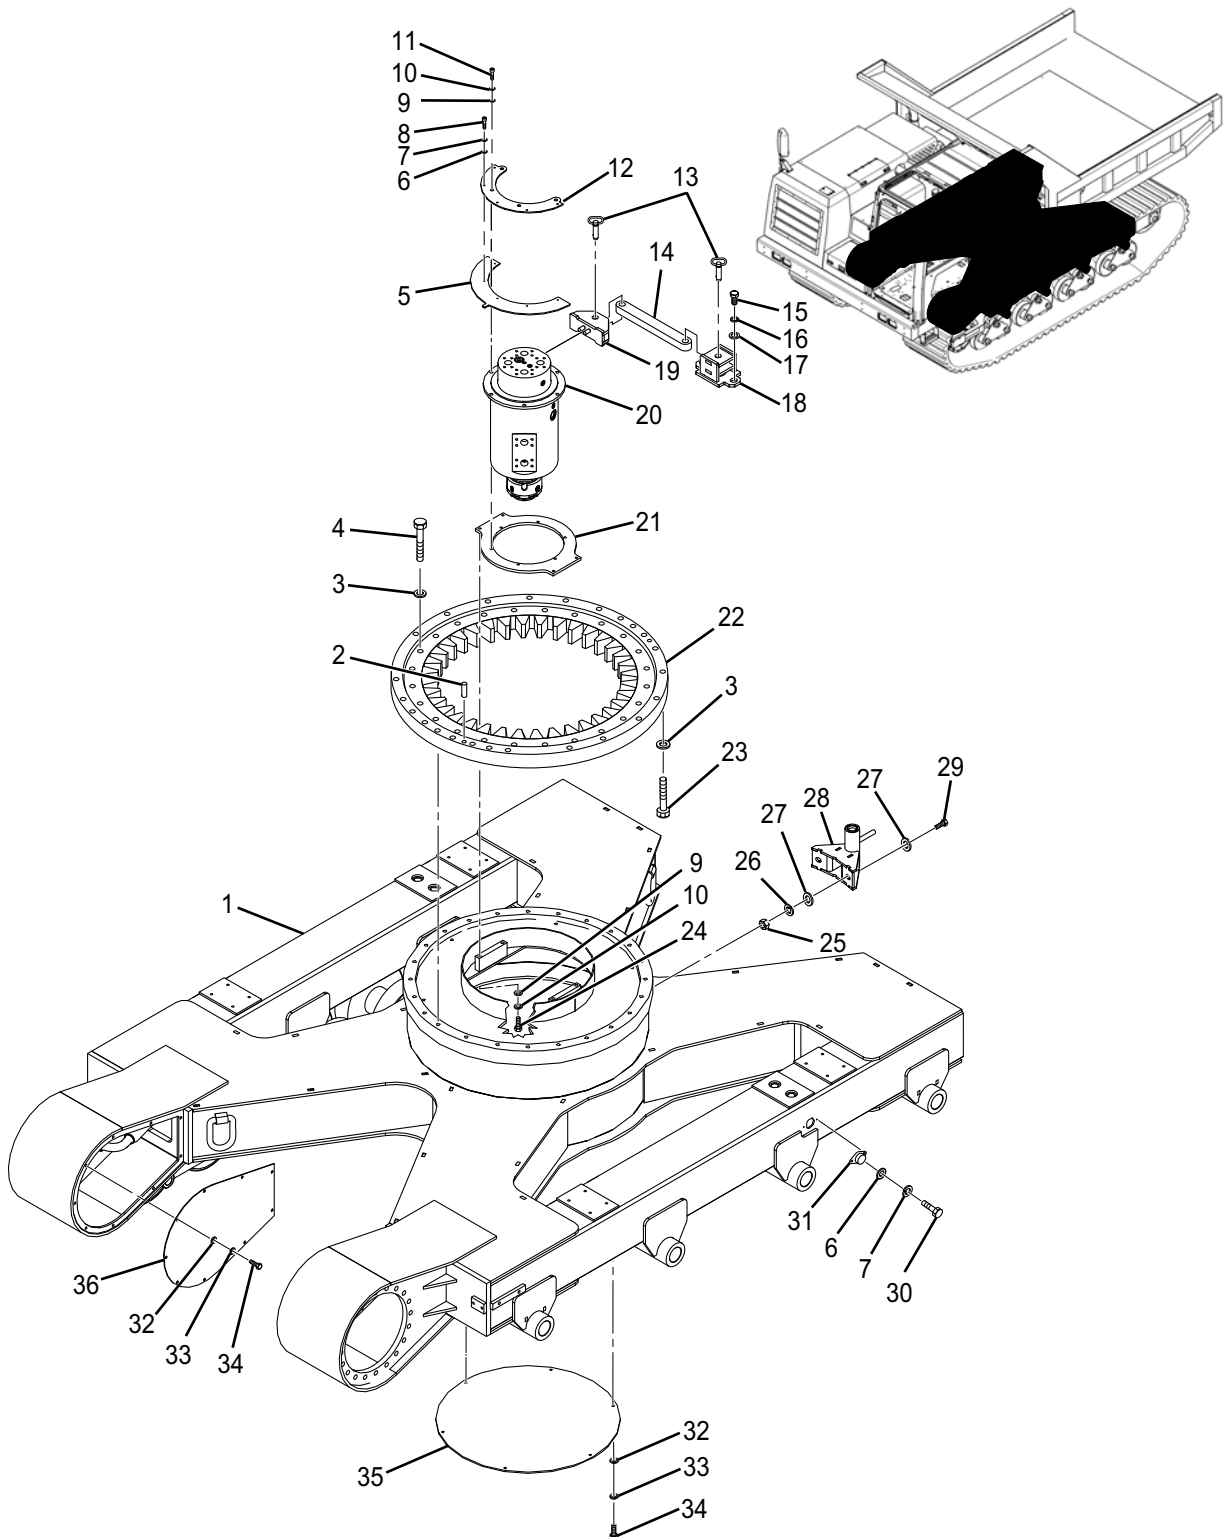


TABLE FOR FIGURE 02-07:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-04337-100	LOWER FRAME	1	
2	A-04368-262	PIN, ALIGNMENT	2	
3	0-1120-31832	M18 WASHER	48	
4	0-1000-31890	M18 X 90 HEX BOLT	24	
5	A-04368-263	SENSOR RING 1	1	
6	0-1120-00616	M6 WASHER	9	
7	0-1100-00615	M6 LOCK WASHER	9	
8	0-1000-00610	M6 X 10 HEX BOLT	5	
9	0-1120-01223	M12 WASHER	10	
10	0-1100-01230	M12 LOCK WASHER	10	
11	0-1000-01220	M12 X 20 HEX BOLT	6	
12	A-04368-264	SENSOR RING 2	1	
13	A-04368-711	QUICK RELEASE	2	
14	A-04368-156	SWIVEL JOINT LINK	1	
15	0-1000-32045	M20 X 45 HEX BOLT	2	
16	0-1100-02051	M20 LOCK WASHER	2	
17	1-28320-1130	M20 HAD WASHER	2	
18	A-04368-169	SWIVEL JOINT LINK BRACKET FRAME SIDE	1	
19	A-04368-168	SWIVEL JOINT LINK BRACKET SWIVEL SIDE	1	
20	A-04368-800	HYDRAULIC SWIVEL, 6-PORT	1	
21	A-04368-261	SWIVEL FLANGE	1	
22	1-68360-0010	ROTATION BEARING	1	
23	0-1000-31895	M18 X 95 HEX BOLT	24	
24	0-1001-31200	M12 X 100 HEX BOLT	4	
25	0-1200-02016	M20 NUT	2	

TABLE FOR FIGURE 02-07: (Cont.)

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
26	0-1100-02051	M20 LOCK WASHER	2	
27	A-04399-703	3/4 INCH EXTRA THICK WASHER	4	
28	A-04351-148	TURRET STOP PIN	1	
29	0-1000-02060	M20 X 60 HEX BOLT	2	
30	0-1000-00620	M6 X 20 HEX BOLT	4	
31	1-11510-1210	CAP	2	
32	0-1120-01020	M10 WASHER	24	
33	0-1100-01025	M10 LOCK WASHER	24	
34	0-1000-01025	M10 X 25 HEX BOLT	24	
35	A-04351-252	DUST COVER, TURRET	1	
36	A-04351-251	COVER, TRAVEL MOTOR	2	

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 02-08 FLOOR PAN

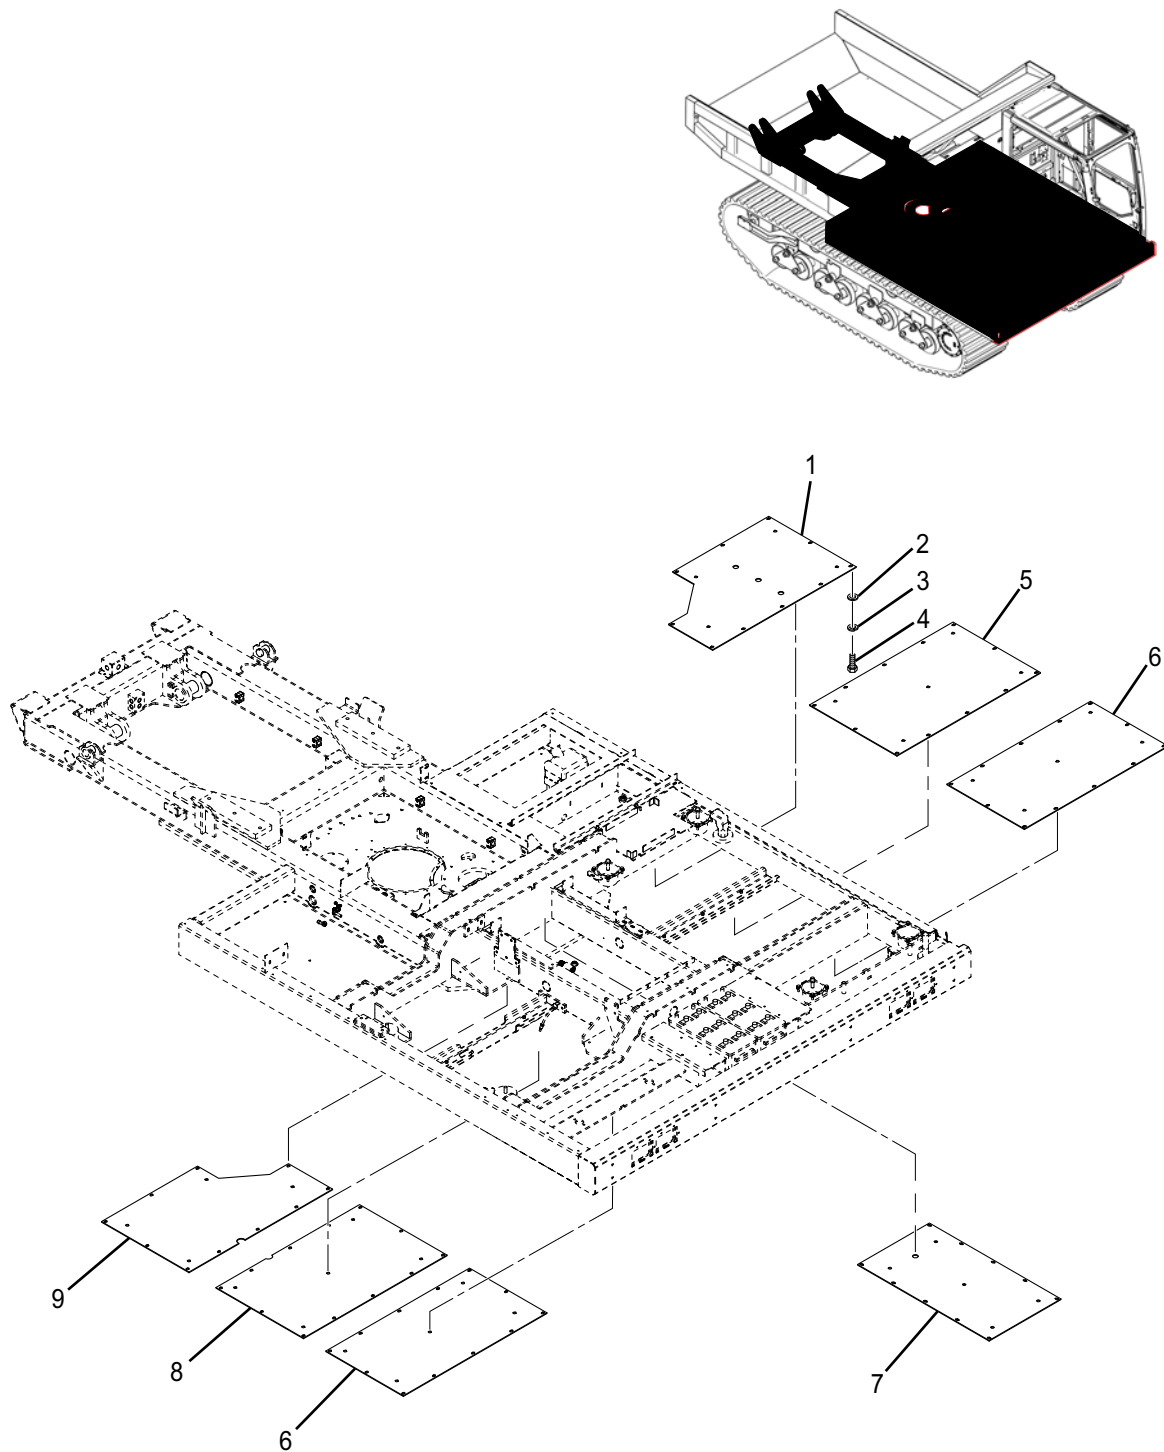


TABLE FOR FIGURE 02-08:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-04351-235	UNDER COVER	1	
2	0-1120-01020	M10 WASHER	78	
3	0-1100-01025	M10 LOCK WASHER	78	
4	0-1000-01020	M10 X 20 HEX BOLT	78	
5	A-04351-236	UNDER COVER	1	
6	A-04351-232	UNDER COVER	2	
7	A-04351-231	UNDER COVER	1	
8	A-04351-234	UNDER COVER	1	
9	A-04351-233	UNDER COVER	1	

THIS PAGE INTENTIONALLY LEFT BLANK

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 03-01 MOUNTING GP-PLATFORM. PO 332-4978


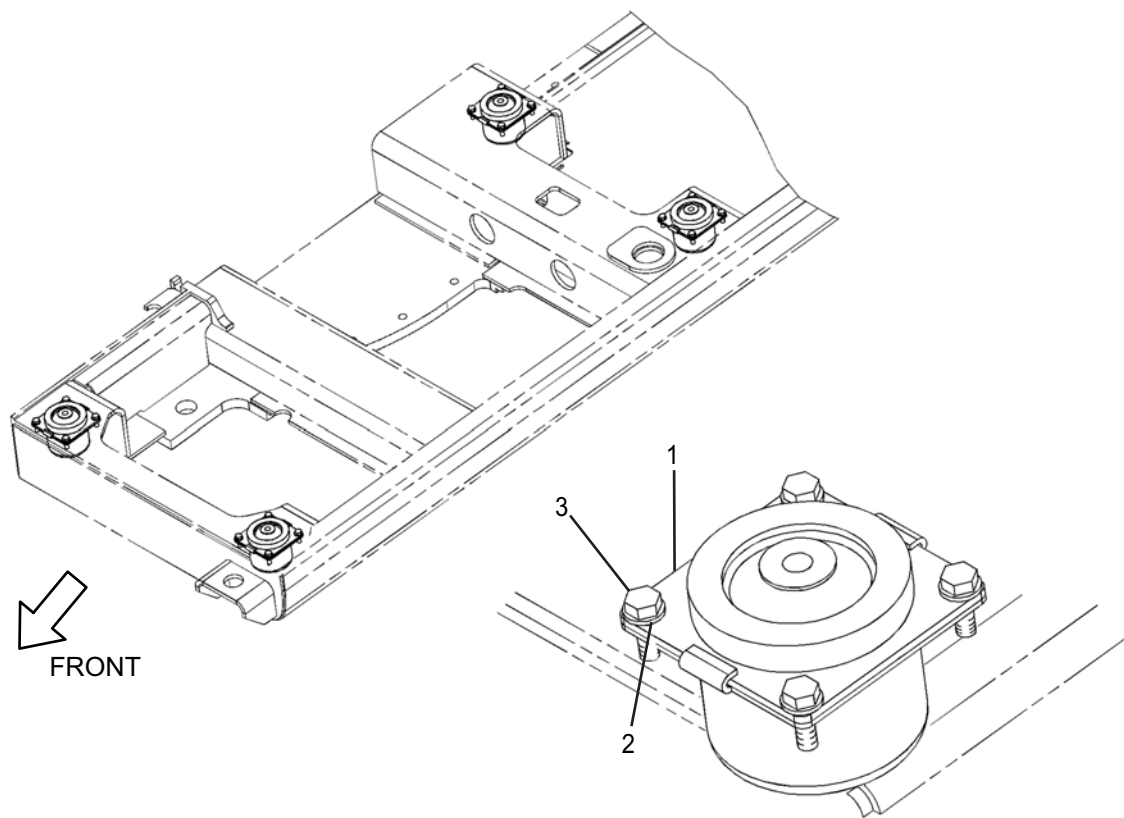


TABLE FOR FIGURE 03-01:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	316-8922	MOUNT AS	4	
2	8T-4121	WASHER-HARD (11X21X2.5-MM THK)	16	
3	8T-4195	BOLT (M10X1.5X30-MM)	16	

FIGURE 03-02 SUPPORT GP-SEAT. PO 305-0449

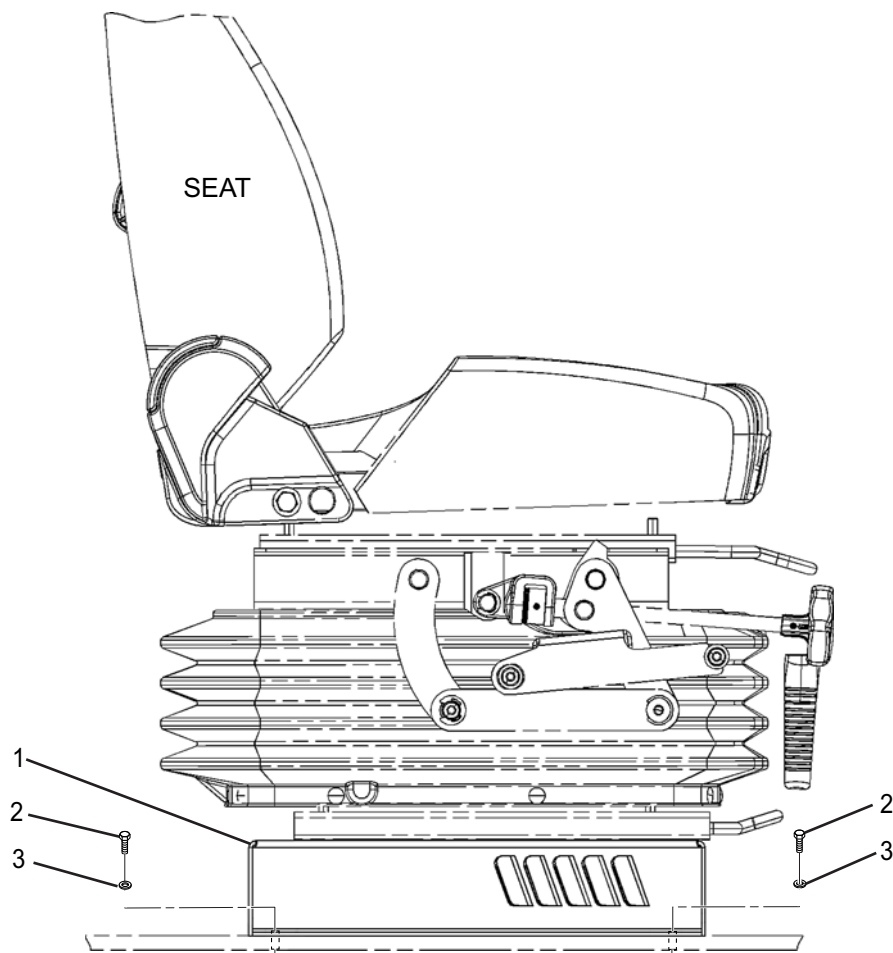


RIGHT SIDE VIEW

TABLE FOR FIGURE 03-02:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	316-8968	SUPPORT AS-SEAT	1	
2	8T-4191	BOLT (M10X1.5X16-MM)	4	
3	8T-4121	WASHER-HARD (11X21X2.5-MM THK)	4	

FIGURE 03-03 SEAT BELT GP-SEAT. PO 440-9256

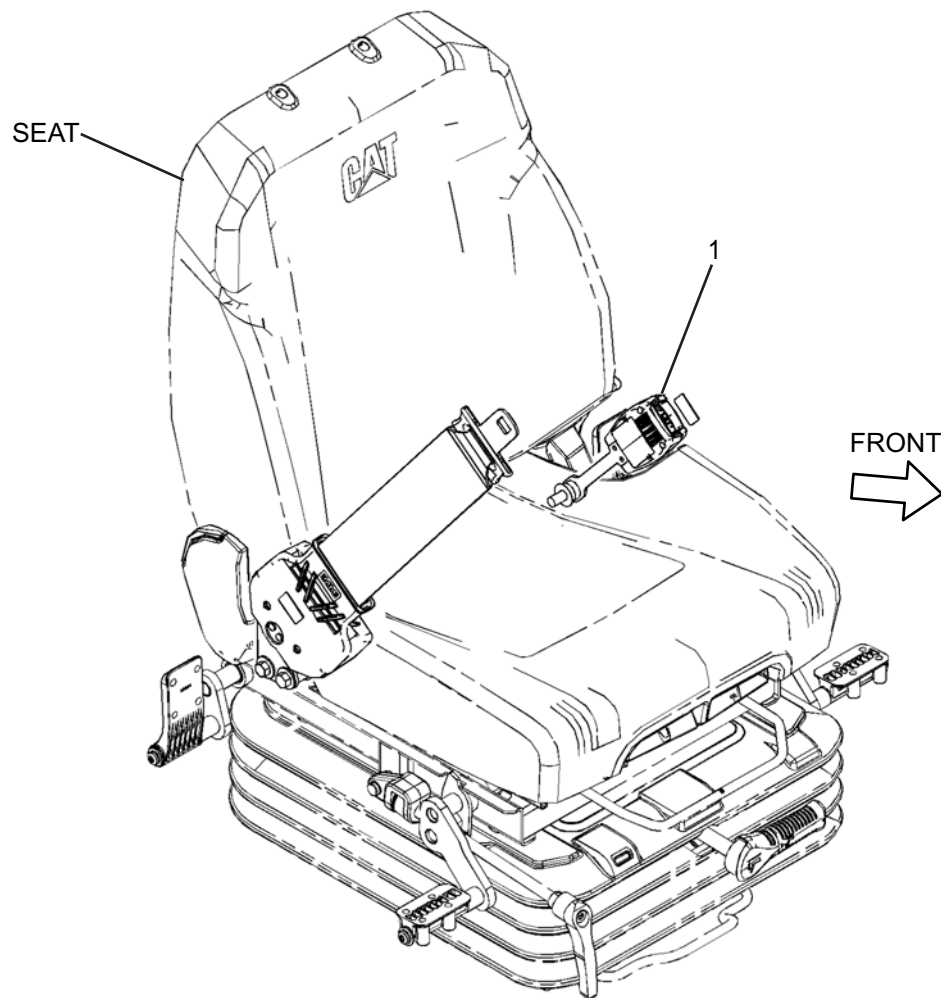

03-03

TABLE FOR FIGURE 03-03:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	327-6540	SEAT BELT GP (RETRACTABLE, 76-MM (3-IN))	1	

FIGURE 03-04 SEAT AND MOUNTING GP

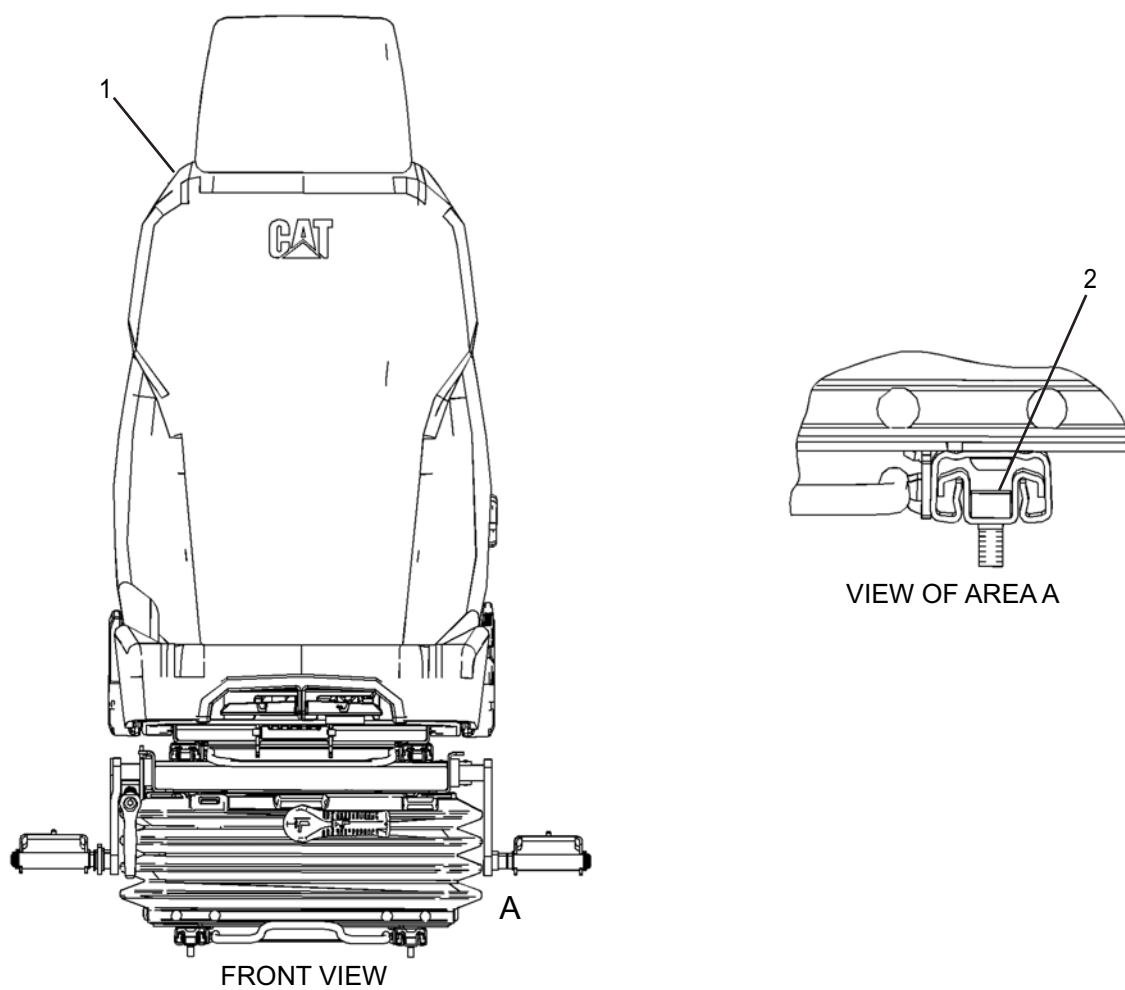


TABLE FOR FIGURE 03-04:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	316-8882	SEAT GP-SUSPENSION (HIGH BACK, CLOTH)	1	
2	6V-8202	BOLT-SOCKET HEAD (M8X1.25X16-MM)	4	

FIGURE 03-05 SEAT GP-SUSPENSION. PO316-8881

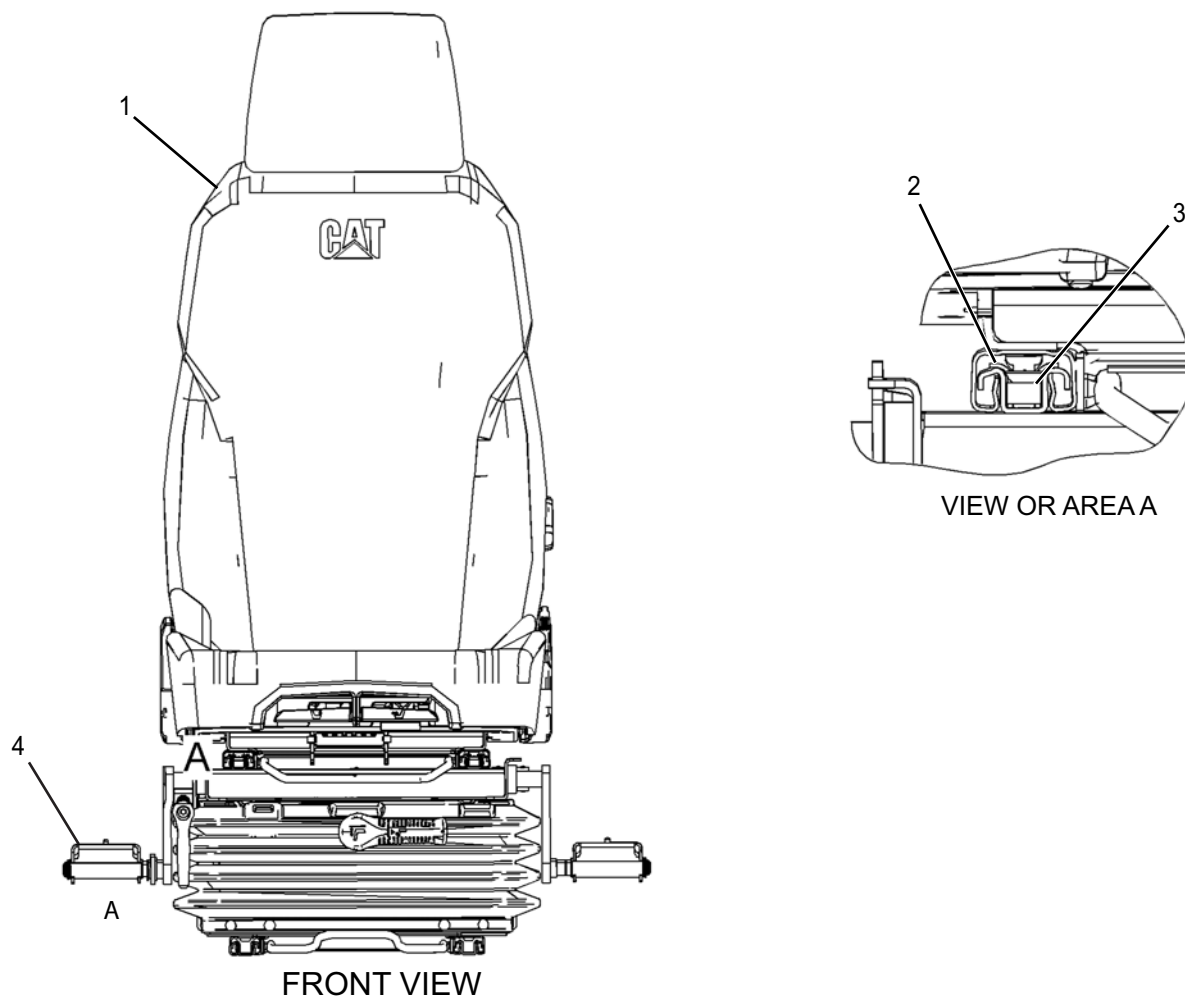


TABLE FOR FIGURE 03-05:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	316-8889	SEAT GP (HIGH BACK, CLOTH)	1	
2	316-8987	BRACKET	2	
3	5A-3604	BOLT-SOCKET HEAD (M8X1.25X25-MM)	4	
4	316-8894	SUSPENSION GP-SEAT (MECHANICAL)	1	

FIGURE 03-06 SEAT GP-HIGH BACK PO 316-8882

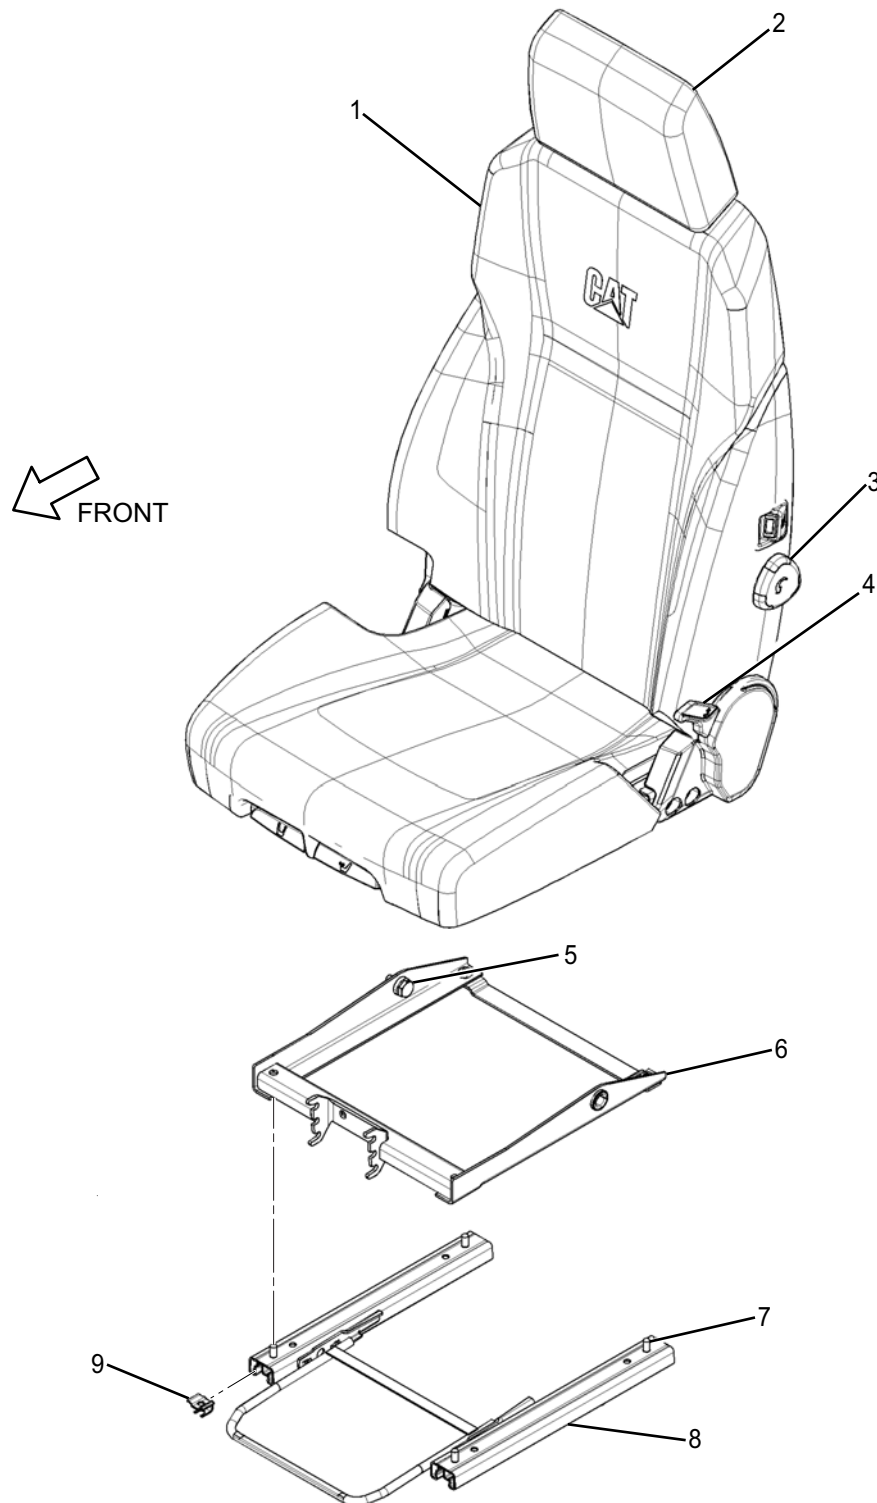


TABLE FOR FIGURE 03-06:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	336-1132	KIT-SEAT	1	
2	316-8892	HEADREST AS-SEAT	1	
3	178-5659	HANDLE (LUMBAR SUPPORT ADJUSTER)	1	
4	327-6640	KIT-HANDLE (RECLINER)	1	
5	333-4179	BOLT-SPECIAL	2	
6	327-6642	KIT-SEAT TILT	1	
7	9X-2616	SCREW-SOCKET (M8X1.25X16-MM)	4	
8	327-6643	KIT-ADJUSTER (CUSHION POSITIONING)	1	
9	316-8987	BRACKET	2	

FIGURE 03-07 SUSPENSION GP-SEAT-MECHANICAL

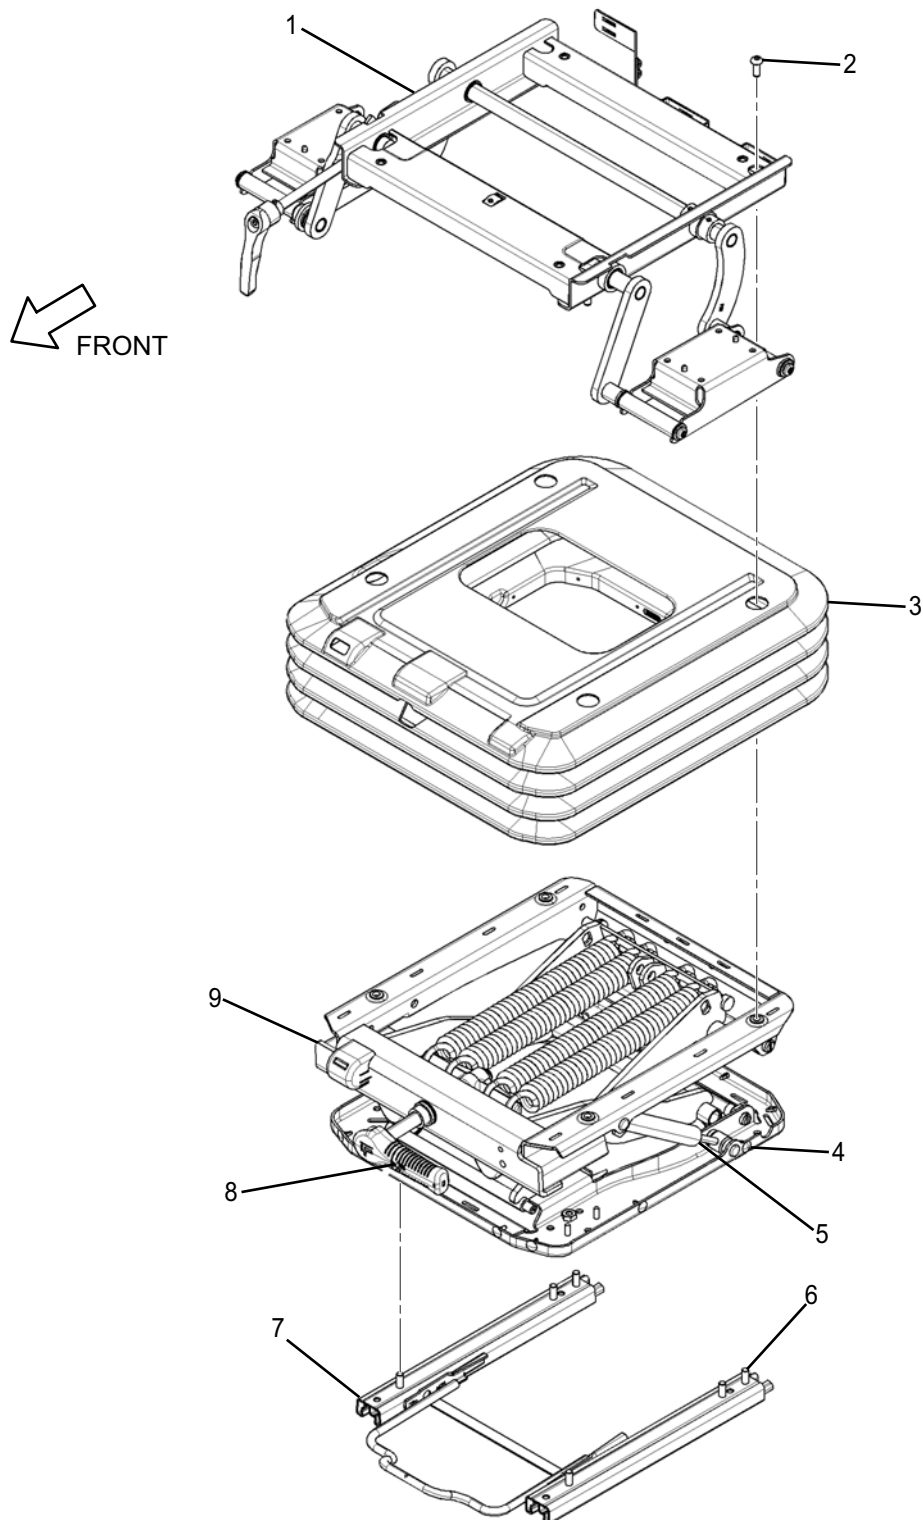


TABLE FOR FIGURE 03-07:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	316-8897	KIT-BRACKET (ADJUSTABLE)	1	
2	198-3899	SCREW-BUTTON HEAD (M8X1.25X20-MM)	4	
3	327-6647	KIT-COVER (SUSPENSION SEAT)	1	
4	245-7895	KIT-CLIP (SEAT)	1	
5	327-6646	KIT-CYLINDER (DAMPENER)	1	
6	333-4180	SCREW-BUTTON HEAD (M8X1.25X20-MM)	6	
7	327-6648	KIT-ADJUSTER (SEAT POSITION)	1	
8	333-4181	KIT-HANDLE	1	
9	327-6645	KIT-SEAT SUSPENSION (MECHANICAL)	1	

FIGURE 03-08 DUCT GP-CAB AIR

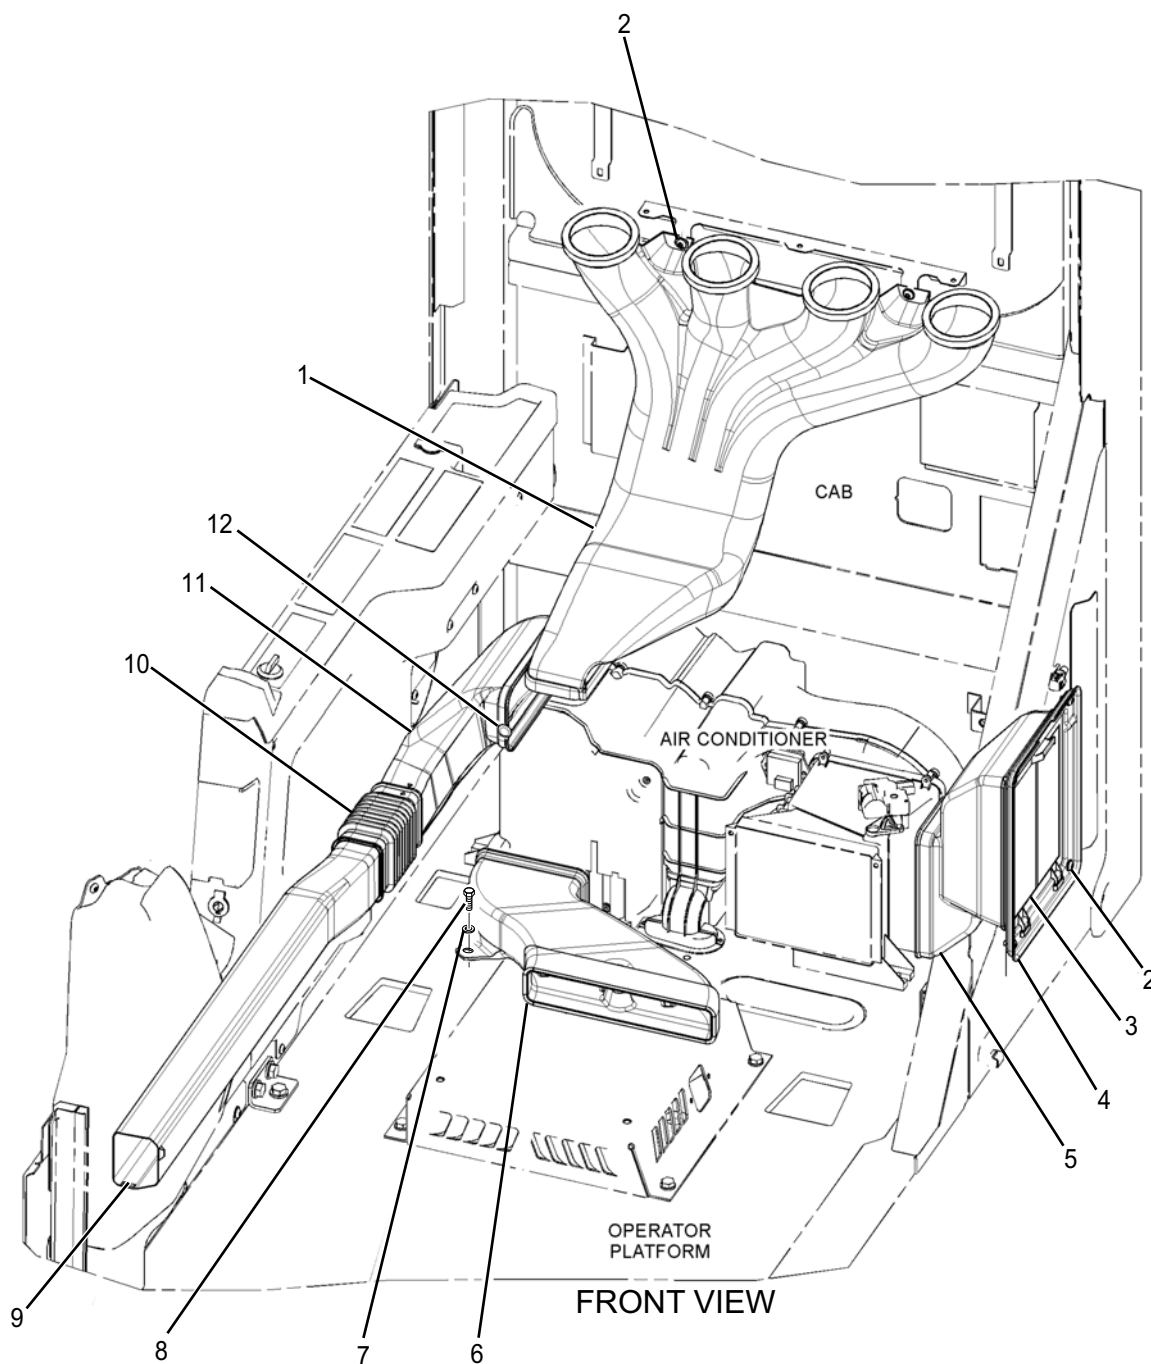


TABLE FOR FIGURE 03-08:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	327-6534	DUCT AS-VENT (REAR)	1	
2	128-2135	SCREW-TRUSS HEAD (M6X1X13-MM)	6	
3	327-6618	FILTER ELEMENT-CAB AIR (AIR INTAKE)	1	
4	327-6533	FRAME GP-AIR FILTER (CAB)	1	
5	327-6484	DUCT (FRESH AIR)	1	
6	327-6537	DUCT AS (FLOOR)	1	
7	7X-7729	WASHER (11X25X3-MM THK)	1	
8	8T-4136	BOLT (M10X1.5X25-MM)	1	
9	327-6536	DUCT (STRAIGHT)	1	
10	336-1206	DUCT	1	
11	327-6535	DUCT (VENT, FRONT)	1	
12	229-9028	CLIP	1	

FIGURE 03-09 FRAME GP-AIR FILTER-CAB

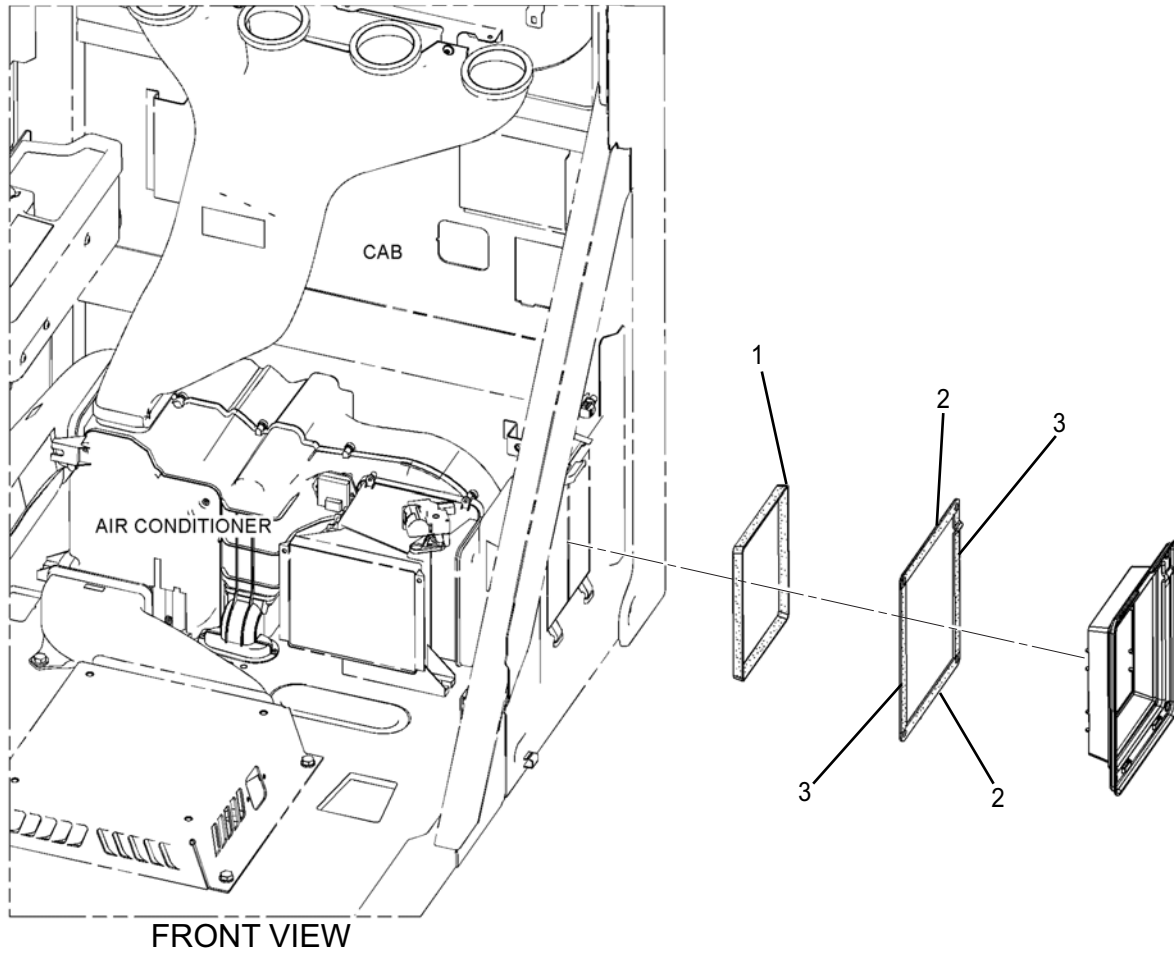


TABLE FOR FIGURE 03-09:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	346-7429	INSULATION	1	
2	346-7427	INSULATION	2	
3	346-7428	INSULATION	2	

FIGURE 03-10 RADIO GP-AM/FM

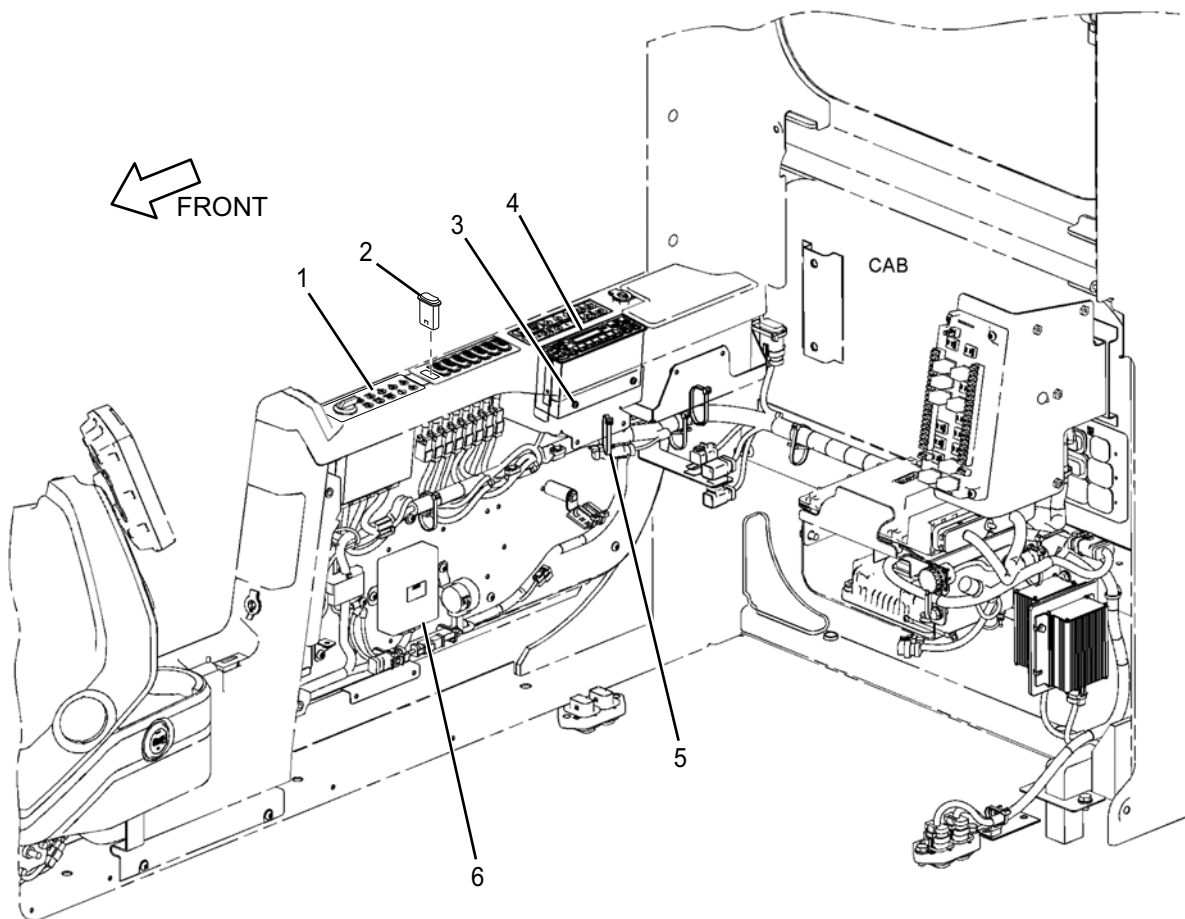


TABLE FOR FIGURE 03-10:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	327-7538	SWITCH PANEL	1	
2	238-2210	SWITCH, MIRROR HEAT	1	
3	106-2704	SCREW AS (M5X0.8X10-MM)	2	
4	328-0397	RADIO-AM/FM	1	
5	7K-1181	STRAP-CABLE	2	
6	A-04225-811	HARNESS, WIPER	1	

FIGURE 03-11 PANEL GP-SWITCH-ENGINE SPEED, START

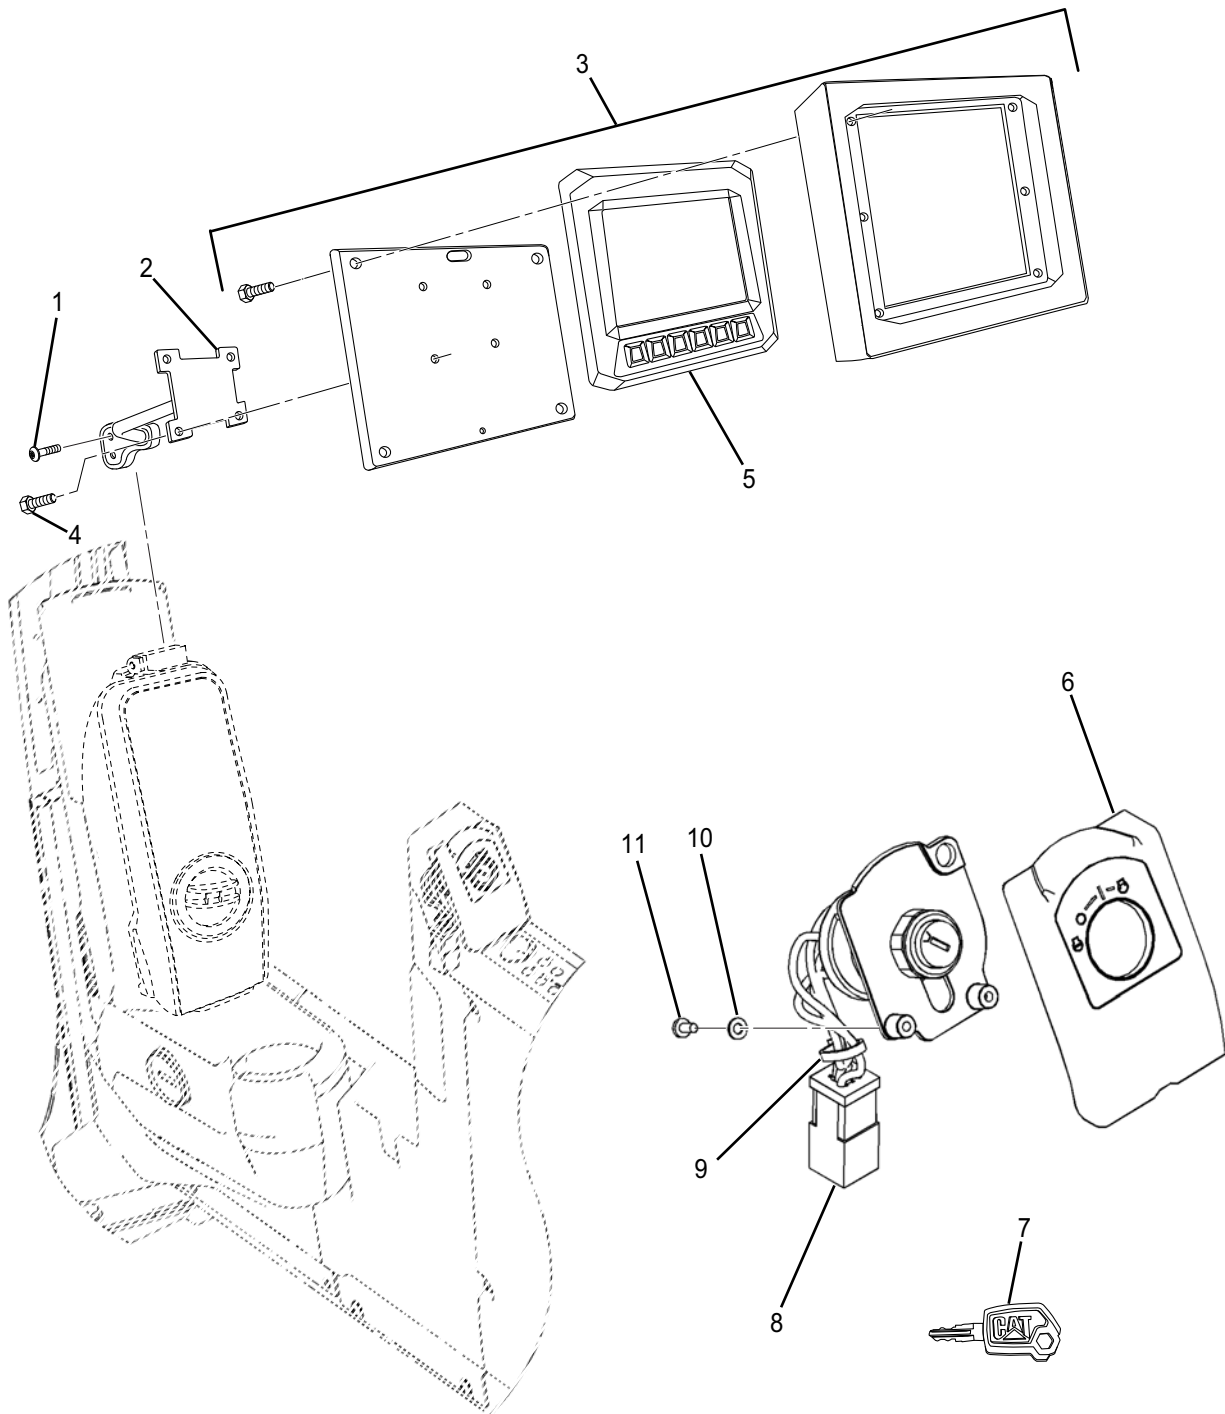


TABLE FOR FIGURE 03-11:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	9X-2042	SCREW-TRUSS HEAD (M6X1X12-MM)	4	
2	327-6436	BRACKET	1	
3	A-04253-131	MONITOR BOX	1	
4	8C-7581	SCREW-MACHINE (M4X0.7X8-MM)	4	
5	A-04225-706	OPERATOR MONITOR	1	
6	353-1910	COVER	1	
7	5P-8500	IGNITION KEY	2	
8	328-0246	PANEL GP-SWITCH (ENGINE START)	1	
9	3S-2093	STRAP-CABLE	1	
10	0-1130-00408	M4 WASHER	3	
11	0-1000-00408	M4 X 8 HEX BOLT	3	

FIGURE 03-12 PANEL GP-SWITCH-ENGINE START

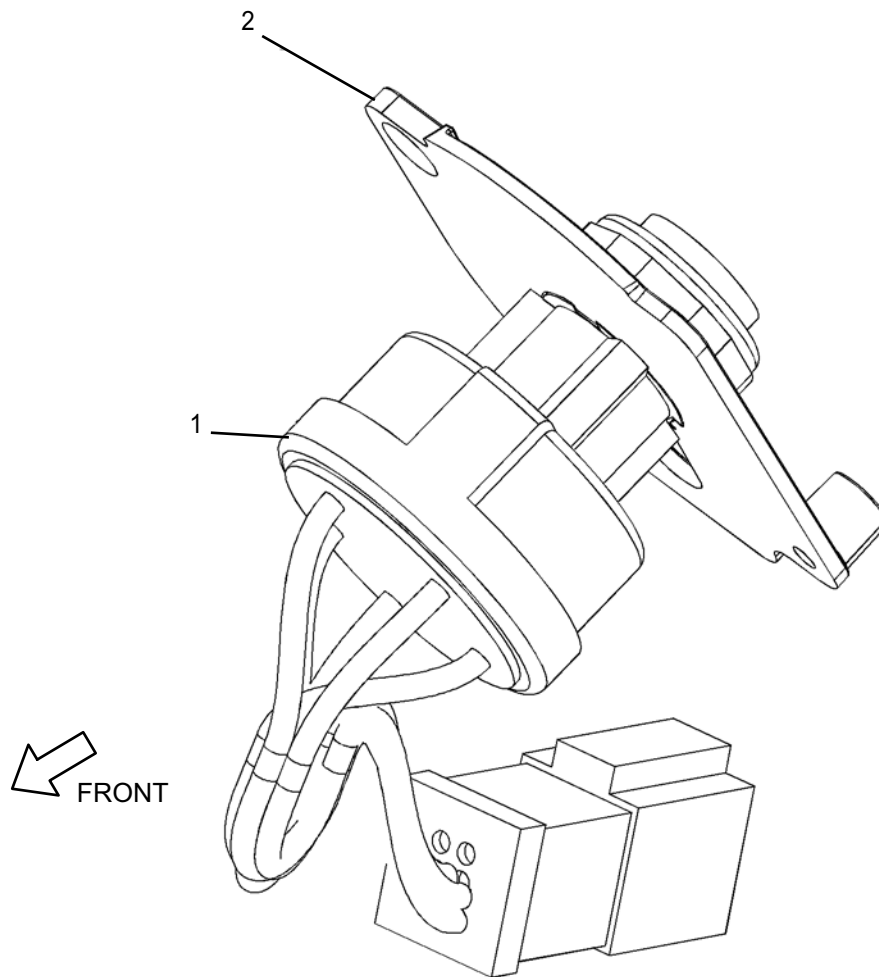


TABLE FOR FIGURE 03-12:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	255-2752	SWITCH GP-START	1	
2	350-8461	PANEL-SWITCH	2	

FIGURE 03-13 SWITCH GP-START

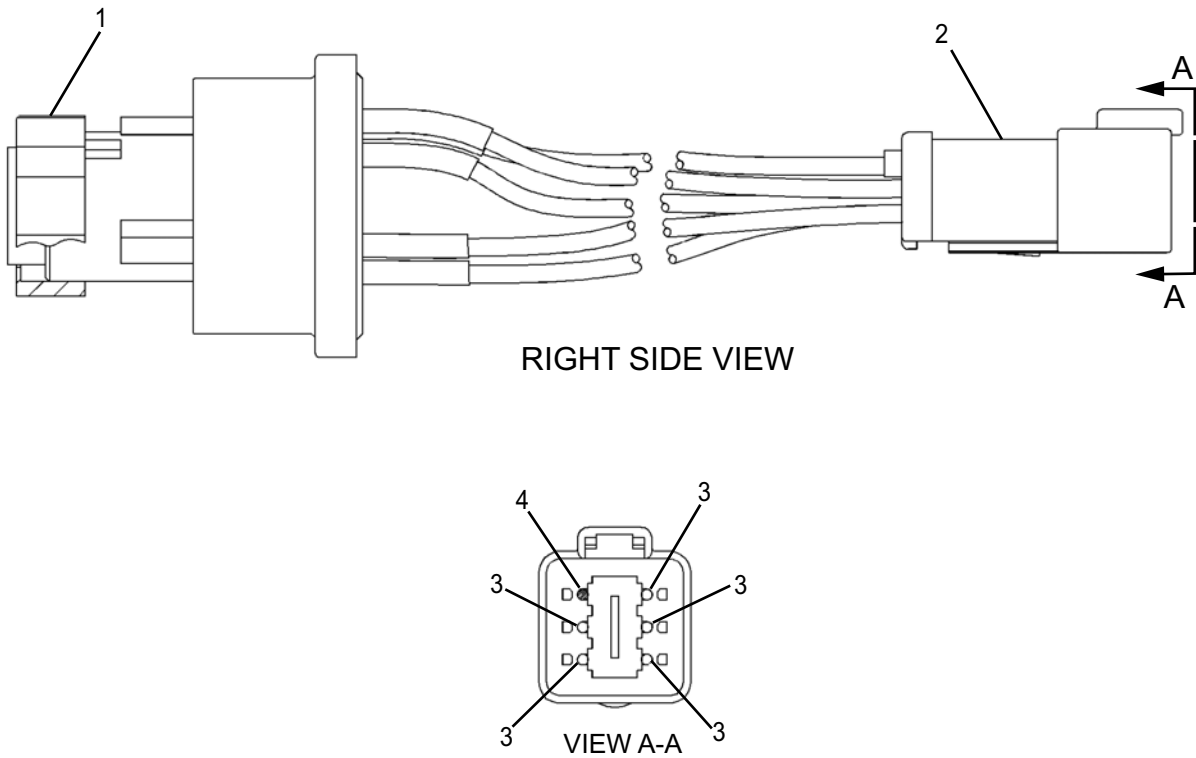


TABLE FOR FIGURE 03-13:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	7T-6799	NUT-MOUNTING (1-32-THD)	1	
2	102-8805	KIT-RECEPTACLE (6-PIN)	1	
3	8T-8729	PIN-CONNECTOR (16-GA TO 18-GA)	5	
4	8T-8737	PLUG-SEAL	1	

FIGURE 03-14 WIPER GP-WINDOW-UPPER

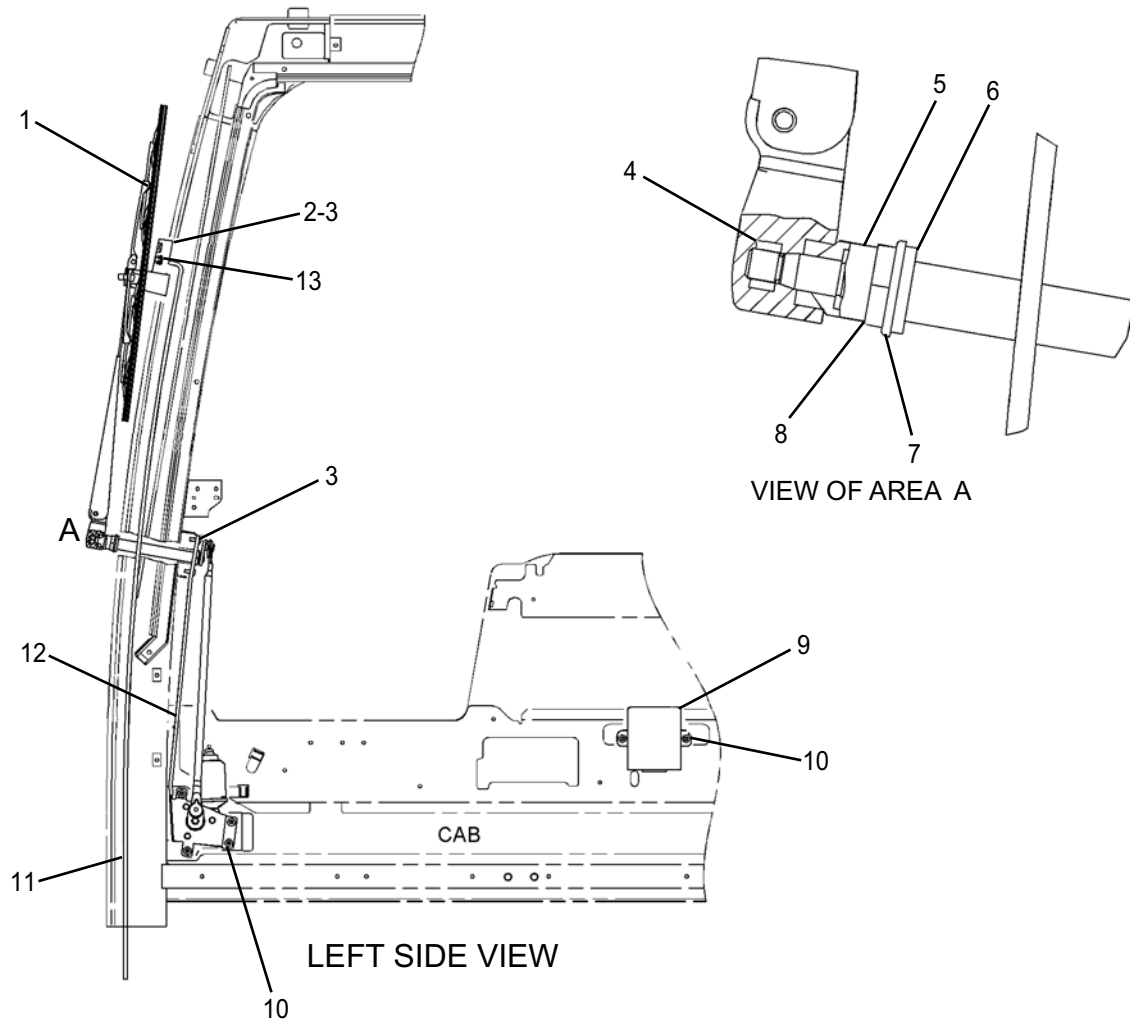


TABLE FOR FIGURE 03-14:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	372-9334	ARM GP-WINDOW WIPER (UPPER)	1	
	161-3669	•GUIDE	1	
	161-3670	•BLADE AS-WIPER (600-MM)	1	
	372-9285	•ARM AS-WIPER (UPPER)	1	
	185-8290	•SCREW AS (M3.5X0.6X9-MM)	1	
2	342-3548	HOLDER	1	
3	9X-2044	SCREW-TRUSS HEAD (M6X1X16-MM)	4	
4	6V-8231	NUT (M10X1.25-THD)	1	
5	7Y-3472	CAP	1	
6	124-3952	PACKING	1	
7	124-3953	WASHER (20.5X30X2-MM THK)	1	
8	7Y-3470	NUT (M20X1-THD)	1	
9	155-7042	RELAY AS (UPPER WIPER)	1	
10	9X-2042	SCREW-TRUSS HEAD (M6X1X12-MM)	6	
11	383-5632	HOSE	1	
12	342-3546	MOTOR GP-WINDOW WIPER	1	
13	383-5631	NOZZLE	1	

FIGURE 03-15 WIRING GP-CAB-ROOF

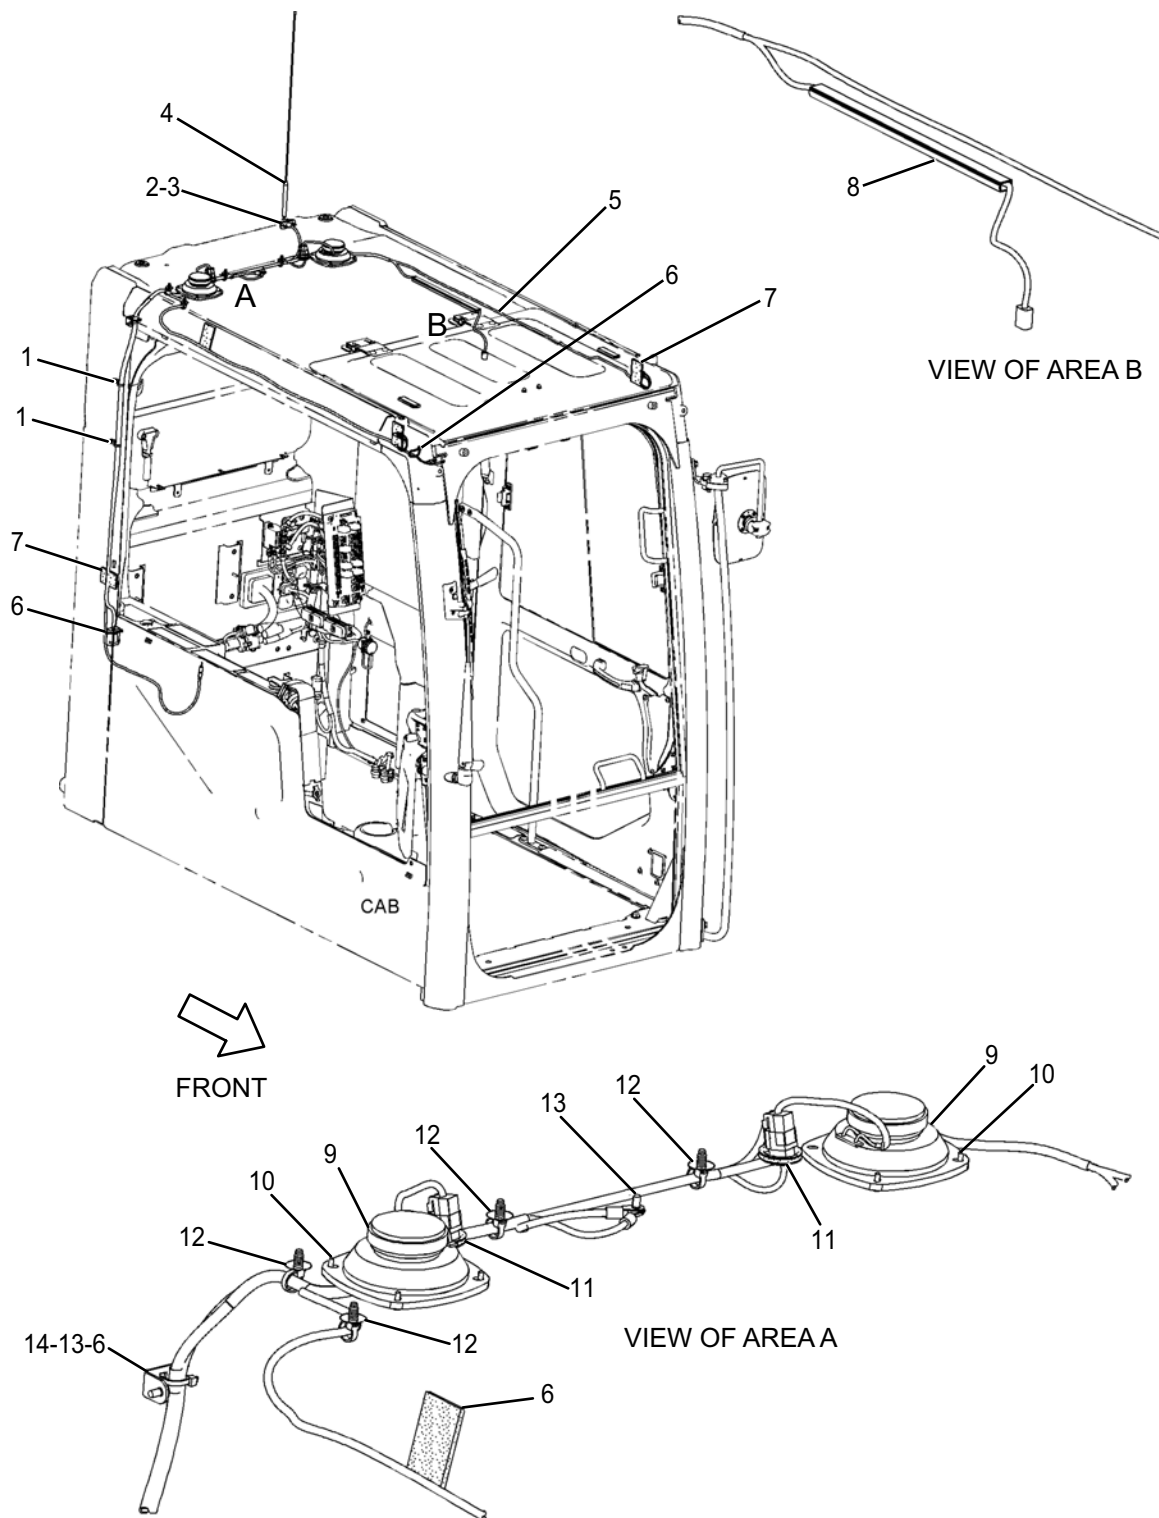


TABLE FOR FIGURE 03-15:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	7I-2673	STRAP-CABLE	2	
2	6V-9491	SCREW-MACHINE (M4X0.7X20-MM)	2	
3	096-6166	WASHER-HARD (4.5X9X1-MM THK)	2	
	7Y-3951	•TERMINAL-BLADE (14-GA)	2	
	7Y-3954	•CONNECTOR-PLUG (3-PIN)	1	
4	342-3067	ANTENNA AS	1	
5	327-9967	HARNESS AS-CAB	1	
	8T-8729	•PIN-CONNECTOR (16-GA TO 18-GA)	5	
	3S-2093	•STRAP-CABLE	14	
	7Y-3950	•TERMINAL-BLADE (14-GA TO 20-GA)	4	
	7Y-3955	•CONNECTOR-RECEPTACLE	2	
	7Y-3962	•TERMINAL-BULLET (MALE)	2	
	7Y-3964	•TUBE (CONNECTOR TERMINAL)	2	
	7Y-3963	•TERMINAL-BULLET (FEMALE)	2	
	7Y-3965	•TUBE (RECEPTACLE TERMINAL)	2	
	8T-8737	•PLUG-SEAL	4	
	9W-0852	•PIN-CONNECTOR (14-GA TO 16-GA)	3	
	125-7875	•TUBE-HEAT SHRINK (7.44-MM DIA) (5-CM)	AR	
	2L-8067	•TERMINAL-RING (10-GA TO 12-GA, 1/4-IN SCREW)	2	
	2L-8075	•TERMINAL-RING (14-GA TO 16-GA, NO. 8 SCREW)	1	
	167-3630	•CONNECTOR-PLUG	1	
	167-3631	•TERMINAL (FEMALE)	2	
	243-4510	•RECEPTACLE AS-CONNECTOR (12-PIN)	1	
	5P-3059	•TERMINAL-FORK (18-GA TO 22-GA, NO. 6 SCREW)	1	

TABLE FOR FIGURE 03-15: (Cont.)

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
6	3S-2093	STRAP-CABLE	3	
7	251-0637	INSULATION	4	
8	342-3601	COVER AS	1	
9	7Y-5505	SPEAKER AS	2	
10	8T-0337	SCREW-MACHINE (M4X0.7X12-MM)	6	
11	101-2846	GUARD (9-CM EACH)	2	
12	163-6795	STRAP-CABLE	5	
13	9X-2042	SCREW-TRUSS HEAD (M6X1X12-MM)	2	
14	156-6175	CLIP	1	

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 03-16 WIRING GP-CONVERTER

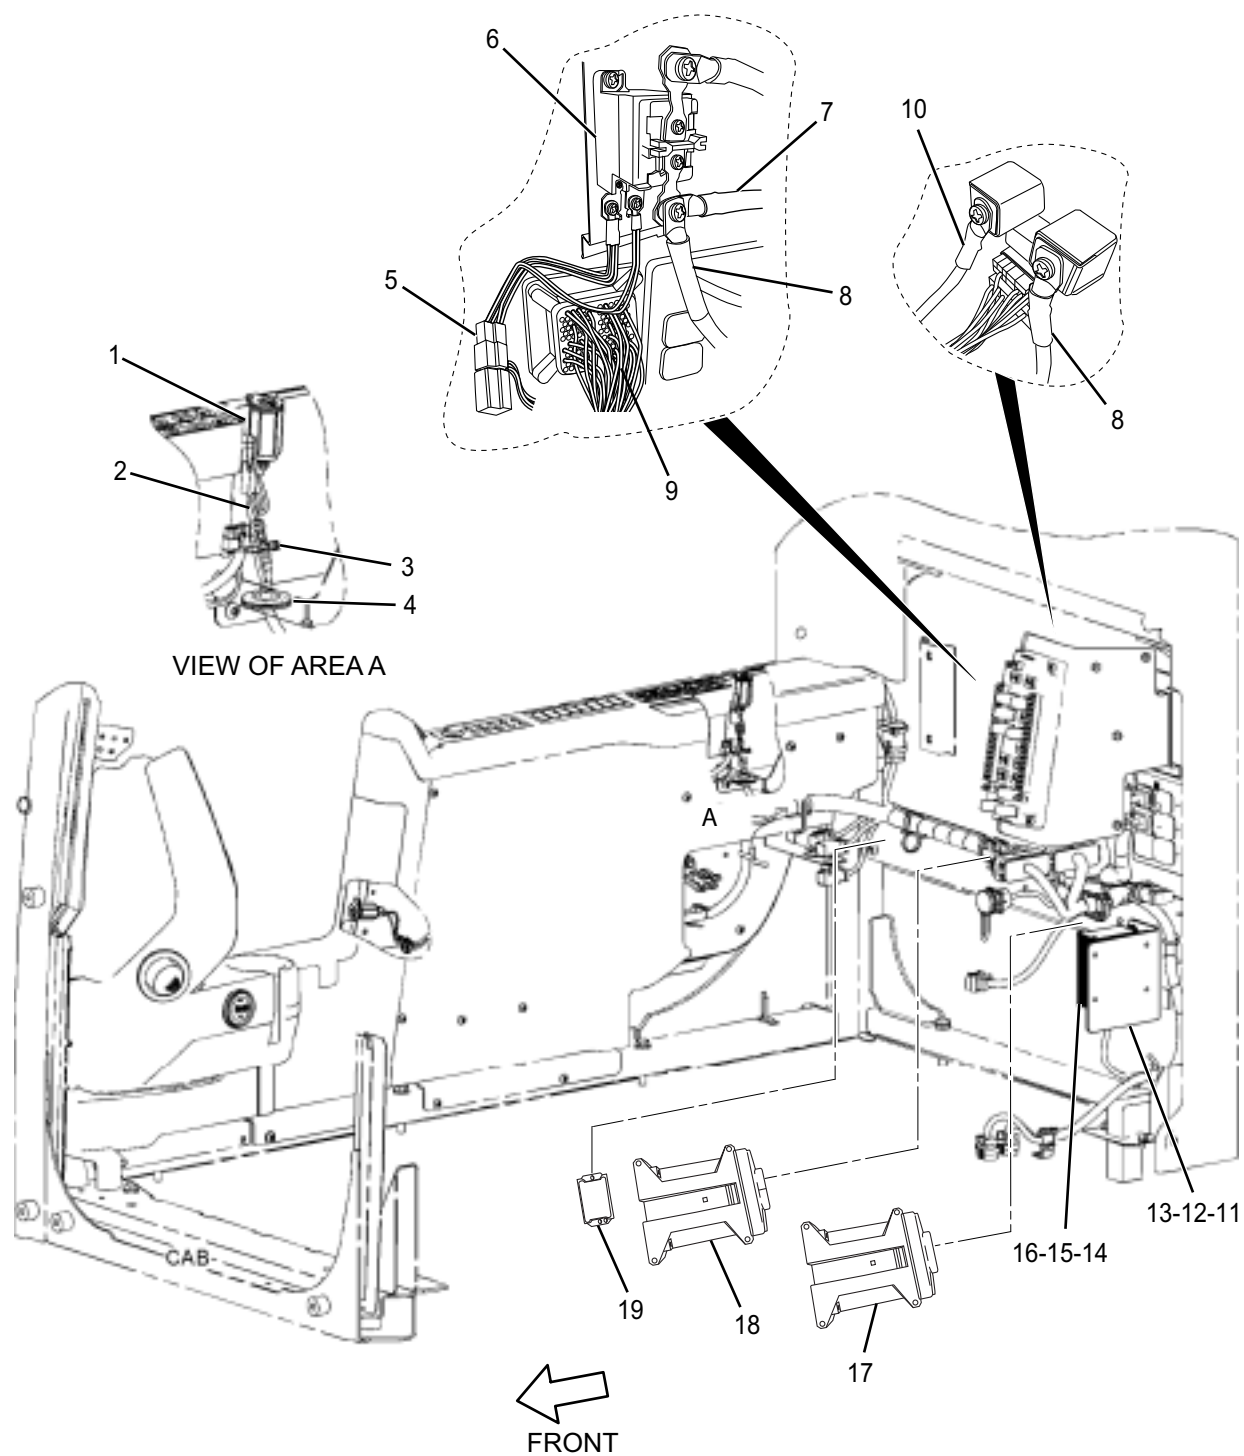


TABLE FOR FIGURE 03-16:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	324-5771	SOCKET-AUXILIARY POWER (12-VOLT)	2	03-16
2	369-0153	WIRE AS	2	
3	3S-2093	STRAP-CABLE	2	
4	170-2986	GROMMET	1	
5	121-1022	DIODE	1	
6	213-0772	MAIN RELAY 24V	1	
7	A-04225-812	BATTERY CABLE	1	
8	A-04225-813	BATTERY CABLE	1	
9	A-04225-810	MAIN ROPS CAB HARNESS	1	
10	A-04225-814	BATTERY CABLE	1	
11	8T-4137	BOLT (M10X1.5X20-MM)	2	
12	8T-4121	WASHER-HARD (11X21X2.5-MM THK)	2	
13	336-5895	BRACKET	1	
14	9X-8256	WASHER (6.6X12X2-MM THK)	4	
15	8T-4171	BOLT (M6X1X12-MM)	4	
16	324-5770	CONVERTER-POWER (24-VOLT TO 12-VOLT)	1	
17	A-04325-716	EX MODULE	1	
18	A-04225-704	CONTROLLER	1	
19	A-04225-707	INCLINOMETER	1	

FIGURE 03-17 PLATFORM GP-OPERATOR


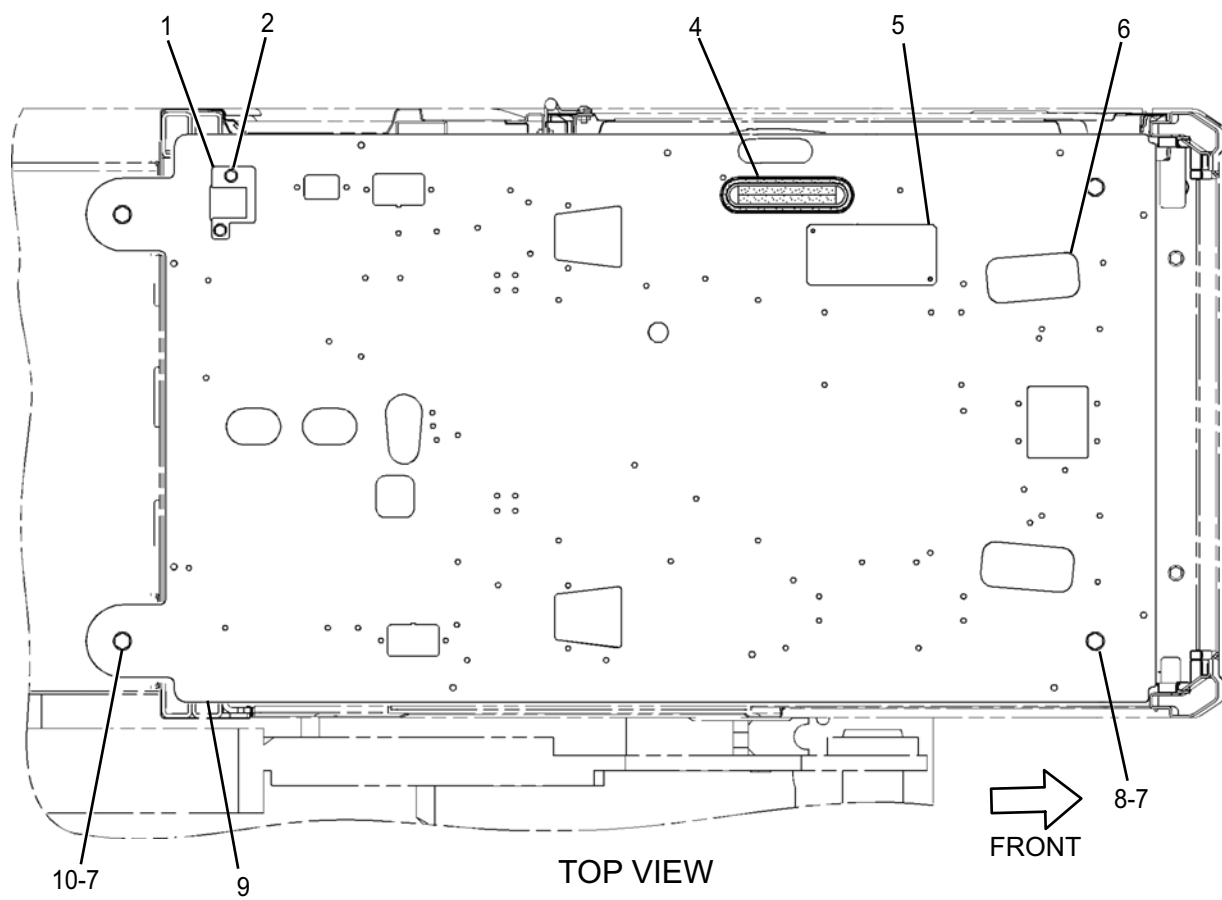


TABLE FOR FIGURE 03-17:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	162-0349	COVER	2	
2	453-1259	BOLT (M16X2X40-MM)	2	
3	340-6484	PLATE	1	
4	316-8930	COVER AS	1	
5	8T-4121	WASHER-HARD (11X21X2.5-MM THK)	2	
6	353-1846	COVER	1	
7	8T-4191	BOLT (M10X1.5X16-MM)	2	
8	451-2175	WASHER-HARD (17.5X30X3.5-MM THK)	4	
9	346-8052	VALVE	1	
10	447-1711	BOLT (M16X2X50-MM)	2	

FIGURE 03-18 HATCH GP-ROOF

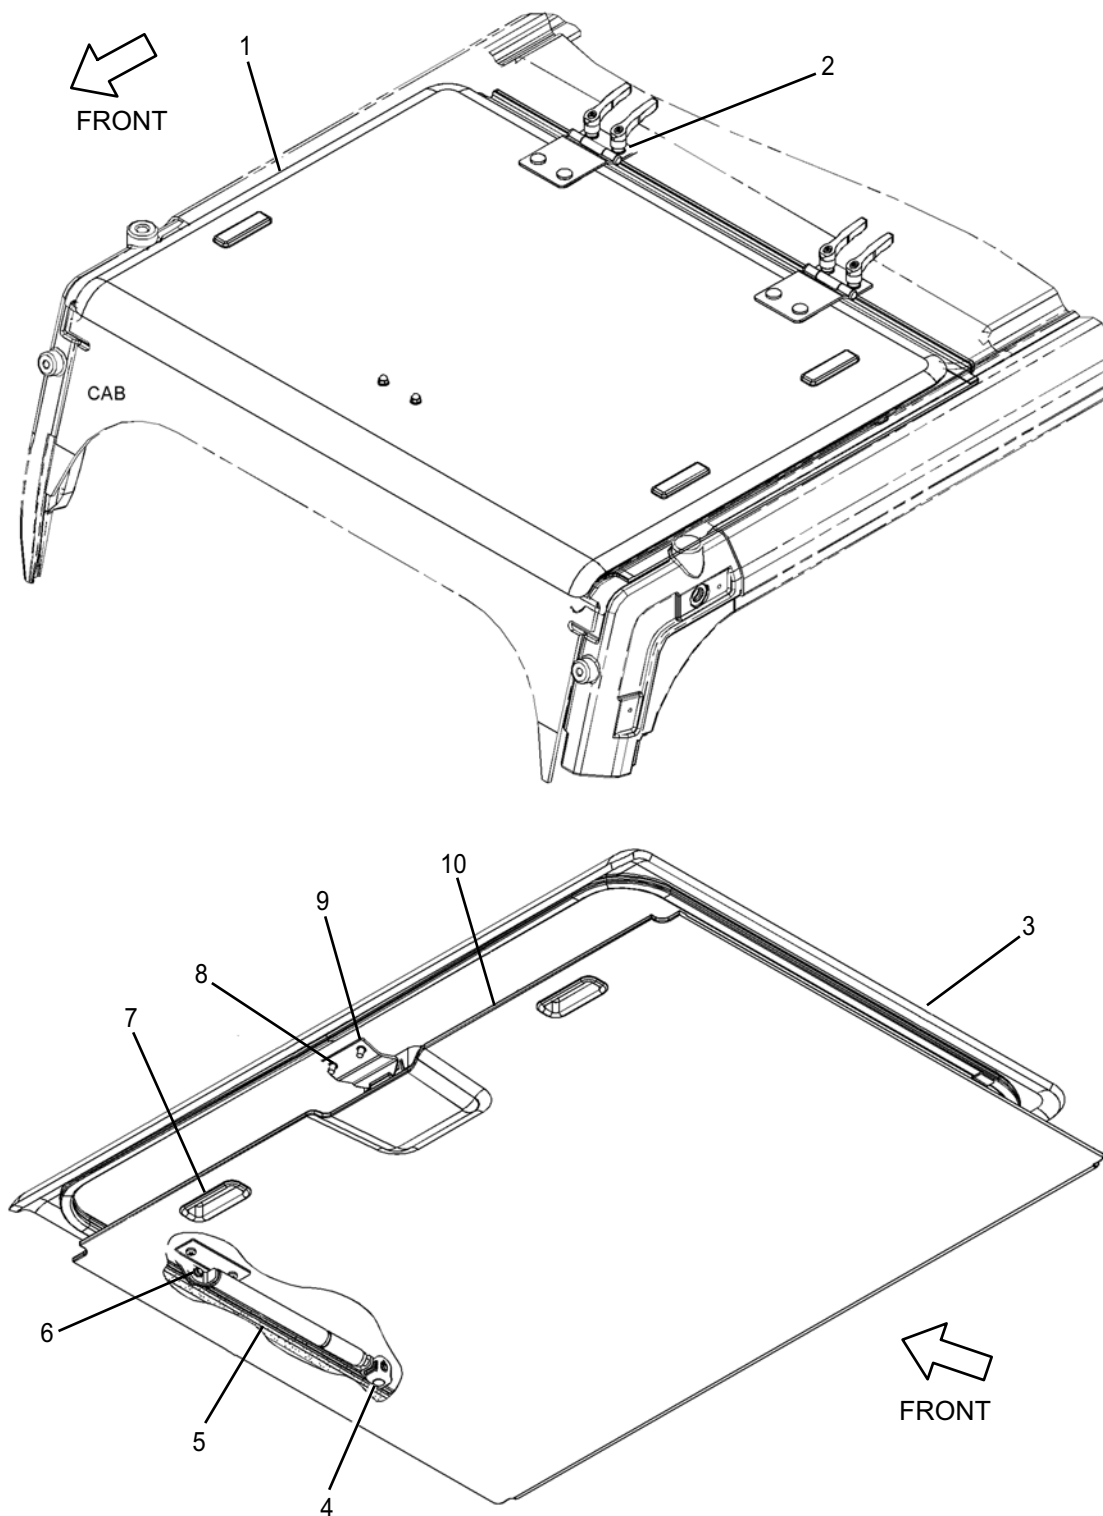

03-18

TABLE FOR FIGURE 03-18:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	346-7922	HATCH GP-ROOF	1	
2	8T-4224	WASHER-HARD (8.8X16X2-MM THK)	4	
3	340-6594	SEAL	1	
4	340-6593	HOLDER AS	2	
5	099-3506	SPRING AS-GAS	2	
6	5D-4822	RING-RETAINING	2	
7	235-8929	HANDLE	2	
8	9X-2042	SCREW-TRUSS HEAD (M6X1X12-MM)	2	
9	340-6595	STRIKER	1	
10	327-6479	VISOR	1	

FIGURE 03-19 HATCH GP-ROOF

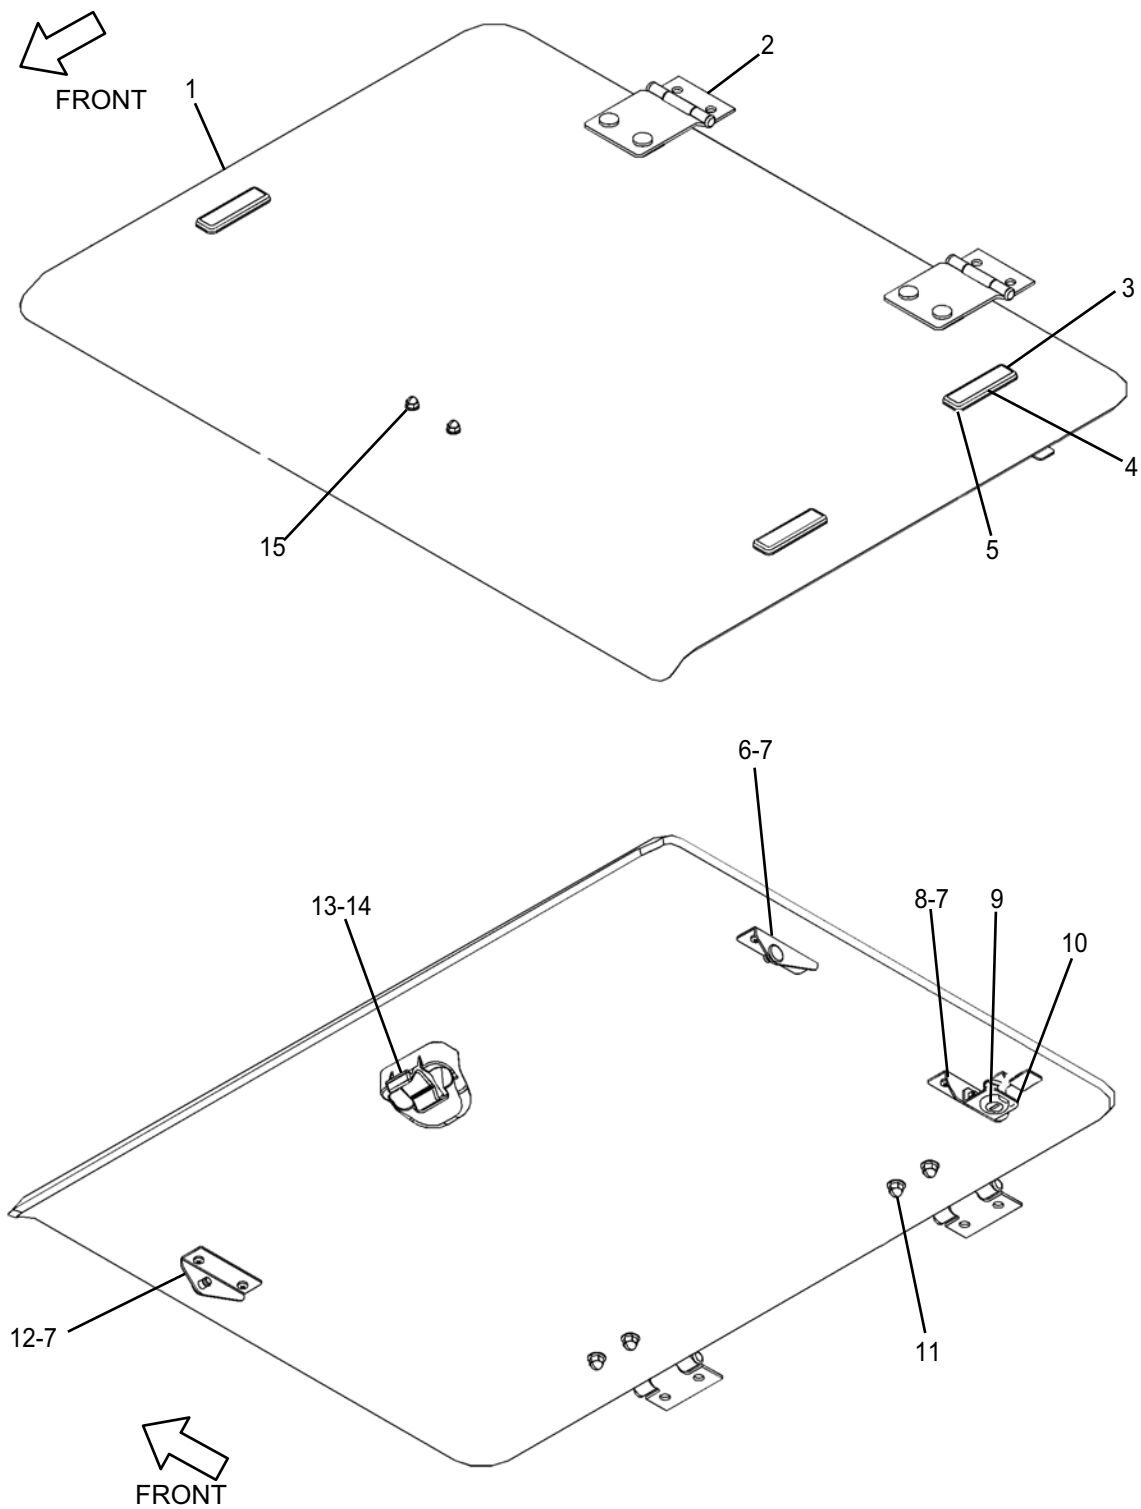


TABLE FOR FIGURE 03-19:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	346-7906	VISOR	1	
2	340-6592	HINGE AS	2	
3	4I-4361	RETAINER	3	
4	4I-1260	PACKING	2	
5	085-6449	PACKING	3	
6	189-2694	BRACKET AS (LH)	1	
7	095-0736	SCREW-MACHINE (M5X0.8X10-MM)	8	
8	346-7907	BRACKET	1	
9	346-7924	LOCK AS	1	
10	346-7908	BRACKET AS	1	
11	6I-5342	NUT (M8X1.25-THD)	4	
12	189-2693	BRACKET AS (RH)	1	
13	161-3694	CATCH	1	
14	9X-2045	SCREW-TRUSS HEAD (M6X1X20-MM)	2	
15	171-7477	NUT	2	

FIGURE 03-20 MOUNTING GP-ROPS

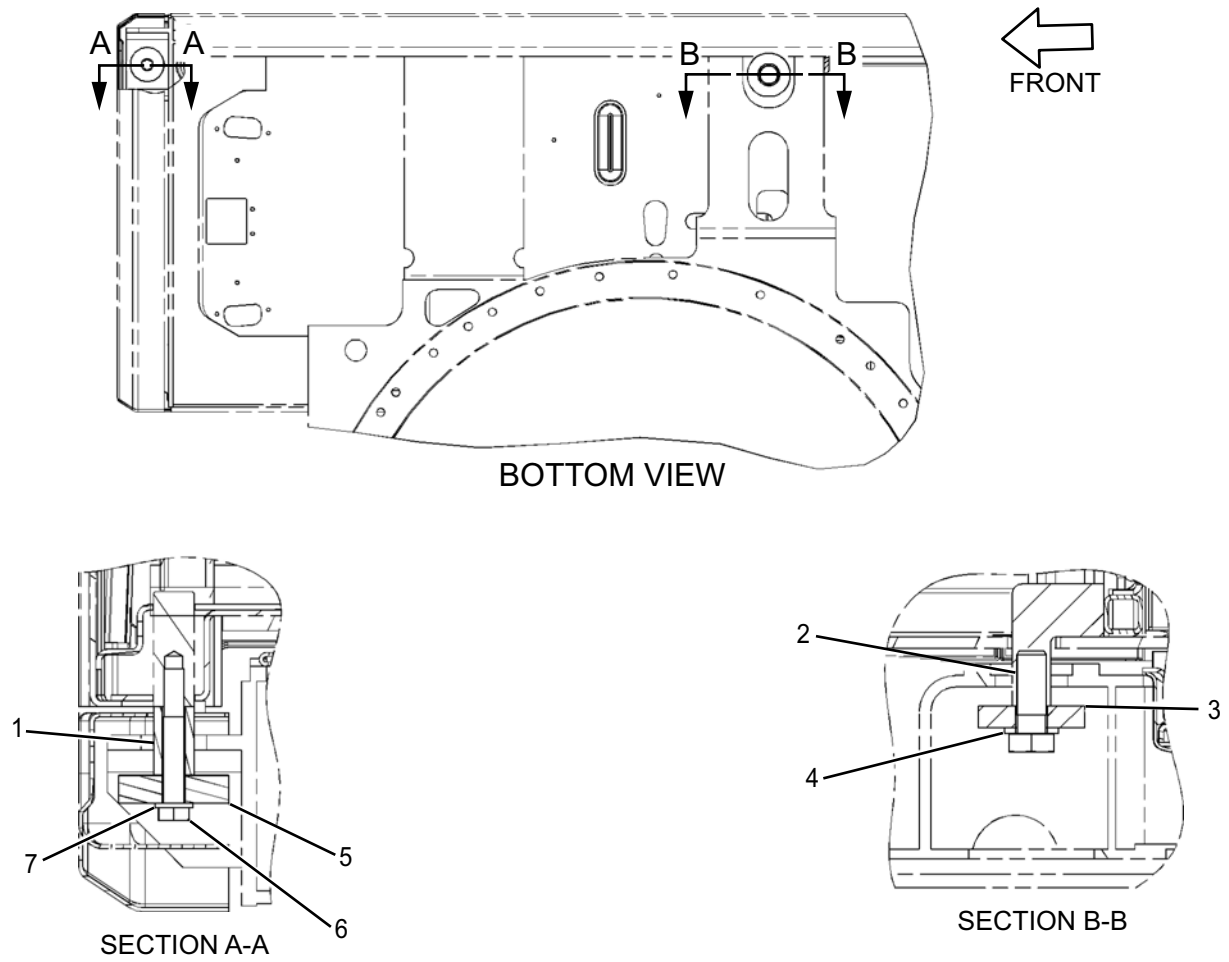


TABLE FOR FIGURE 03-20:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	316-8931	SLEEVE (FRONT)	1	
2	145-2970	BOLT (M30X3.5X85-MM) (M30X3.5X85-MM)	1	
3	353-2087	STOP (REAR)	1	
4	451-2178	WASHER-HARD	1	
5	316-8932	STOP (FRONT)	1	
6	453-1256	BOLT	1	
7	451-2175	WASHER-HARD (17.5X30X3.5-MM THK)	1	

FIGURE 03-21 LINES GP-WINDOW WASHER

TABLE FOR FIGURE 03-21:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	357-3977	LINES GP-WINDOW WASHER		
2	6V-3265	CLIP		
3	8T-4121	WASHER-HARD (11X21X2.5-MM THK)		
4	8T-4191	BOLT (M10X1.5X16-MM)		
5	9K-0700	GROMMET		

FIGURE 03-22 LINES GP-WINDOW WASHER

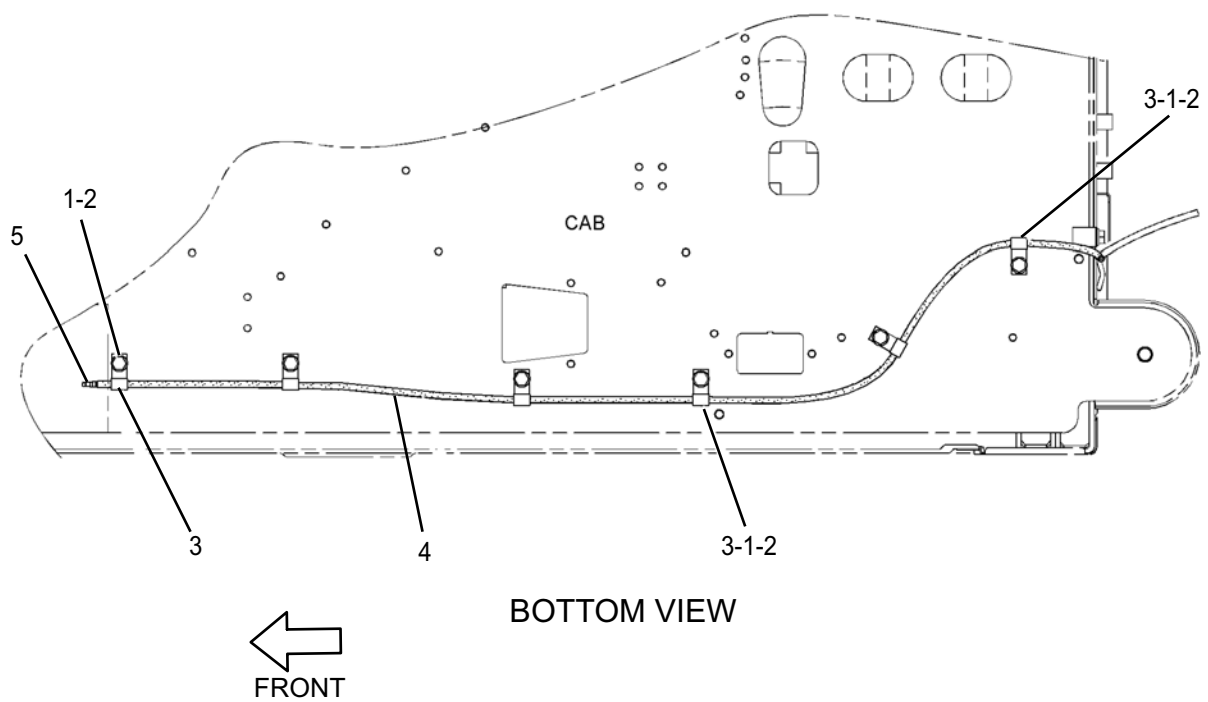


TABLE FOR FIGURE 03-22:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	8T-4191	BOLT (M10X1.5X16-MM)	6	
2	8T-4121	WASHER-HARD (11X21X2.5-MM THK)	6	
3	6V-3265	CLIP	6	
4	144-0195	HOSE (140-CM)	AR	
5	7Y-3474	VALVE AS-CHECK (WINDOW WASHER)	1	

FIGURE 03-23 CAB GP

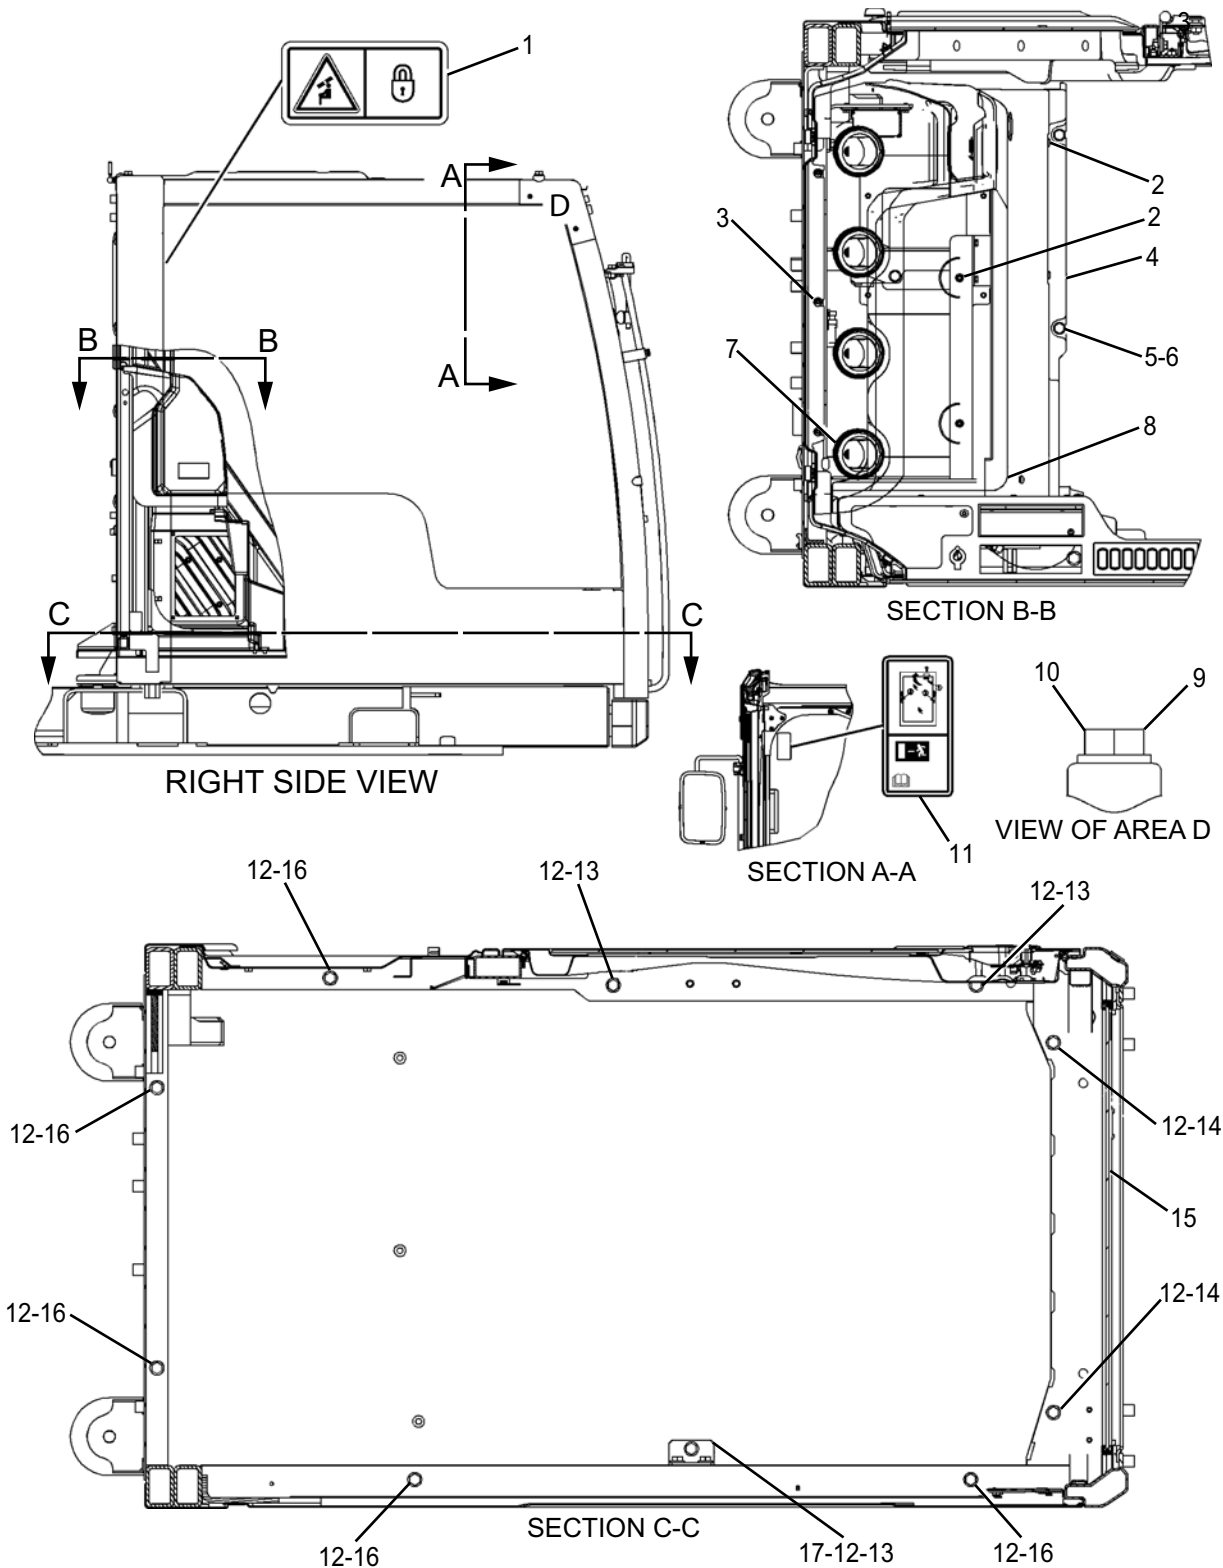


TABLE FOR FIGURE 03-23:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	331-8008	FILM-WARNING (FRONT WINDOW, READ OMM, INTL)	1	
2	128-2135	SCREW-TRUSS HEAD (M6X1X13-MM)	5	
3	128-2136	SCREW-TRUSS HEAD (M6X1X16-MM)	3	
4	327-6554	COVER	1	
5	8T-4121	WASHER-HARD (11X21X2.5-MM THK)	3	
6	8T-4191	BOLT (M10X1.5X16-MM)	3	
7	164-8474	LOUVER AS-VENT	4	
8	327-6616	COVER GP-CAB	1	
9	8T-4190	BOLT (M16X2X25-MM)	4	
10	9X-8257	WASHER (17.5X30X3.5-MM THK)	4	
11	331-7979	FILM-INSTRUCTION (ALTERNATE EXIT, READ OMM)	1	
12	8T-4223	WASHER-HARD (13.5X25.5X3-MM THK)	12	
13	8T-4179	BOLT (M12X1.75X20-MM)	5	
14	8T-4192	BOLT (M12X1.75X25-MM)	2	
15	353-2046	CAB GP	1	
16	8T-4648	BOLT (M12X1.75X70-MM)	5	
17	235-9001	SUPPORT	1	

FIGURE 03-24 COVER GP-CAB

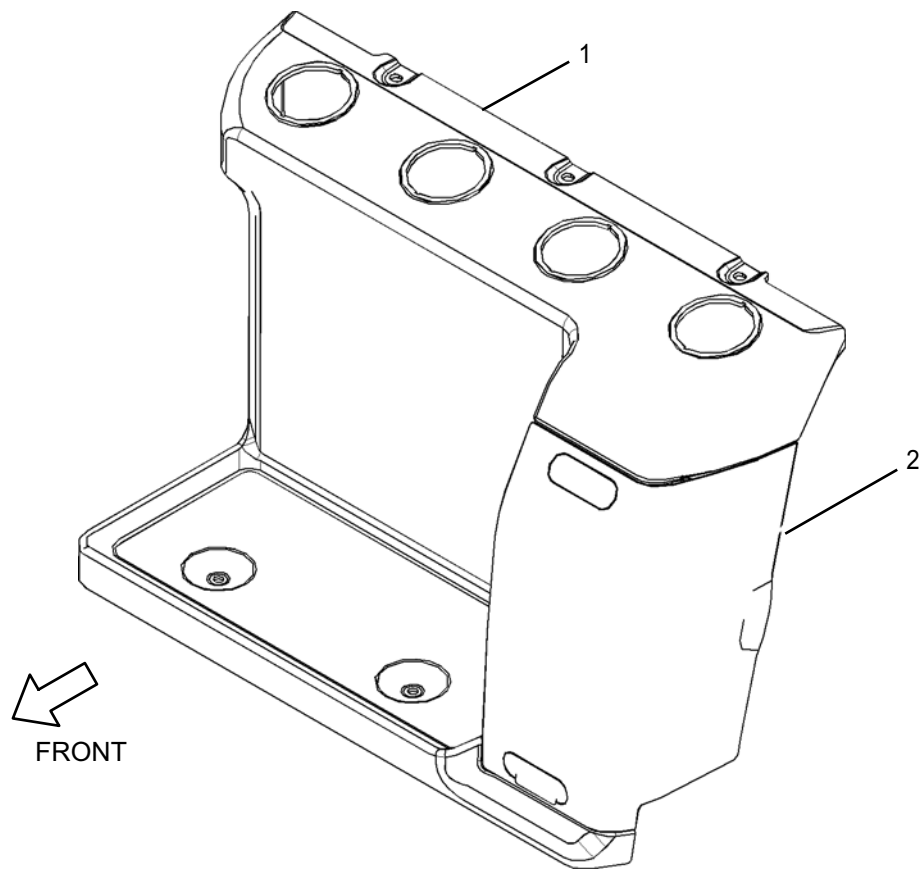


TABLE FOR FIGURE 03-24:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	327-6486	COVER	1	
2	327-6487	COVER	1	

FIGURE 03-25 CAB GP

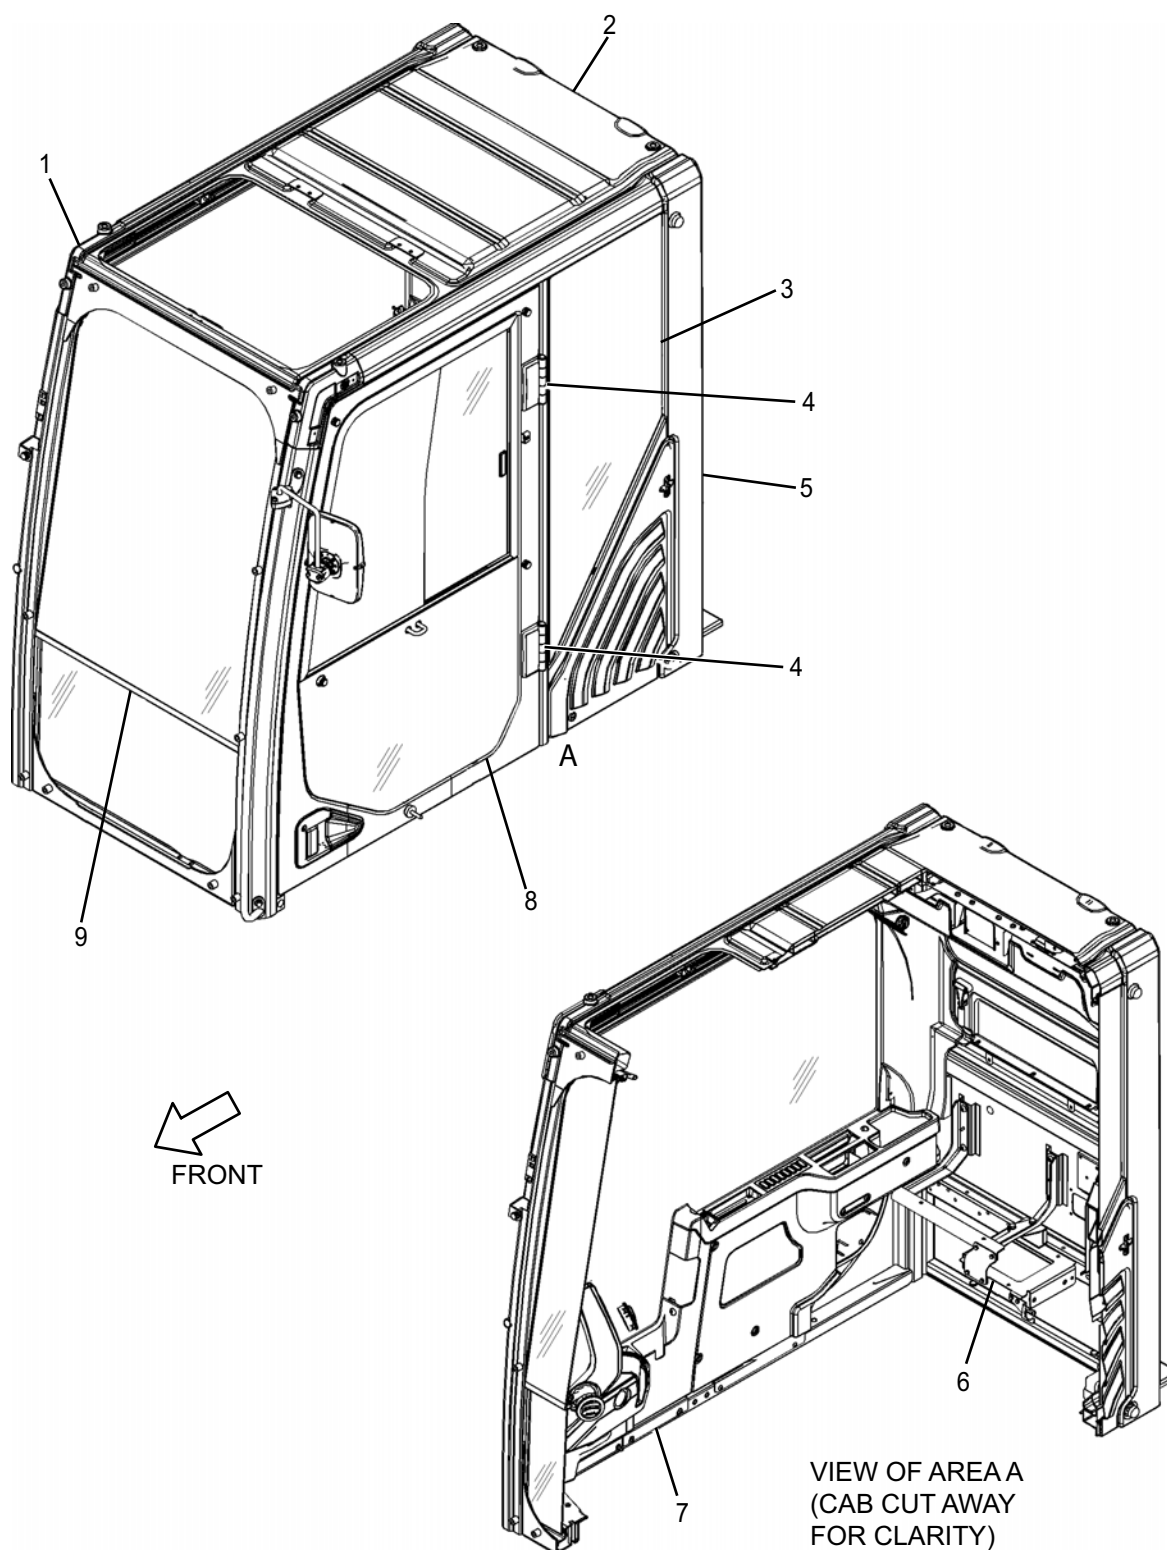


TABLE FOR FIGURE 03-25:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	346-7953	COVER GP-CAB	1	
2	353-1845	CAB GP (EXTERIOR)	1	
3	342-3549	WINDOW GP-CAB (FRONT, REAR, SIDE)	1	
4	151-6777	HINGE	2	
5	357-3891	CAB AS	1	
6	333-4161	BRACKET GP-MOUNTING	1	
7	333-4344	CAB GP (INTERIOR)	1	
8	346-8062	DOOR GP-CAB	1	
	185-8182	•BOLT (M10X1.5X20-MM)	6	
	185-8187	•WASHER (10.2X22X3.2-MM THK)	6	
	9X-2041	•SCREW-TRUSS HEAD (M10X1.5X20-MM)	6	
9	327-6625	WINDOW GP-CAB (FRONT, UPPER)	1	

FIGURE 03-26 BRACKET GP-MOUNTING

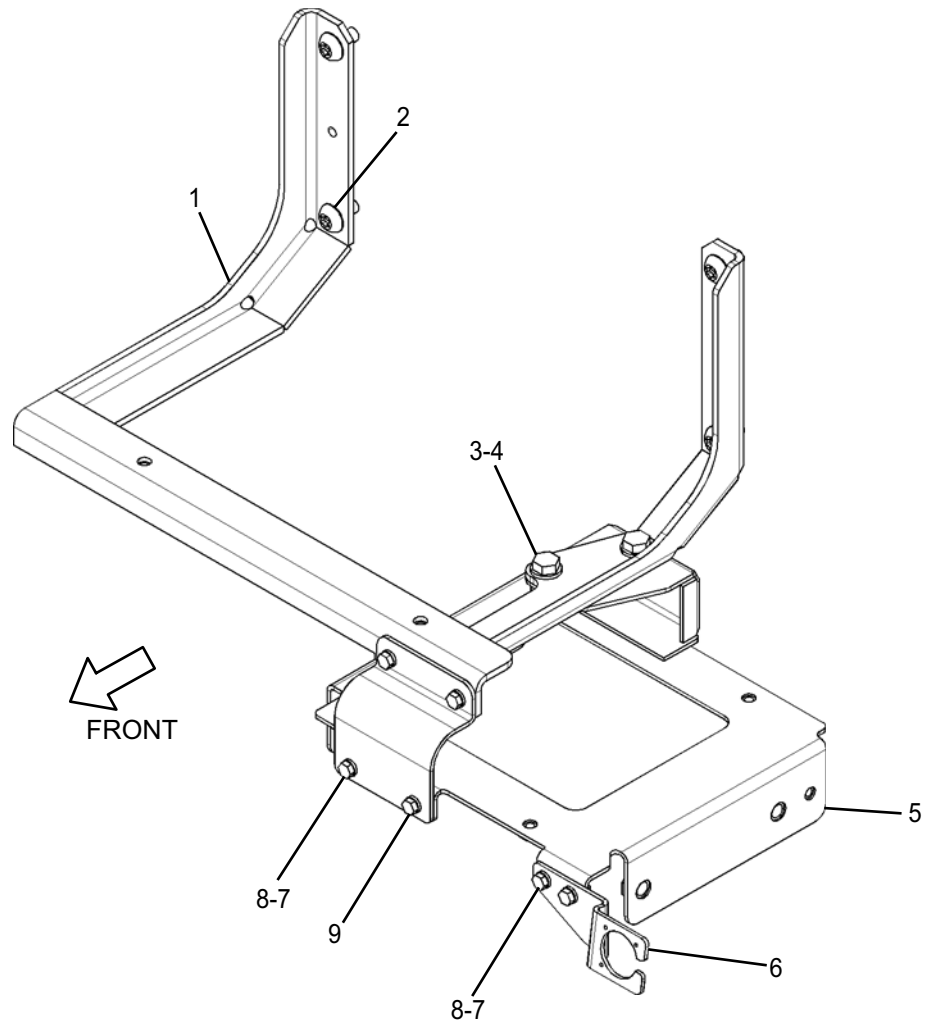


TABLE FOR FIGURE 03-26:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	346-7998	BRACKET AS	1	
2	9X-2041	SCREW-TRUSS HEAD (M10X1.5X20-MM)	4	
3	8T-4121	WASHER-HARD (11X21X2.5-MM THK)	2	
4	8T-4137	BOLT (M10X1.5X20-MM)	2	
5	346-7957	BRACKET AS	1	
6	342-3564	BRACKET	1	
7	9X-8256	WASHER (6.6X12X2-MM THK)	6	
8	5C-9553	BOLT (M6X1X16-MM)	6	
9	333-4176	BRACKET	1	

FIGURE 03-27 CAB GP-INTERIOR

TABLE FOR FIGURE 03-27:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	333-4345	COVER GP-CAB (REAR)	1	
2	333-4346	COVER GP-CONSOLE (WIPER MOTOR)	1	
3	333-4347	COVER GP-CAB (RH)	1	

FIGURE 03-28 COVER GP-CAB-REAR

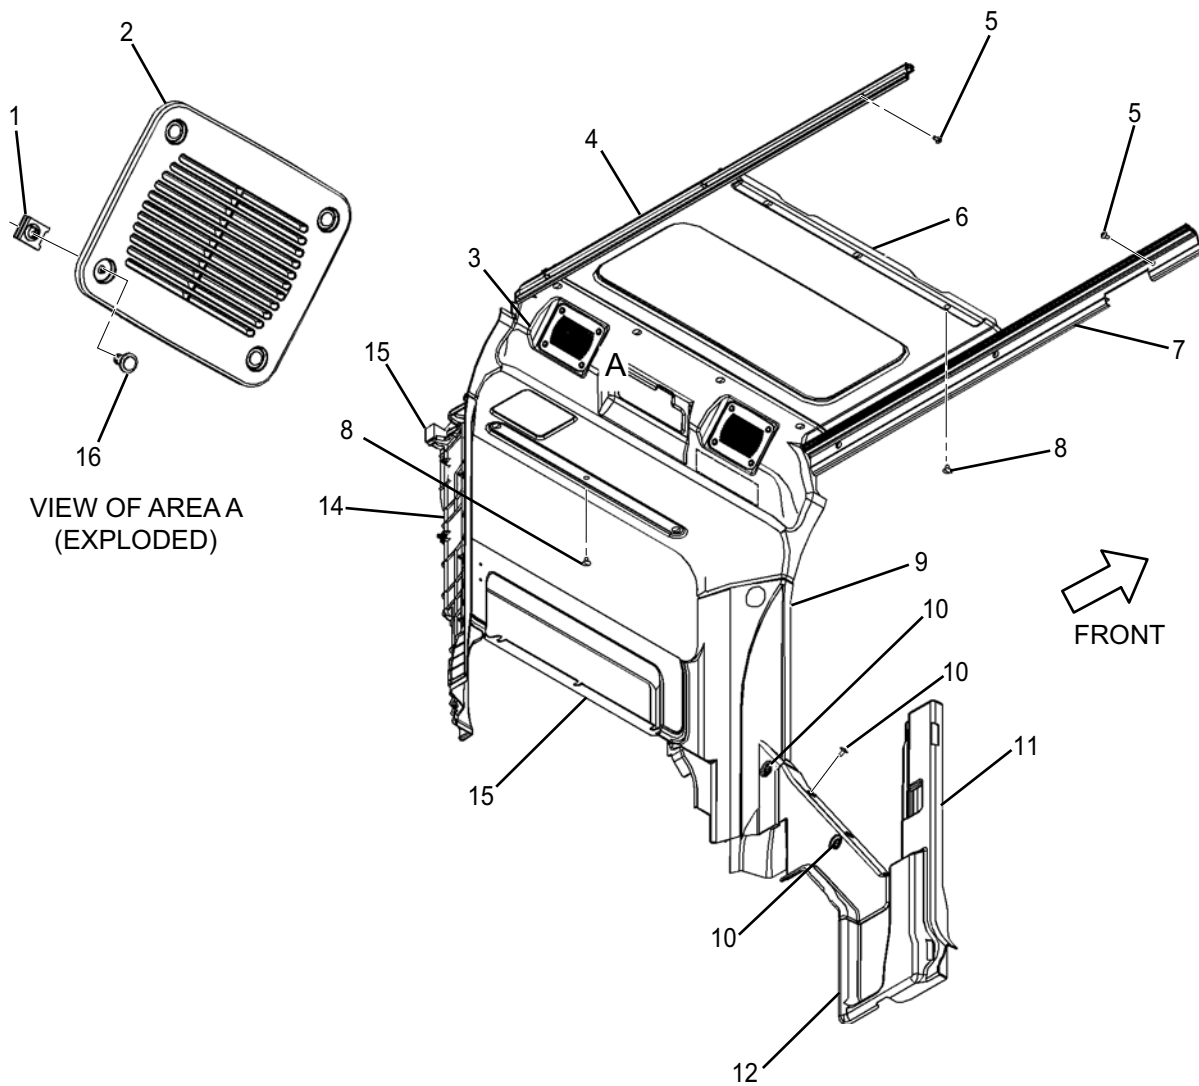


TABLE FOR FIGURE 03-28:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	234-6579	NUT-SPEED	8	
2	333-4353	COVER	2	
3	327-6476	COVER	1	
4	357-3898	RAIL AS (RH)	1	
5	128-2135	SCREW-TRUSS HEAD (M6X1X13-MM)	6	
6	327-6480	COVER	1	
7	357-3899	RAIL AS (LH)	1	
8	185-8205	CLIP	10	
9	346-7361	COVER AS	1	
10	357-3975	RIVET	5	
11	342-3747	COVER AS	1	
	170-9724	•CLIP	6	
	327-6475	•COVER	1	
12	340-6742	COVER	1	
13	346-7366	COVER AS	1	
14	346-7363	COVER AS	1	
	357-3901	•STOP	1	
15	357-3964	SPACER	2	
16	171-7325	SCREW-TAPPING (M5X0.8-THD)	8	

FIGURE 03-29 COVER GP-CONSOLE-WIPER MOTOR

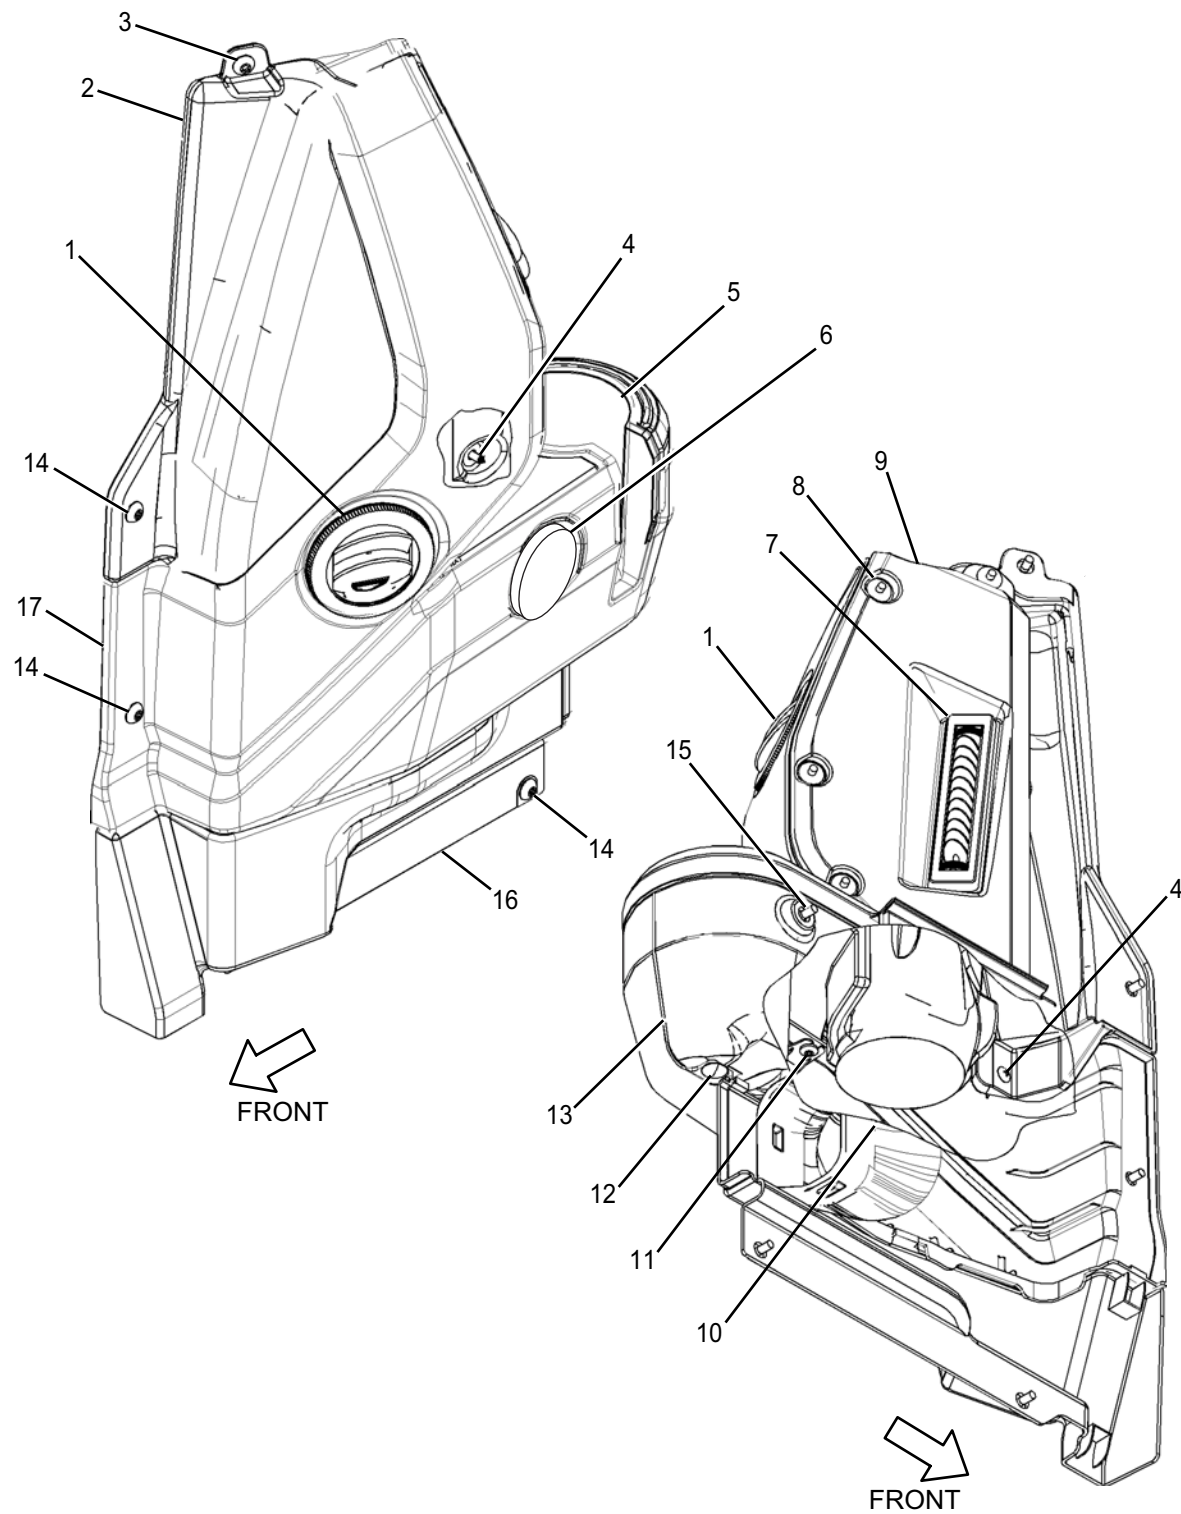


TABLE FOR FIGURE 03-29:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	164-8474	LOUVER AS-VENT	1	
2	327-6465	COVER	1	
3	9X-2042	SCREW-TRUSS HEAD (M6X1X12-MM)	1	
4	245-7790	SCREW - TAPPING	1	
5	346-7372	COVER	1	
6	A-04253-703	PLUG	1	
7	8Y-6352	LOUVER AS	1	
8	357-3966	FASTENER	1	
9	327-6464	COVER	1	
10	333-4363	DUCT	1	
11	099-0823	SCREW-MACHINE (M6X1X6-MM)	1	
12	185-8205	CLIP	1	
13	327-6466	COVER	1	
14	128-2135	SCREW-TRUSS HEAD (M6X1X13-MM)	1	
15	128-2136	SCREW-TRUSS HEAD (M6X1X16-MM)	1	
16	327-6467	COVER	1	
17	327-6463	COVER	1	

FIGURE 03-30 COVER GP-CAB-RH

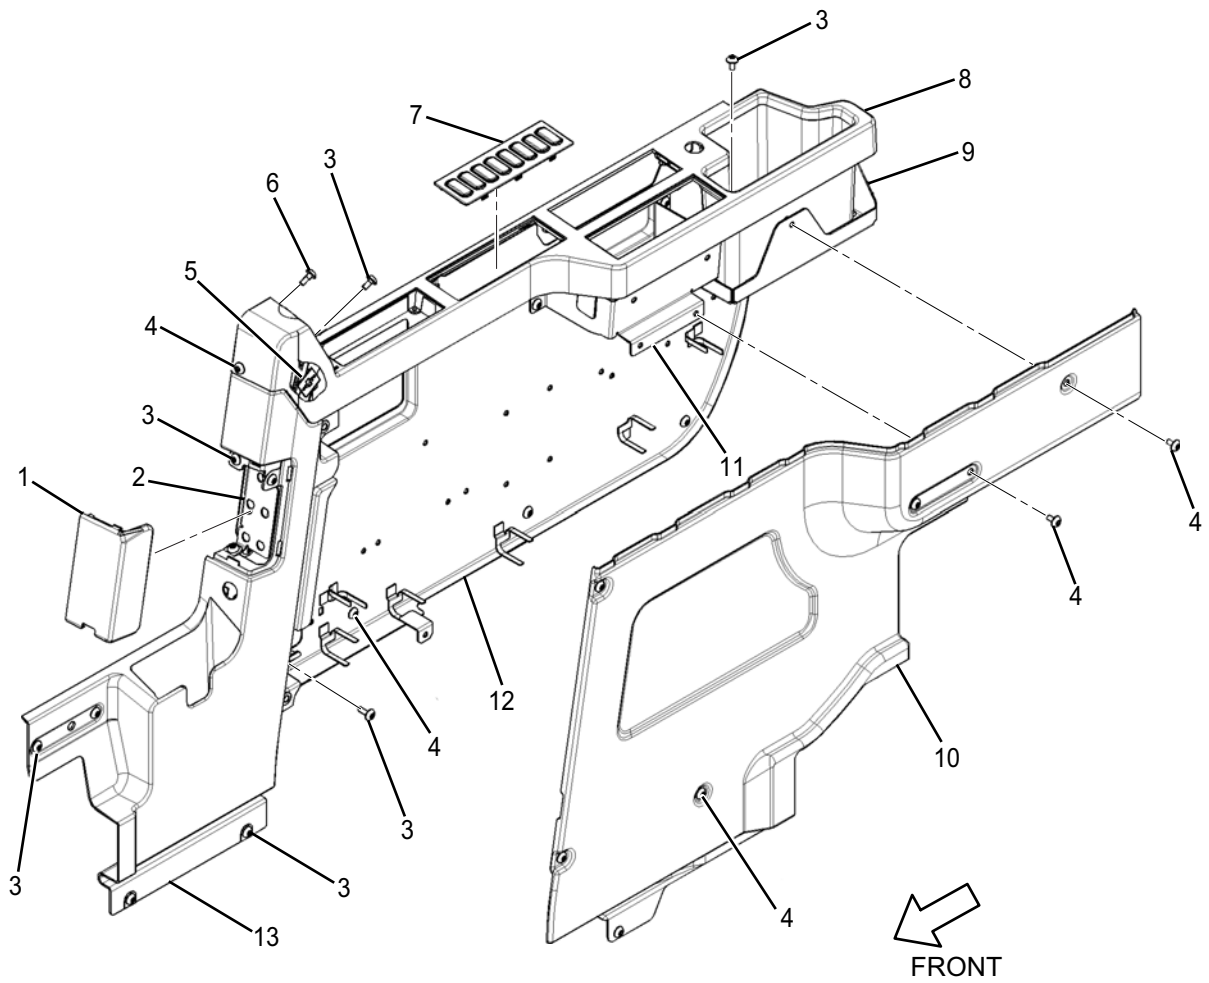


TABLE FOR FIGURE 03-30:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	327-6472	COVER	1	
2	346-7359	BRACKET AS	1	
3	128-2135	SCREW-TRUSS HEAD (M6X1X13-MM)	12	
4	9X-2042	SCREW-TRUSS HEAD (M6X1X12-MM)	26	
5	235-8966	BASE-MOUNTING	1	
6	128-2136	SCREW-TRUSS HEAD (M6X1X16-MM)	12	
7	164-0655	PANEL-SWITCH	1	
8	357-3861	COVER AS	1	
9	333-4366	BRACKET AS	1	
10	327-6471	COVER	1	
11	333-4365	BRACKET AS	1	
12	333-4364	PANEL AS	1	
13	327-6470	COVER	1	

FIGURE 03-31 DOOR GP-CAB-PARTIAL

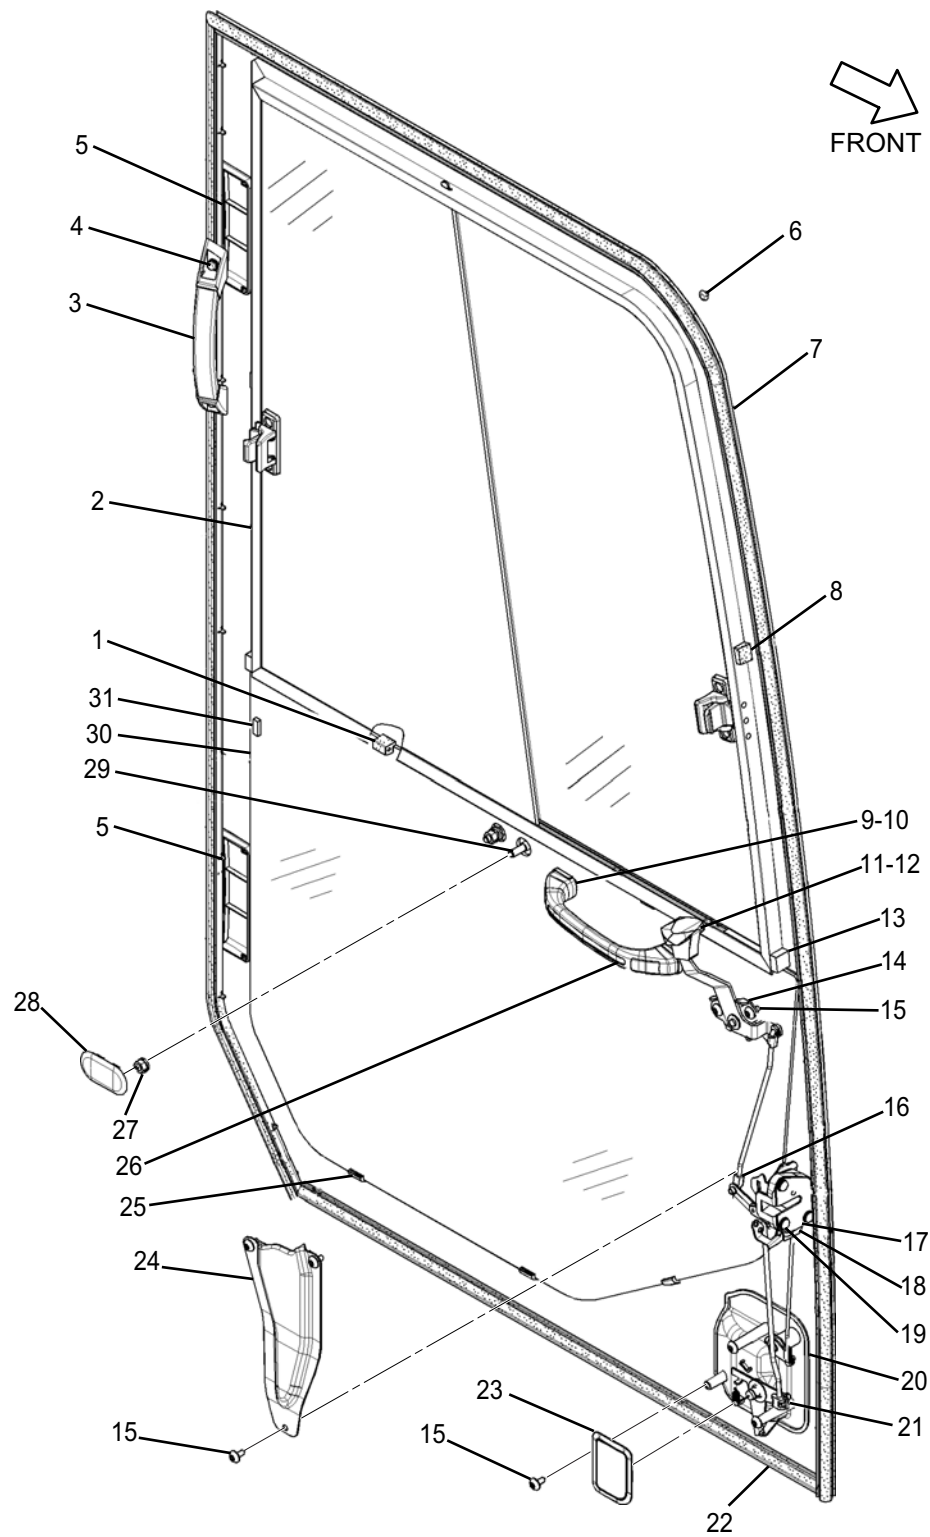


TABLE FOR FIGURE 03-31:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	334-6526	SPACER	2	
2	383-5650	WINDOW GP-DOOR	1	
3	189-2690	HANDLE	1	
4	101-8900	SCREW AS (M6X1X20-MM)	2	
5	156-6643	COVER	2	
6	334-6538	BUSHING-RUBBER	1	
7	334-6528	SEAL AS	1	
	151-9497	•CLIP	23	
8	151-9461	SPACER	2	
9	151-6703	HANDLE-PULL	1	
10	101-8899	SCREW AS (M6X1.0X16-MM)	2	
11	4I-4286	KNOB (HANDLE)	1	
12	096-2622	SCREW-MACHINE (M4X0.7X8-MM)	2	
13	334-6527	SPACER	2	
14	161-3639	HANDLE AS	1	
15	9X-2042	SCREW-TRUSS HEAD (M6X1X12-MM)	8	
16	164-0519	CLIP	1	
17	185-8180	SCREW (M6X1X16-MM)	3	
18	334-6535	LATCH AS	1	
19	164-0514	CLIP	1	
20	334-6537	HANDLE AS	1	
	201-4391	•CLIP	1	
21	164-0515	JOINT	1	
22	334-6531	SEAL AS	1	
	334-6530	•CLIP	1	
23	259-7354	COVER	5	
24	334-6536	COVER	1	

TABLE FOR FIGURE 03-31: (Cont.)

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
25	178-5573	SPACER	3	
26	151-6704	CAP (HANDLE)	2	
27	096-3884	NUT-SPRING (M8X1.25-THD)	2	
28	167-7039	GROMMET	1	
29	334-6534	HOOK	1	
30	334-6533	GLASS	1	
31	178-5574	SPACER	2	

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 03-32 SPACER-RUBBER

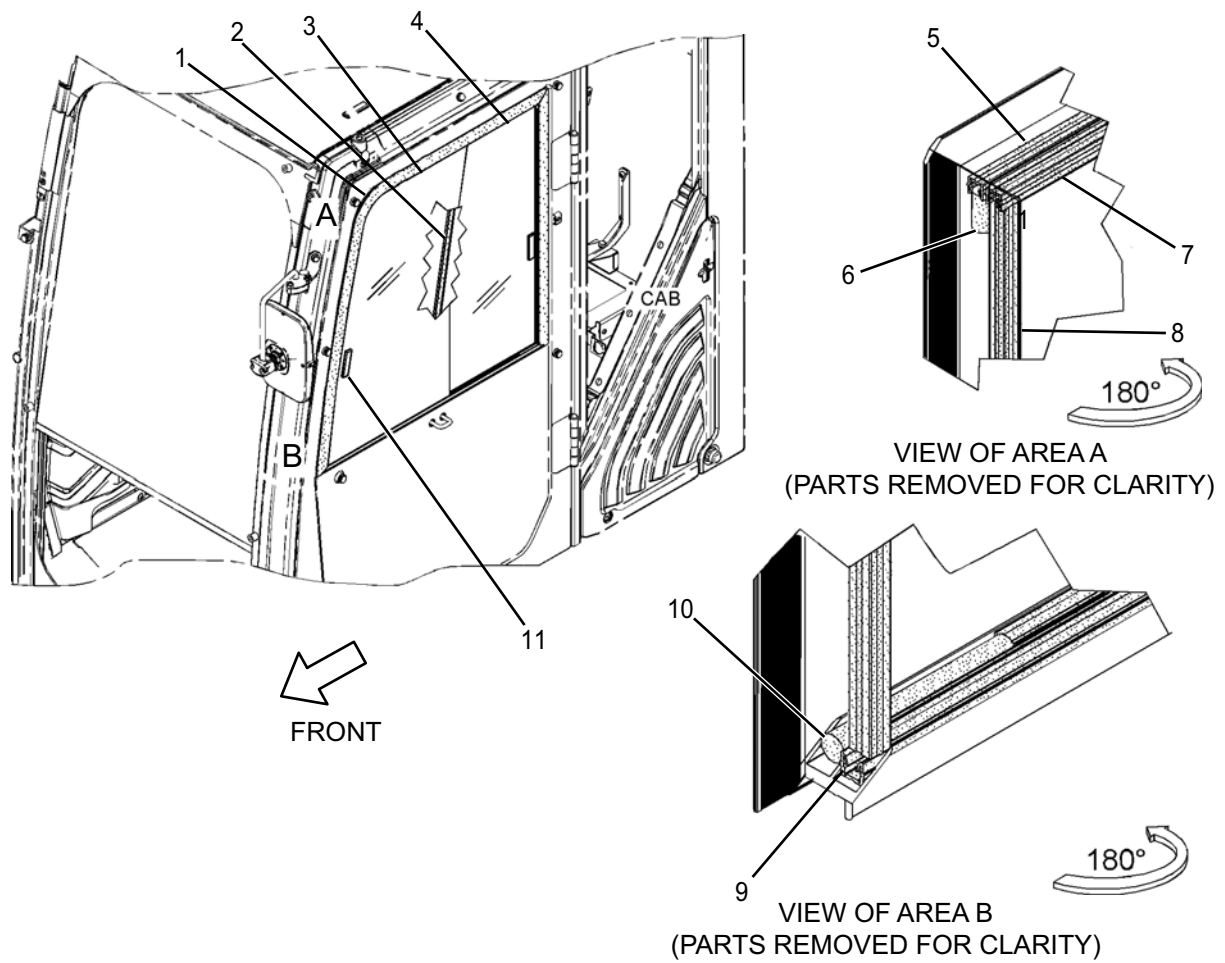


TABLE FOR FIGURE 03-32:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	383-5556	FRAME AS	1	
2	383-5651	SEAL AS	1	
3	383-5583	GLASS	1	
4	383-5582	GLASS	1	
5	383-5577	SEAL	1	
6	383-5545	SPACER-RUBBER	1	
7	383-5578	SEAL	1	
8	383-5580	SEAL	1	
9	383-5579	SEAL	2	
10	383-5581	SPACER-RUBBER	2	
11	085-6444	LATCH GP-WINDOW	2	

FIGURE 03-33 LATCH GP-WINDOW

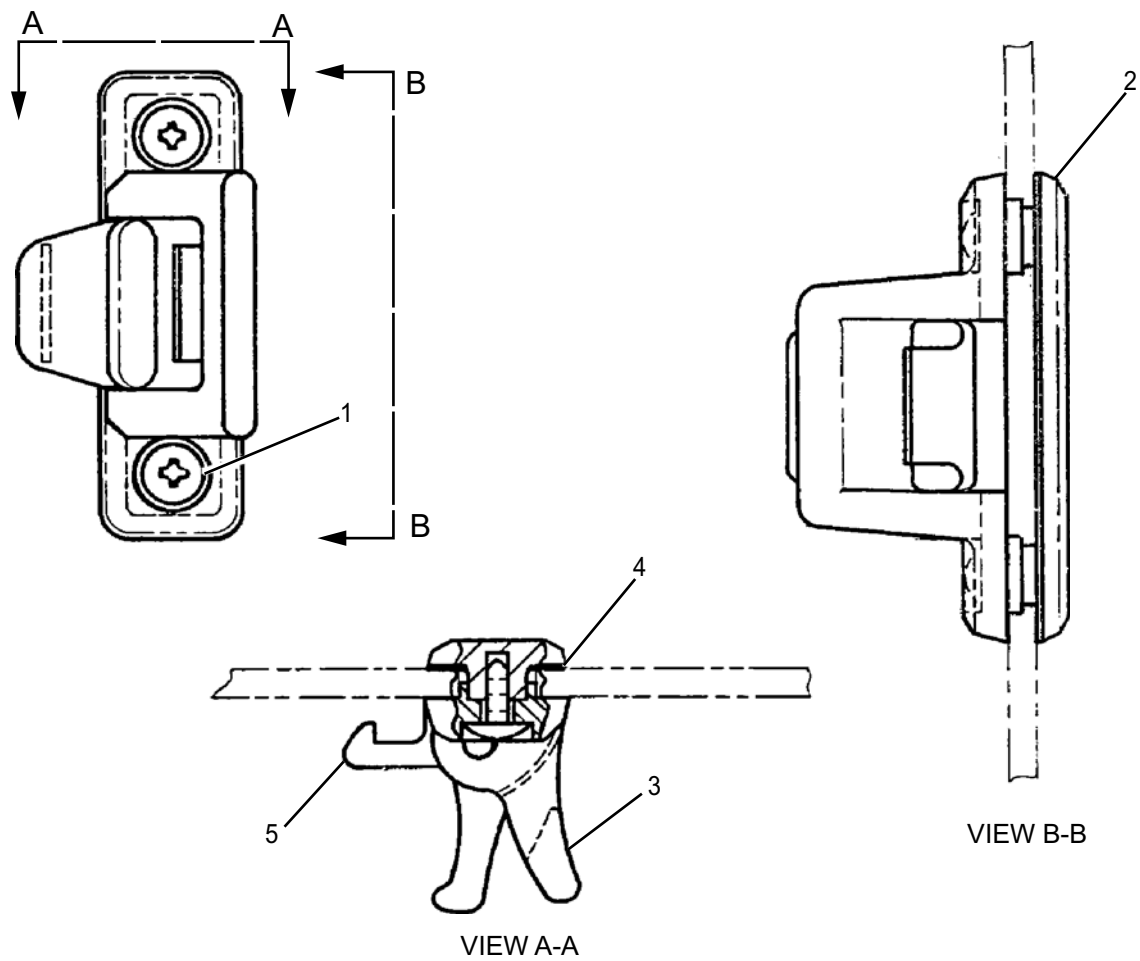


TABLE FOR FIGURE 03-33:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	085-6448	SCREW-TAPPING	2	
2	085-6447	RETAINER	1	
3	085-6446	LOCK	1	
4	085-6449	PACKING	1	
5	085-6445	LOCK	1	

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 03-34 CAB GP-EXTERIOR (SHEET 1 OF 2)

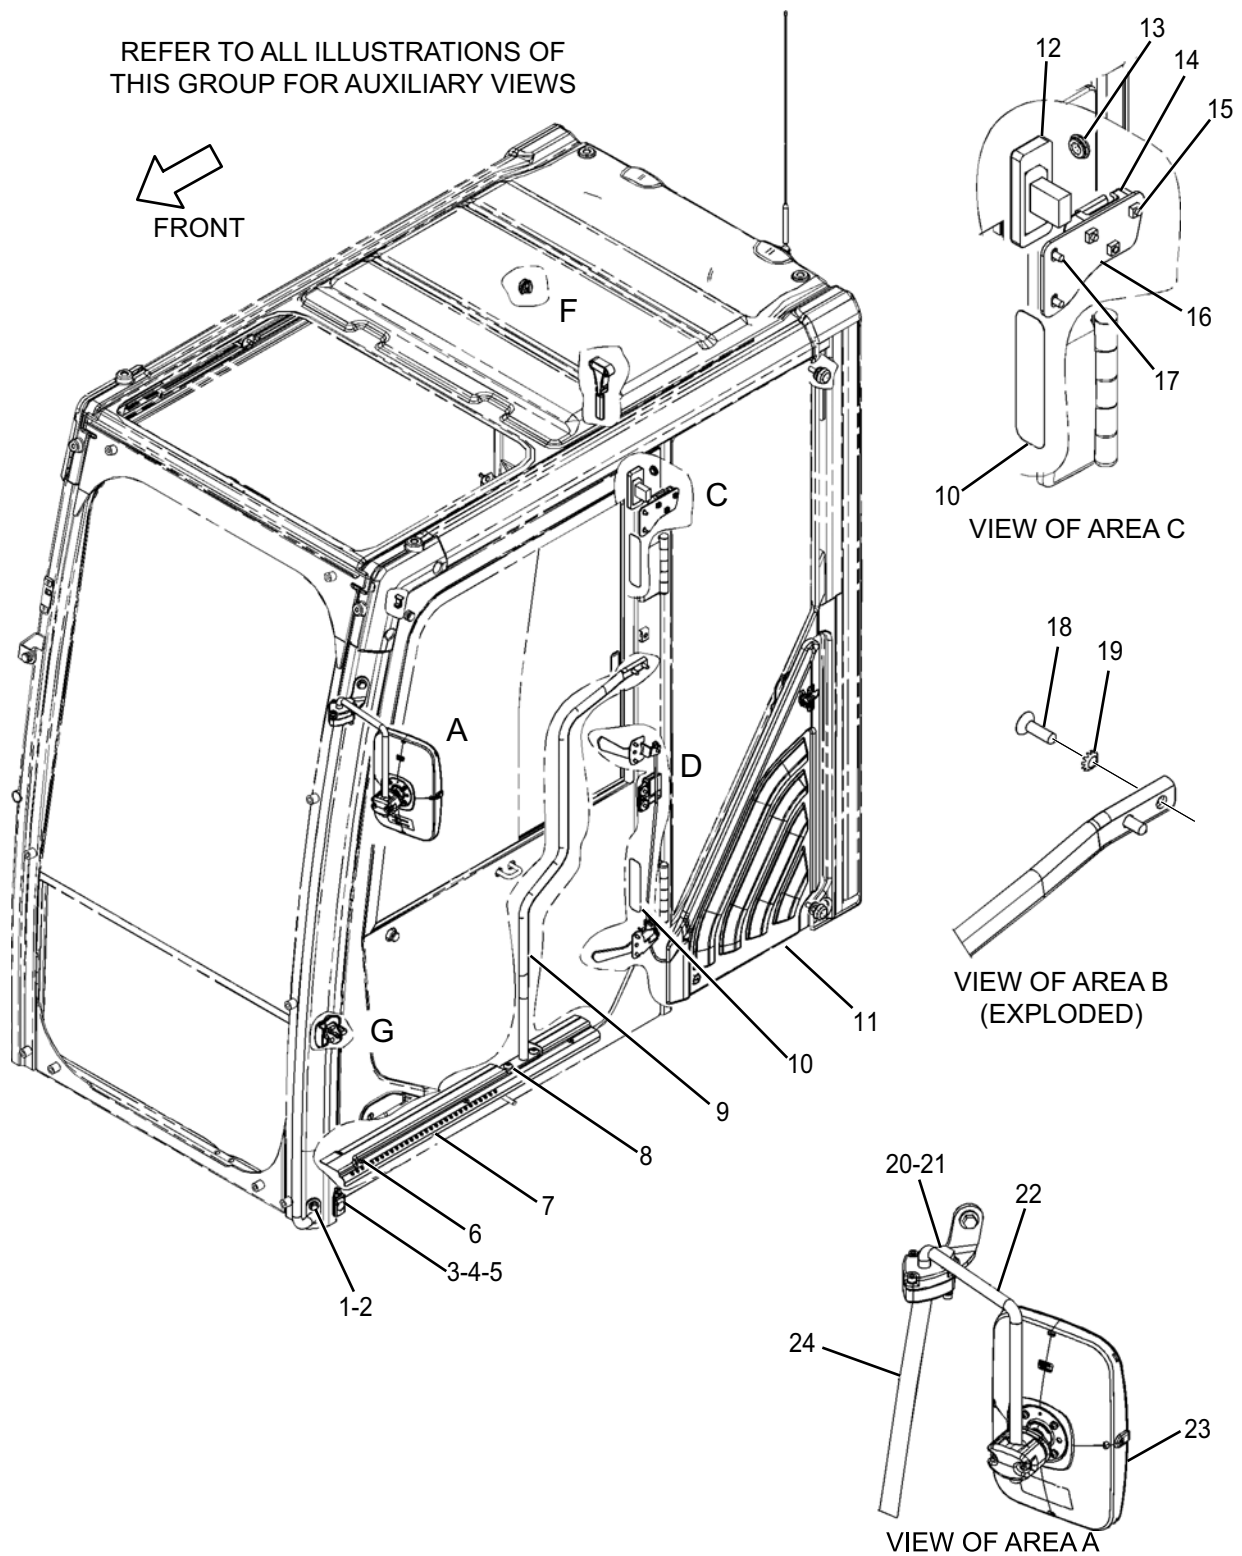


FIGURE 03-34 CAB GP-EXTERIOR (SHEET 2 OF 2)

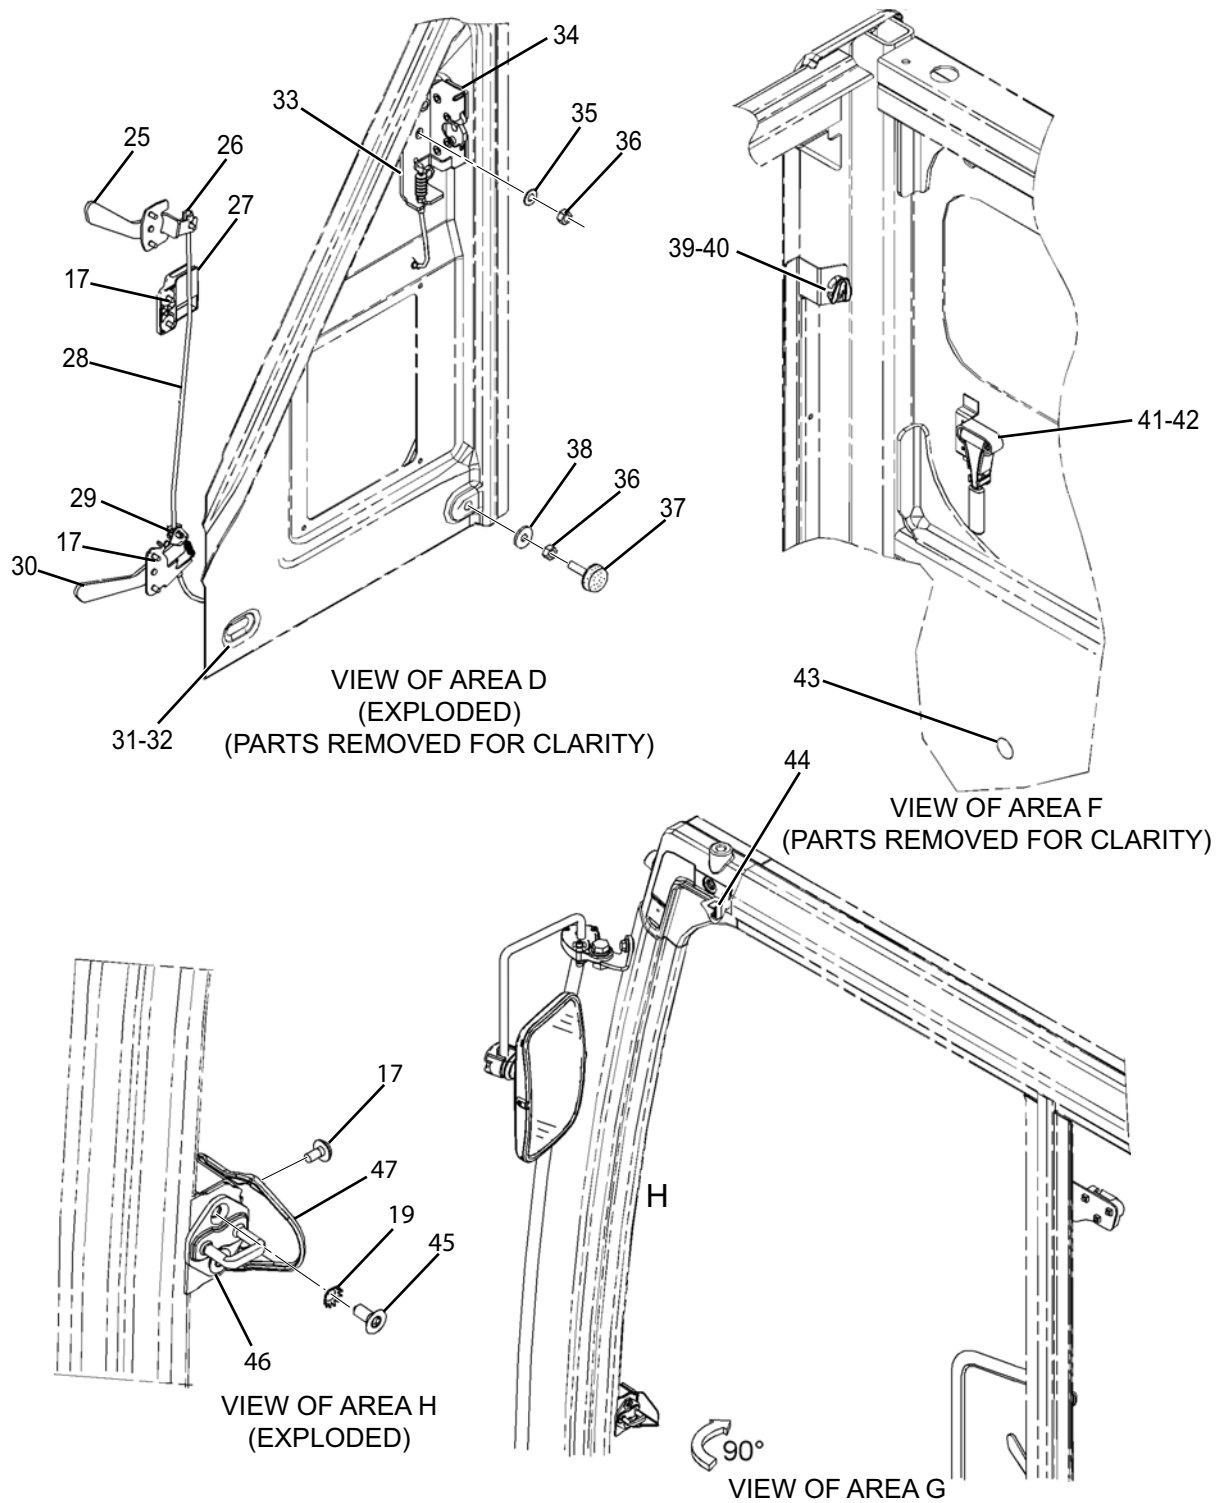


TABLE FOR FIGURE 03-34:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	8T-4137	BOLT (M10X1.5X20-MM)	2	
2	4I-3144	WASHER-HARD (10.2X22X3.2-MM THK)	2	
3	334-6566	STOP	1	
4	334-6567	COVER	1	
5	128-2135	SCREW-TRUSS HEAD (M6X1X13-MM)	1	
6	099-0823	SCREW-MACHINE (M6X1X6-MM)	3	
7	334-6549	GUARD	1	
8	9X-2041	SCREW-TRUSS HEAD (M10X1.5X20-MM)	2	
9	334-6546	HANDRAIL	1	
10	167-7042	SEAL	2	
11	334-6568	COVER GP-CAB (EXTERIOR)	1	
12	176-1986	LAMP AS-DOME	1	
	201-4417	•LAMP (24-VOLT, 10-WATT)	1	
13	340-6587	GROMMET	1	
14	4I-4270	HOLDER-GLASS	1	
15	3E-8020	SCREW-TRUSS HEAD (M6X1X25-MM)	6	
16	334-6562	BRACKET AS	2	
17	9X-2042	SCREW-TRUSS HEAD (M6X1X12-MM)	16	
18	189-2864	SCREW-FLAT HEAD (M8X1.25X30-MM)	3	
19	1R-5998	LOCKWASHER	4	
20	8T-4779	BOLT (M16X2X35-MM)	1	
21	9X-8257	WASHER (17.5X30X3.5-MM THK)	1	
22	346-7375	BRACKET GP-MOUNTING (MIRROR)	1	
23	327-6550	MIRROR GP-REAR VIEW	1	
24	334-6542	HANDRAIL	1	
25	334-6552	LEVER GP-CAB DOOR	1	
26	340-6586	CLIP	1	

TABLE FOR FIGURE 03-34: (Cont.)

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
27	334-6564	HOLDER	1	
28	334-6551	ROD	1	
29	164-0515	JOINT	2	
30	334-6557	LEVER GP-CAB DOOR	1	
31	163-6795	STRAP-CABLE	2	
32	334-6550	CABLE AS	1	
33	334-6565	BRACKET	1	
34	383-5666	LATCH AS	1	
35	4B-4278	WASHER (10.2X20.5X1.6-MM THK)	1	
36	8T-4133	NUT (M10X1.5-THD)	5	
37	4I-1205	BUMPER	2	
38	099-3607	WASHER-HARD (10.2X30X3.2-MM THK)	2	
39	5C-7793	HOOK-COAT	1	
40	095-0755	SCREW-MACHINE (M4X0.7X12-MM)	2	
41	280-8618	HAMMER	1	
42	171-7325	SCREW-TAPPING (M5X0.8-THD)	2	
43	156-6480	SEAL	1	
44	353-1887	COVER	1	
45	127-0580	SCREW-FLAT HEAD (M8X1.25X20-MM)	2	
46	156-6599	STRIKER	1	
47	353-2024	COVER	1	

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 03-35 MIRROR GP-REAR VIEW


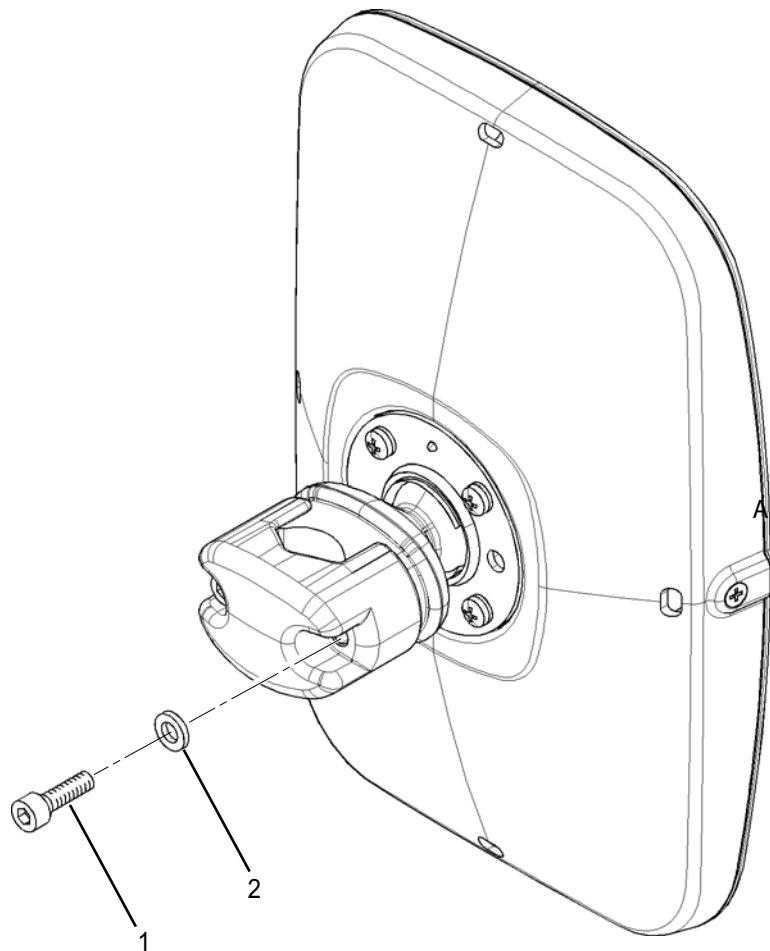



TABLE FOR FIGURE 03-35:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	105-3487	BOLT-SOCKET HEAD (M6X1X20-MM)	2	
2	9X-8256	WASHER (6.6X12X2-MM THK)	2	

FIGURE 03-36 LEVER GP-CAB DOOR

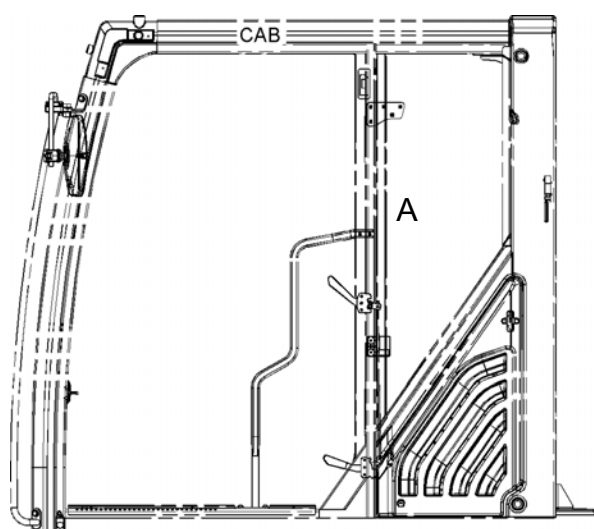

LEFT SIDE VIEW

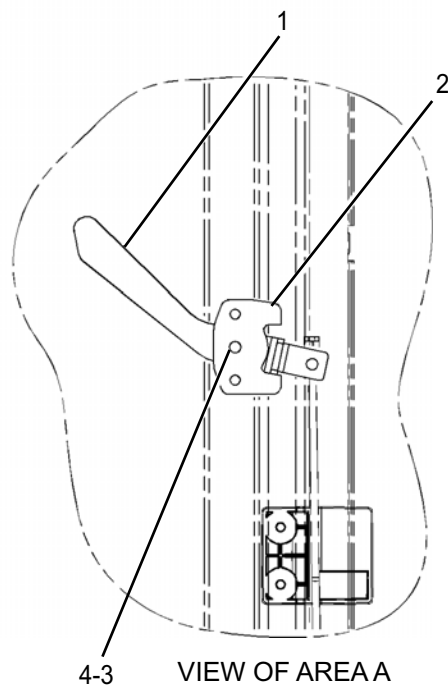

VIEW OF AREA A

TABLE FOR FIGURE 03-36:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	334-6554	LEVER AS	1	
2	334-6553	BRACKET	1	
3	185-8280	WASHER-WAVE (10.5X15X0.3-MM THK)	1	
4	176-1941	PIN	1	

FIGURE 03-37 LEVER GP-CAB DOOR

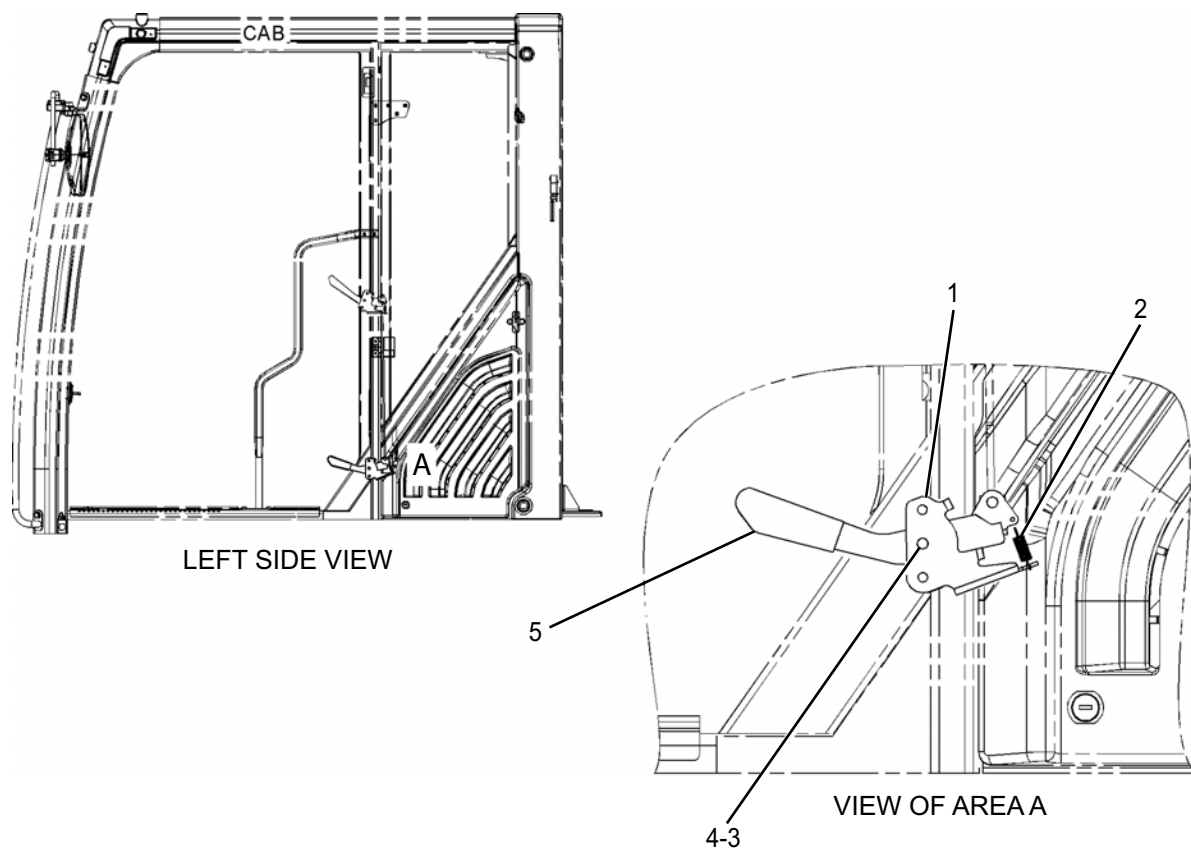


TABLE FOR FIGURE 03-37:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	334-6558	BRACKET	1	
2	185-8281	SPRING	1	
3	185-8280	WASHER-WAVE (10.5X15X0.3-MM THK)	1	
4	176-1941	PIN	1	
5	334-6559	LEVER AS	1	

FIGURE 03-38 COVER GP-CAB-EXTERIOR

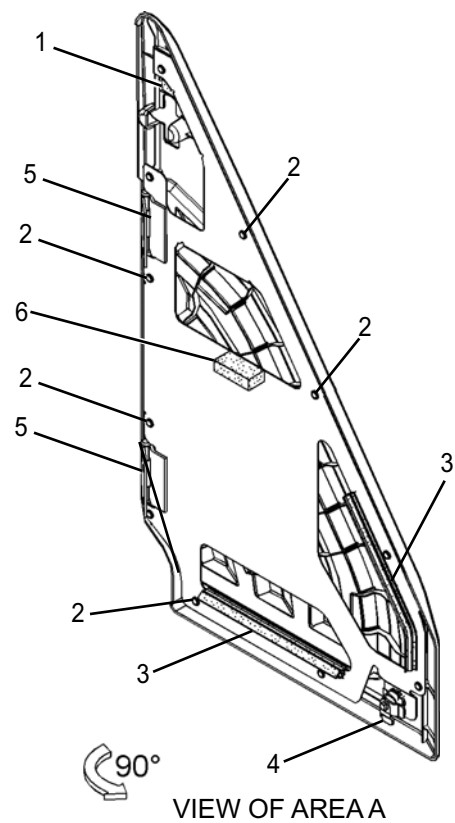
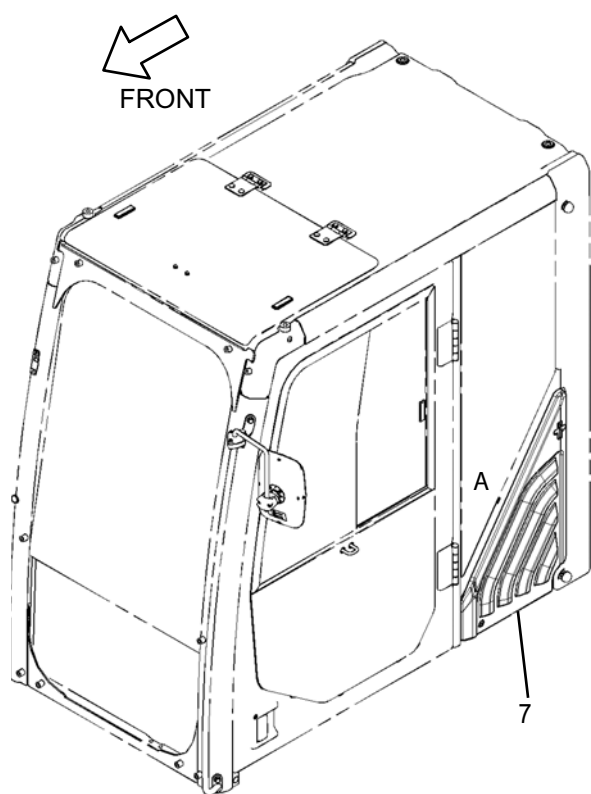


TABLE FOR FIGURE 03-38:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	340-6584	SEAL	1	
2	171-7325	SCREW-TAPPING (M5X0.8-THD)	11	
3	340-6585	SEAL-RUBBER	2	
4	267-7064	LOCK AS	1	
5	340-6582	HINGE	2	
6	383-5644	INSULATION	1	
7	353-2020	COVER GP	1	

FIGURE 03-39 BRACKET GP-MOUNTING-MIRROR

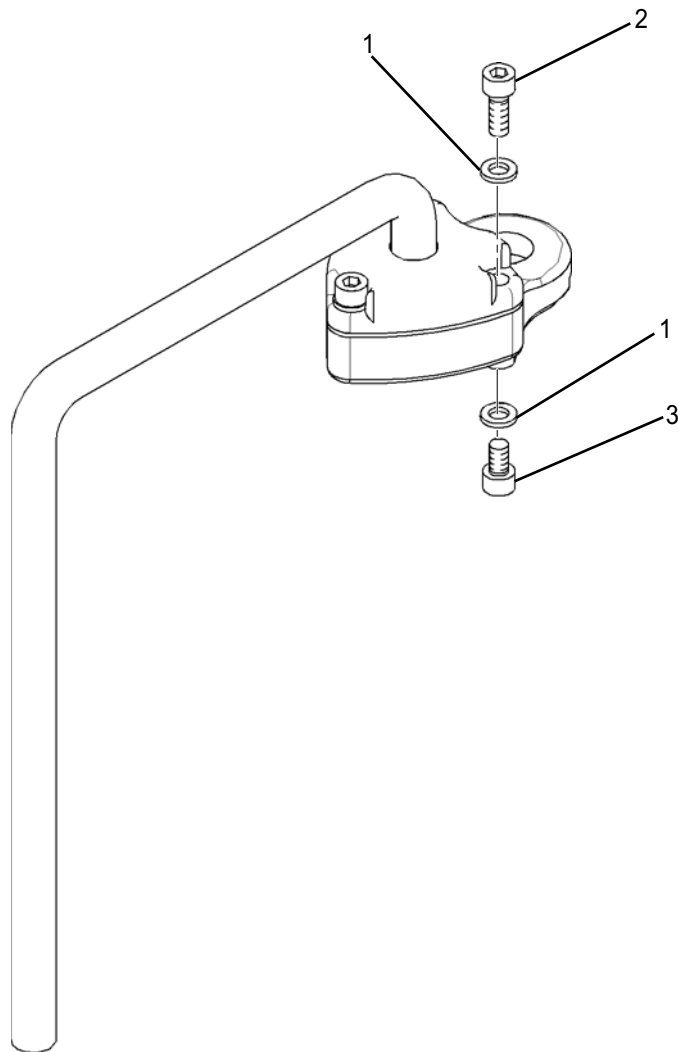


TABLE FOR FIGURE 03-39:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	2U-2552	LOCKWASHER	5	
2	6V-5683	BOLT (M6X1X16-MM)	3	
3	9X-6153	BOLT (M6X1X10-MM)	2	

FIGURE 03-40 COVER GP-CAB

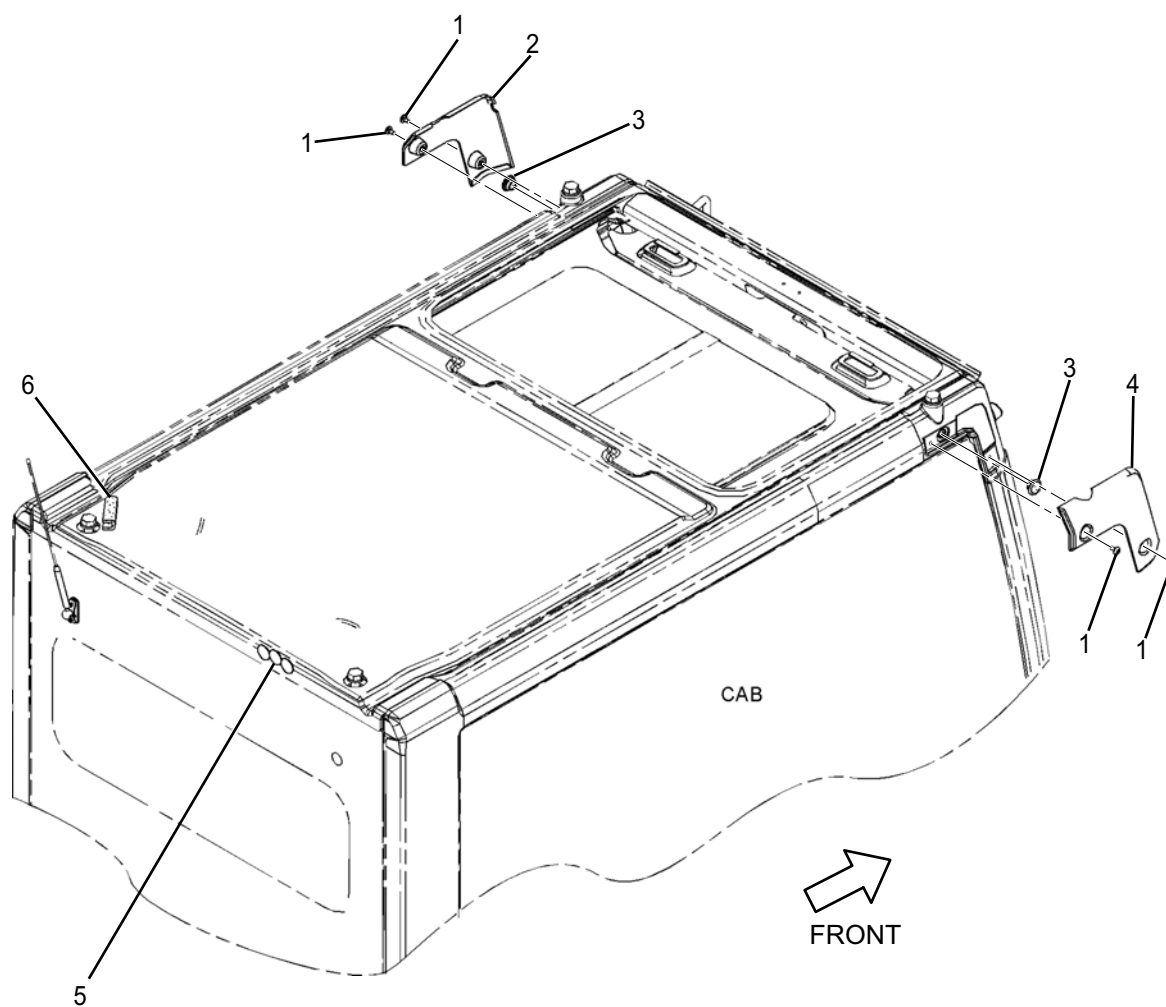


TABLE FOR FIGURE 03-40:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	9X-2042	SCREW-TRUSS HEAD (M6X1X12-MM)	4	
2	346-7976	COVER (LH)	1	
3	178-5570	GROMMET	2	
4	357-4127	COVER (RH)	1	
5	4I-3090	SEAL	3	
6	251-0637	INSULATION	1	

FIGURE 03-41 DOOR GP-CAB-PARTIAL

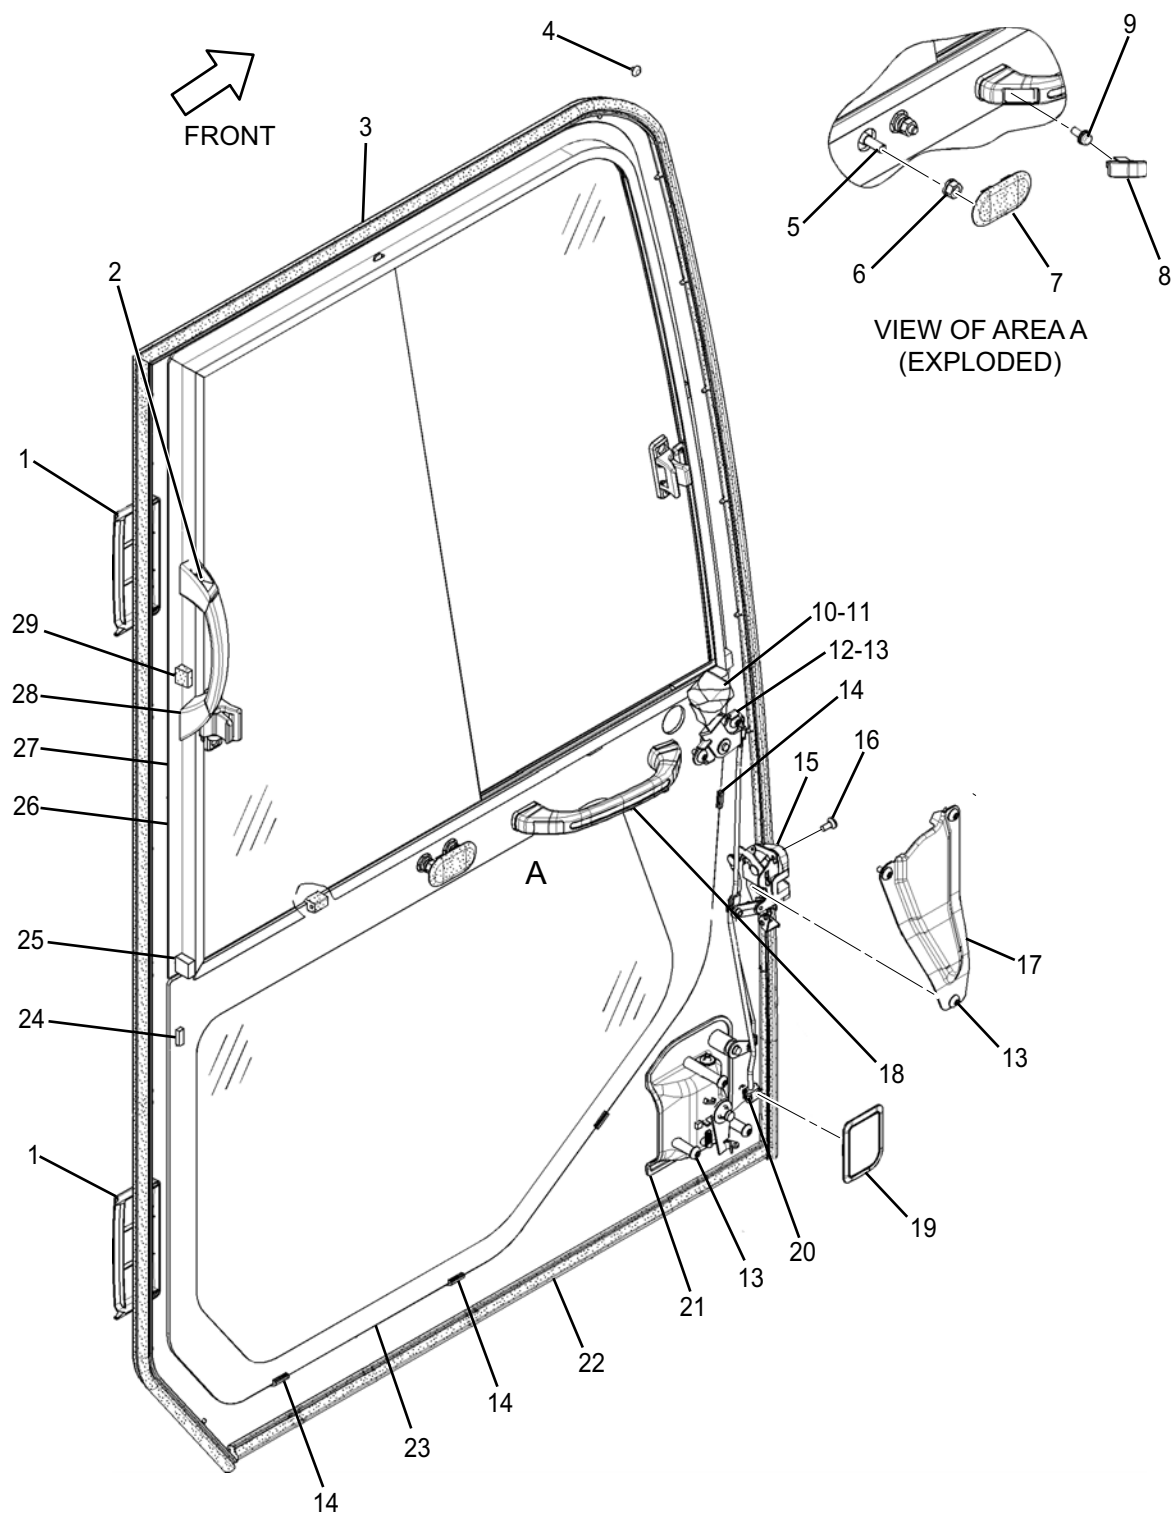


TABLE FOR FIGURE 03-41:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	156-6643	COVER	2	
2	101-8900	SCREW AS (M6X1X20-MM)	2	
3	334-6528	SEAL AS	23	
	151-9497	•CLIP	1	
4	334-6538	BUSHING-RUBBER	1	
5	334-6534	HOOK	1	
6	096-3884	NUT-SPRING (M8X1.25-THD)	2	
7	167-7039	GROMMET	2	
8	151-6704	CAP	1	
9	101-8899	SCREW AS (M6X1.0X16-MM)	2	
10	4I-4286	KNOB	1	
11	096-2622	SCREW-MACHINE (M4X0.7X8-MM)	2	
12	161-3639	HANDLE AS	1	
13	9X-2042	SCREW-TRUSS HEAD (M6X1X12-MM)	8	
14	178-5573	SPACER	3	
15	334-6535	LATCH AS	1	
	164-0514	•CLIP	1	
	164-0519	•CLIP	1	
16	185-8180	SCREW (M6X1X16-MM)	1	
17	334-6536	COVER	1	
18	151-6703	HANDLE-PULL	2	
19	259-7354	COVER	1	
20	164-0515	JOINT	1	
21	334-6537	HANDLE AS	1	
	201-4391	•CLIP	1	
22	334-6531	SEAL AS	5	
	334-6530	•CLIP	1	

TABLE FOR FIGURE 03-41: (Cont.)

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
23	346-8063	GLASS	1	
24	178-5574	SPACER	3	
25	334-6527	SPACER	1	
26	334-6526	SPACER	2	
27	383-5650	WINDOW GP-DOOR	2	
28	189-2690	HANDLE	1	
29	151-9461	SPACER	2	

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 03-42 FUSE BOX

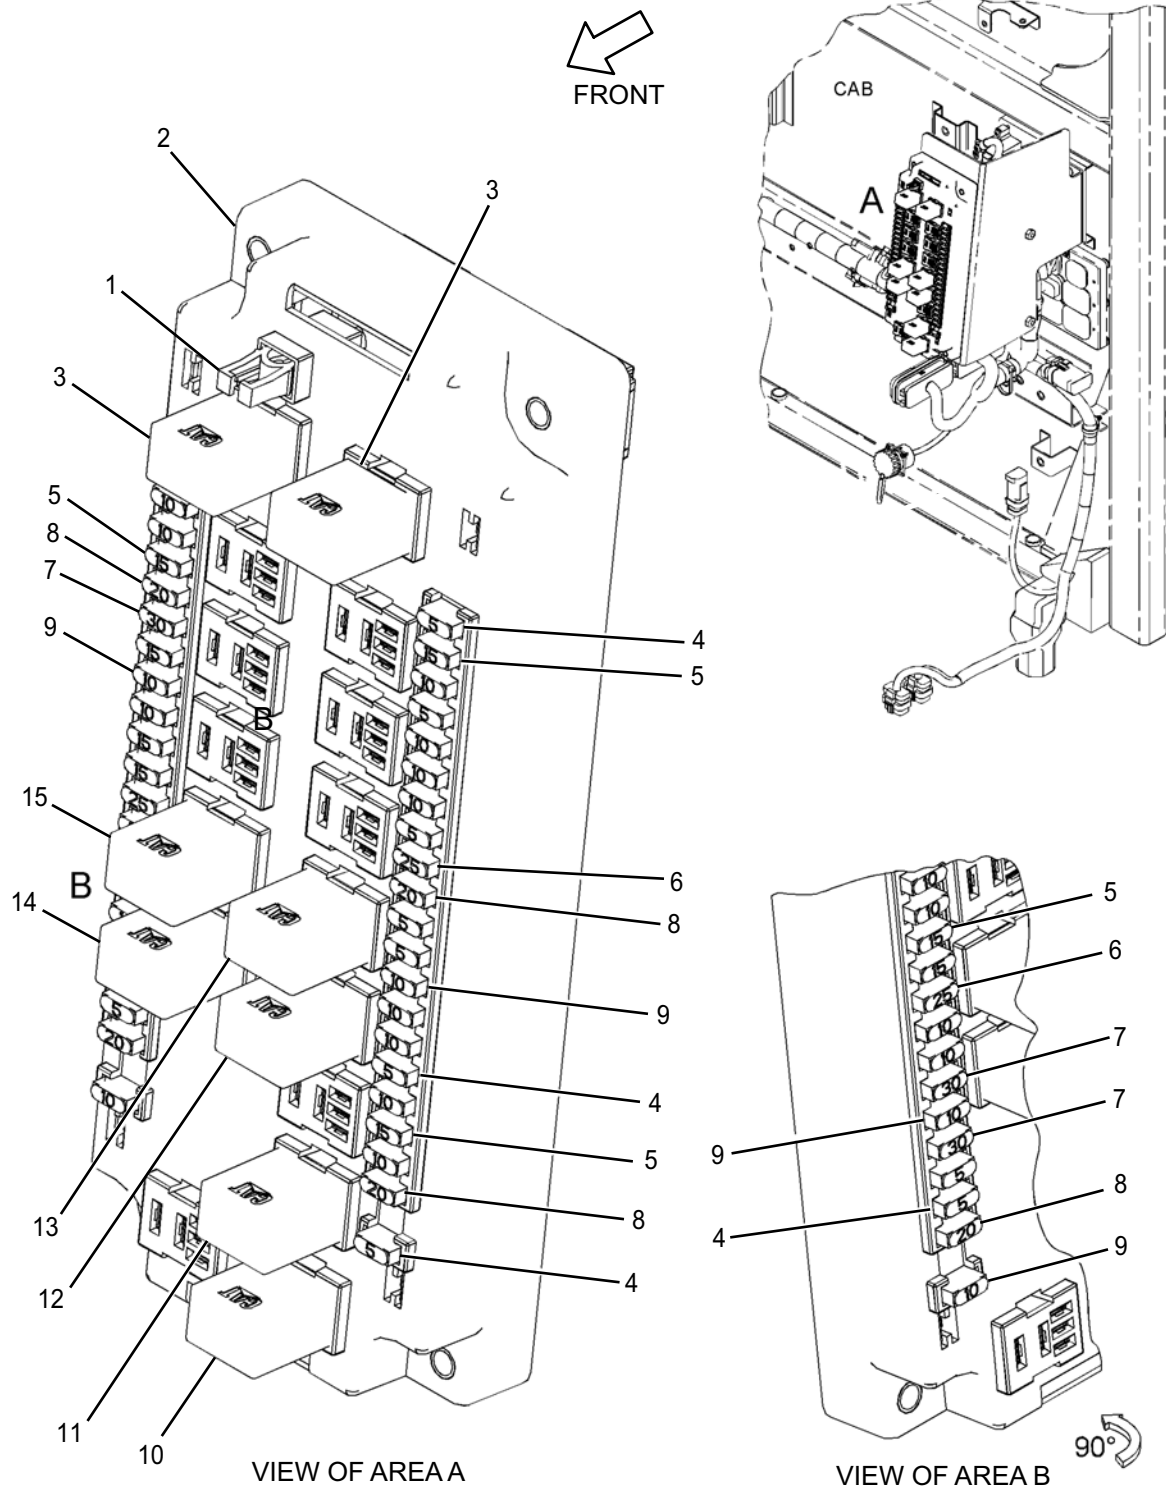


TABLE FOR FIGURE 03-42:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	170-6888	PULLER-FUSE	1	
2	161-3128	RELAY (24-VOLT) (CAB LIGHT)	1	
3	161-3128	RELAY (24-VOLT)	2	
4	141-2759	FUSE (5-AMPERE)	3	
5	113-8491	FUSE (15-AMPERE)	7	
6	113-8493	FUSE (25-AMPERE)	2	
7	124-3548	FUSE (30-AMPERE)	3	
8	113-8492	FUSE (20-AMPERE)	4	
9	113-8490	FUSE (10-AMPERE)	17	
10	161-3128	RELAY (24-VOLT) (BOOM LIGHTS)	1	
11	161-3128	RELAY (24-VOLT)	1	
12	161-3128	RELAY (24-VOLT)	1	
13	161-3128	RELAY (24-VOLT)	1	
14	161-3128	RELAY (24-VOLT)	1	
15	161-3128	RELAY (24-VOLT)	1	

FIGURE 03-44 WINDOW GP-CAB-FRONT, UPPER

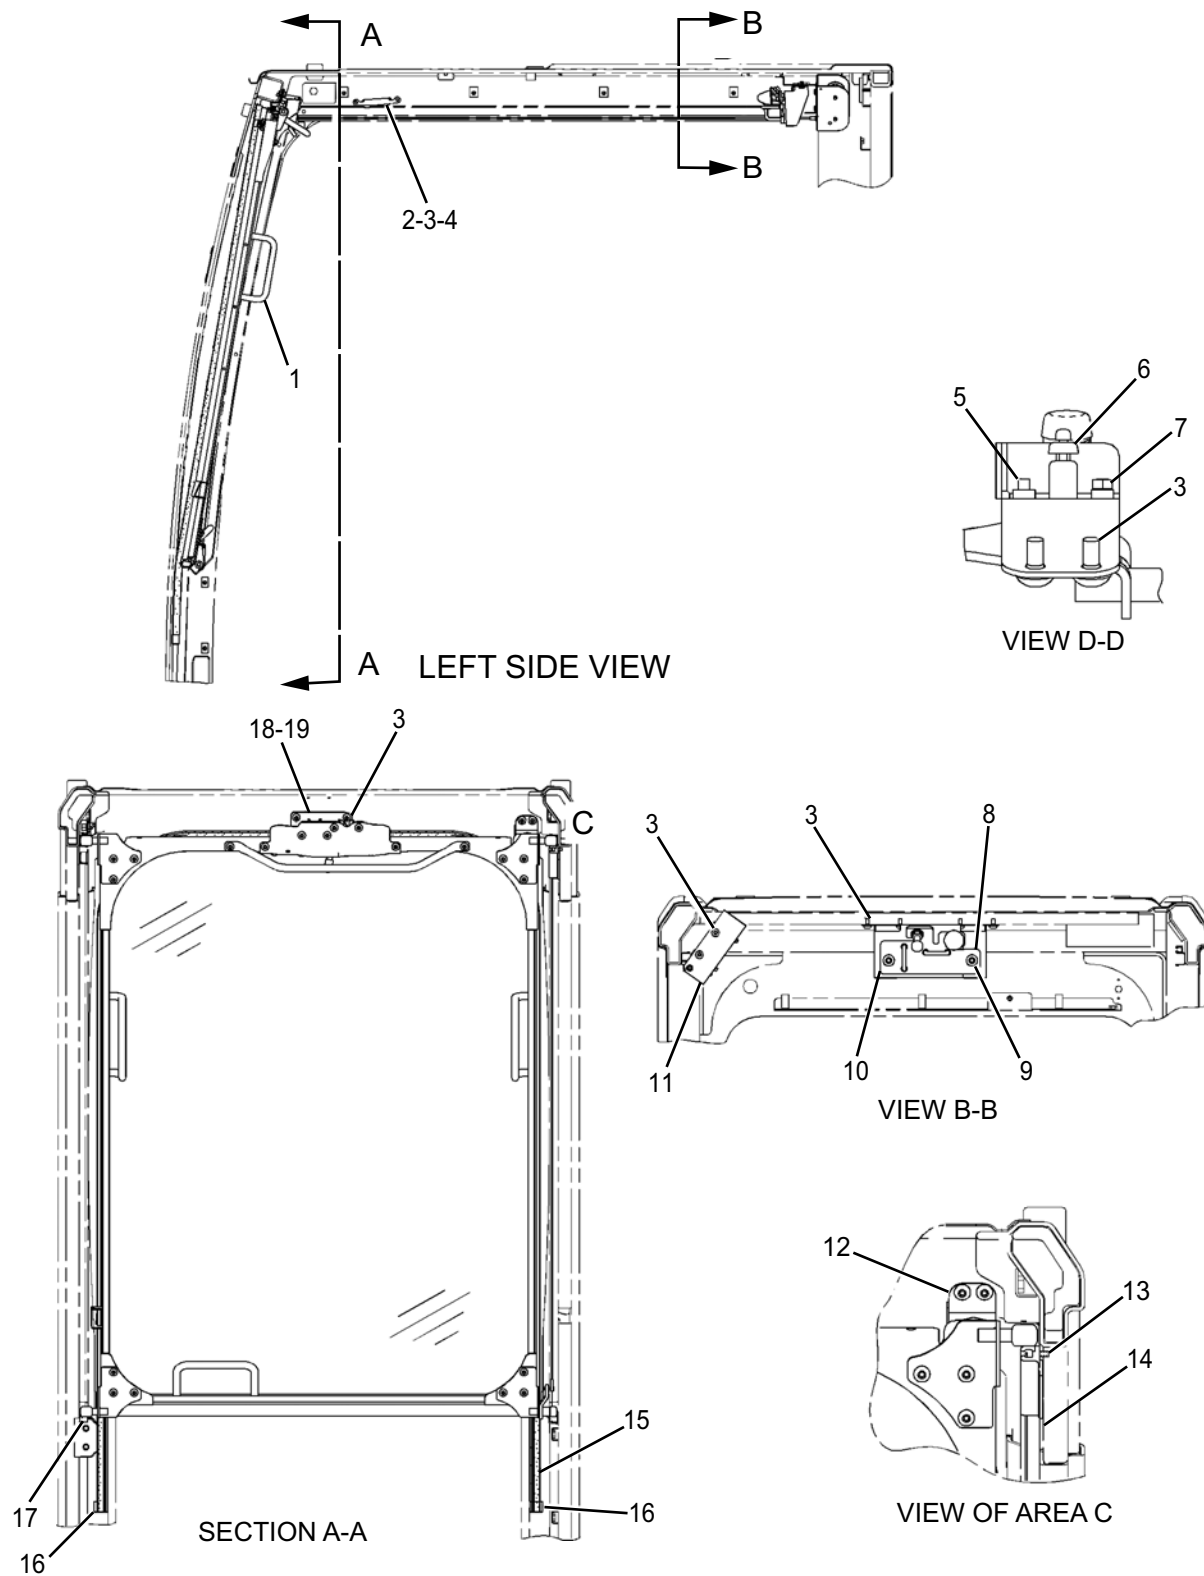


TABLE FOR FIGURE 03-44:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	334-6388	WINDOW GP-CAB (FRONT, UPPER)	1	
2	334-6499	BRACKET AS	1	
3	9X-2042	SCREW-TRUSS HEAD (M6X1X12-MM)	12	
4	430-5703	SHIM	1	
5	138-8454	SCREW-TRUSS HEAD (M4X0.7X10-MM)	2	
6	117-6306	SWITCH (WINDOW POSITION)	1	
7	5C-8312	NUT (M4X0.7-THD)	1	
8	334-6492	STRIKER GP-LATCH (WINDOW)	1	
9	9X-2041	SCREW-TRUSS HEAD (M10X1.5X20-MM)	2	
10	334-6497	SHEET AS	1	
11	334-6508	CABLE AS	1	
12	334-6505	BRACKET AS	1	
13	099-2374	BOLT-SOCKET HEAD (M5X0.8X12-MM)	1	
14	334-6509	GUIDE AS	1	
15	334-6507	SEAL AS	1	
16	363-9373	SPACER	2	
17	151-9557	STOP-RUBBER	2	
18	334-6501	STRIKER AS	1	
19	334-6504	SHIM (2-MM THK)	1	

FIGURE 03-45 WINDOW GP-CAB-FRONT, UPPER

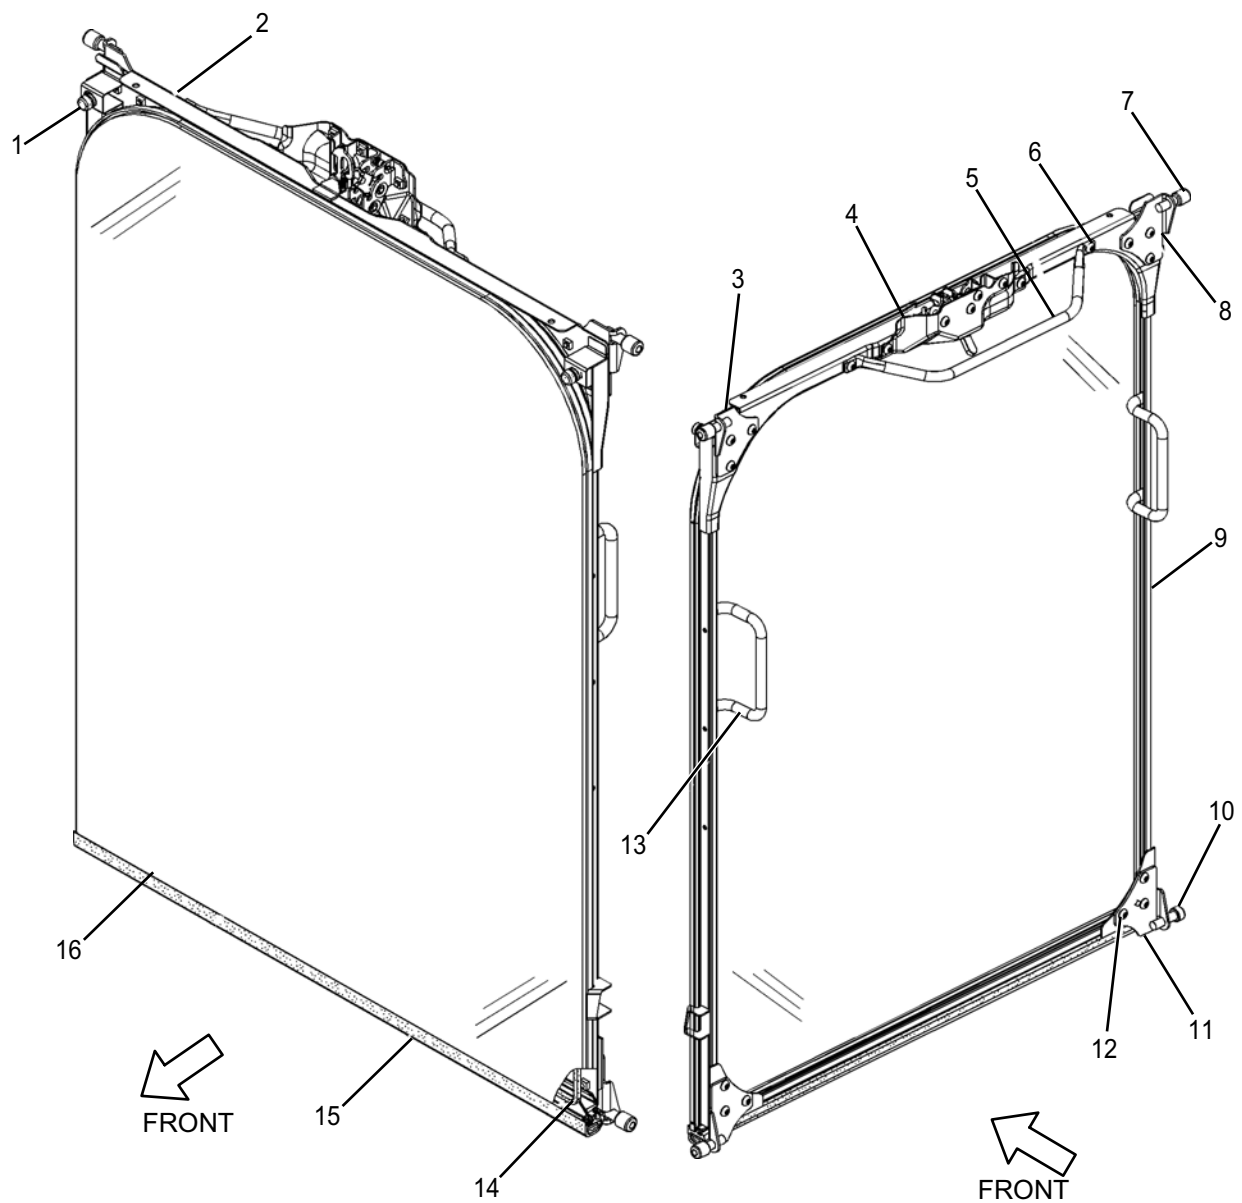


TABLE FOR FIGURE 03-45:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	185-8221	STOP	1	
2	334-6389	FRAME AS-WINDOW	1	
3	334-6479	BRACKET AS	2	
4	334-6485	LOCK AS-WINDOW	1	
	9X-2042	•SCREW-TRUSS HEAD (M6X1X12-MM)	7	
	334-6486	•COVER AS	1	
	334-6488	•LOCK AS	1	
	334-6489	•LEVER AS	1	
5	334-6490	HANDLE	1	
6	9X-2044	SCREW-TRUSS HEAD (M6X1X16-MM)	2	
7	334-6482	ROLLER	3	
8	334-6481	BRACKET AS	2	
9	334-6469	SEAL	2	
10	151-9576	ROLLER	1	
11	151-6813	BRACKET AS	1	
12	9X-2042	SCREW-TRUSS HEAD (M6X1X12-MM)	16	
13	334-6478	HANDLE	1	
14	334-6484	SEAL	1	
15	346-8036	SEAL	2	
16	453-4794	GLASS	1	

FIGURE 03-46 STRIKER GP-LATCH-WINDOW

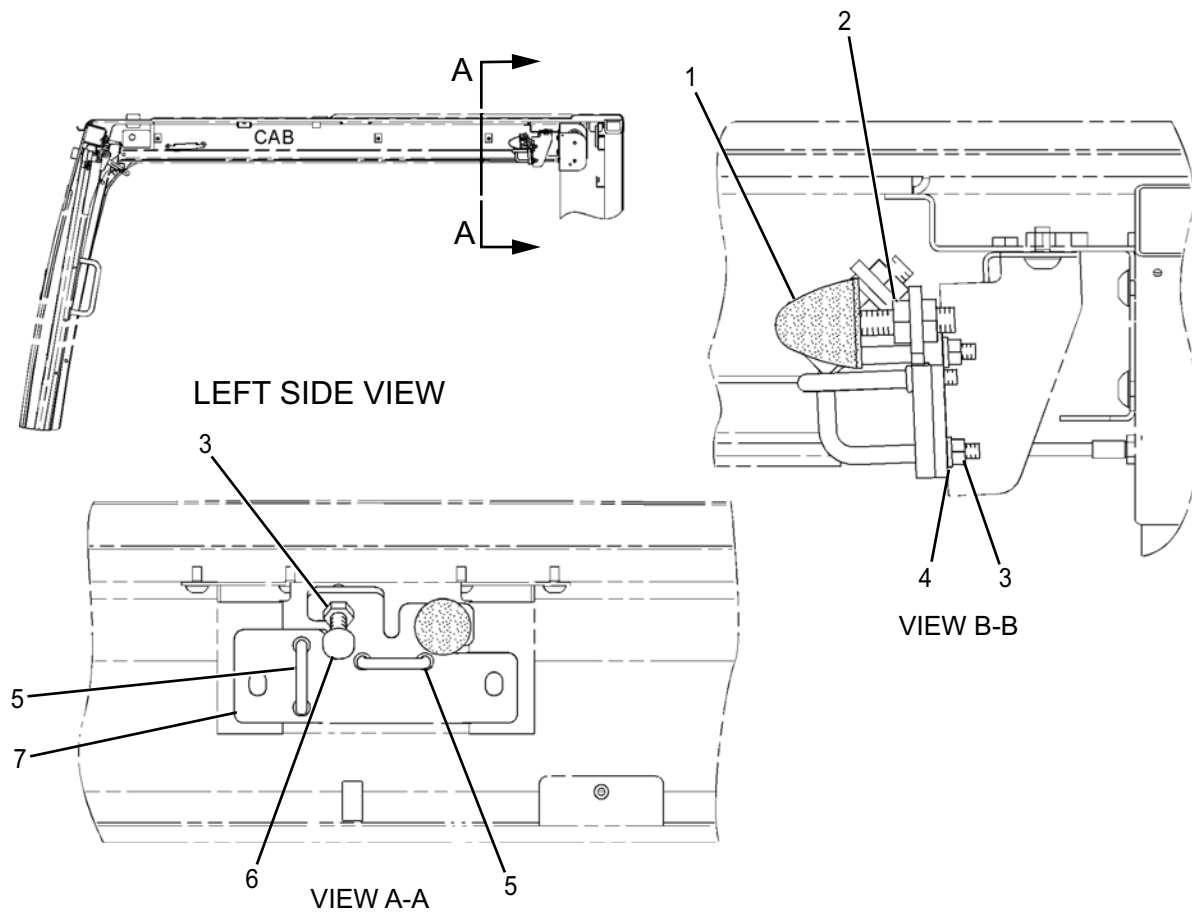


TABLE FOR FIGURE 03-46:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	7Y-8561	BUMPER	1	
2	142-0485	NUT (M10X1.5-THD)	2	
3	5C-2890	NUT (M6X1-THD)	4	
4	9X-8256	WASHER (6.6X12X2-MM THK)	4	
5	334-6495	STRIKER	2	
6	178-5576	STOP	1	
7	334-6493	SHEET AS	1	

FIGURE 03-47 WINDOW GP-CAB-FRONT, REAR, SIDE

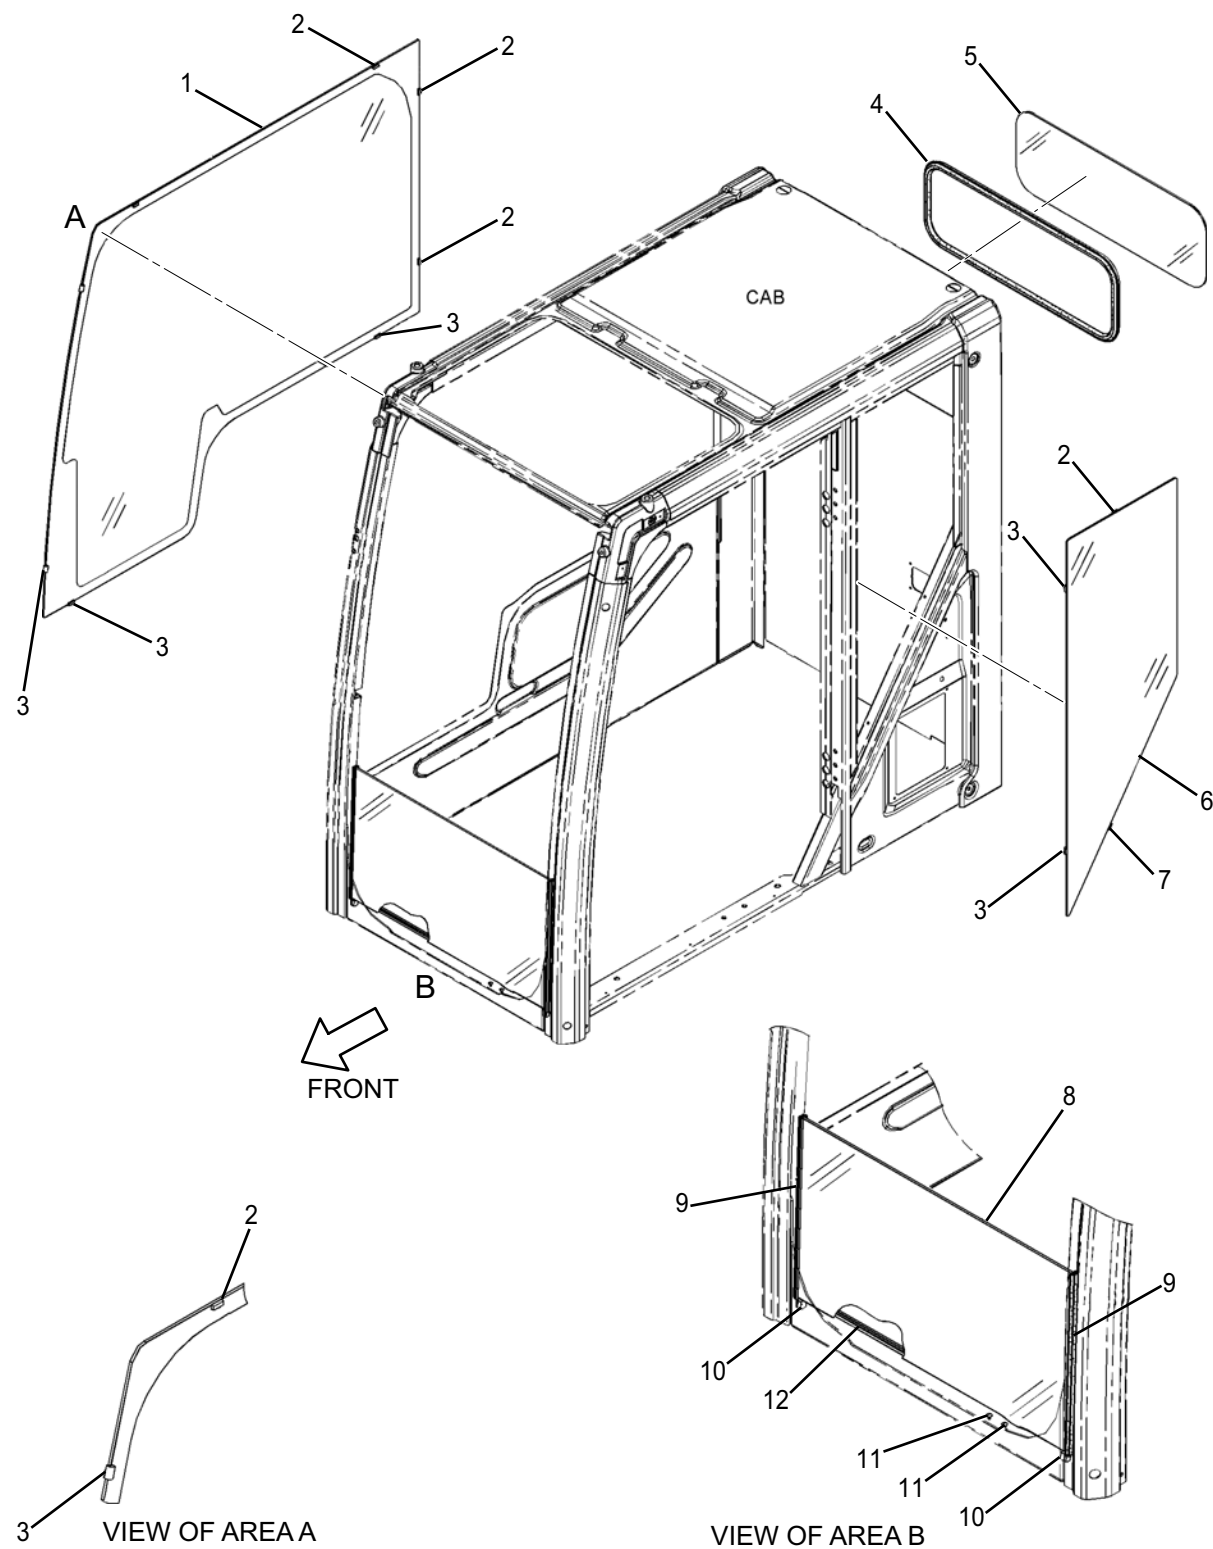


TABLE FOR FIGURE 03-47:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	342-3550	GLASS	1	
2	178-5574	SPACER	6	
3	178-5572	SPACER-SPECIAL (WINDOW)	6	
4	342-3552	SEAL	1	
5	342-3551	GLASS	1	
6	340-6625	GLASS	1	
7	178-5573	SPACER	1	
8	316-8854	GLASS	1	
9	346-8030	SEAL	2	
10	156-6631	STOP	2	
11	139-7119	PLUG	2	
12	340-6727	SEAL	1	

FIGURE 03-48 AIR CONDITIONER & MOUNTING GP

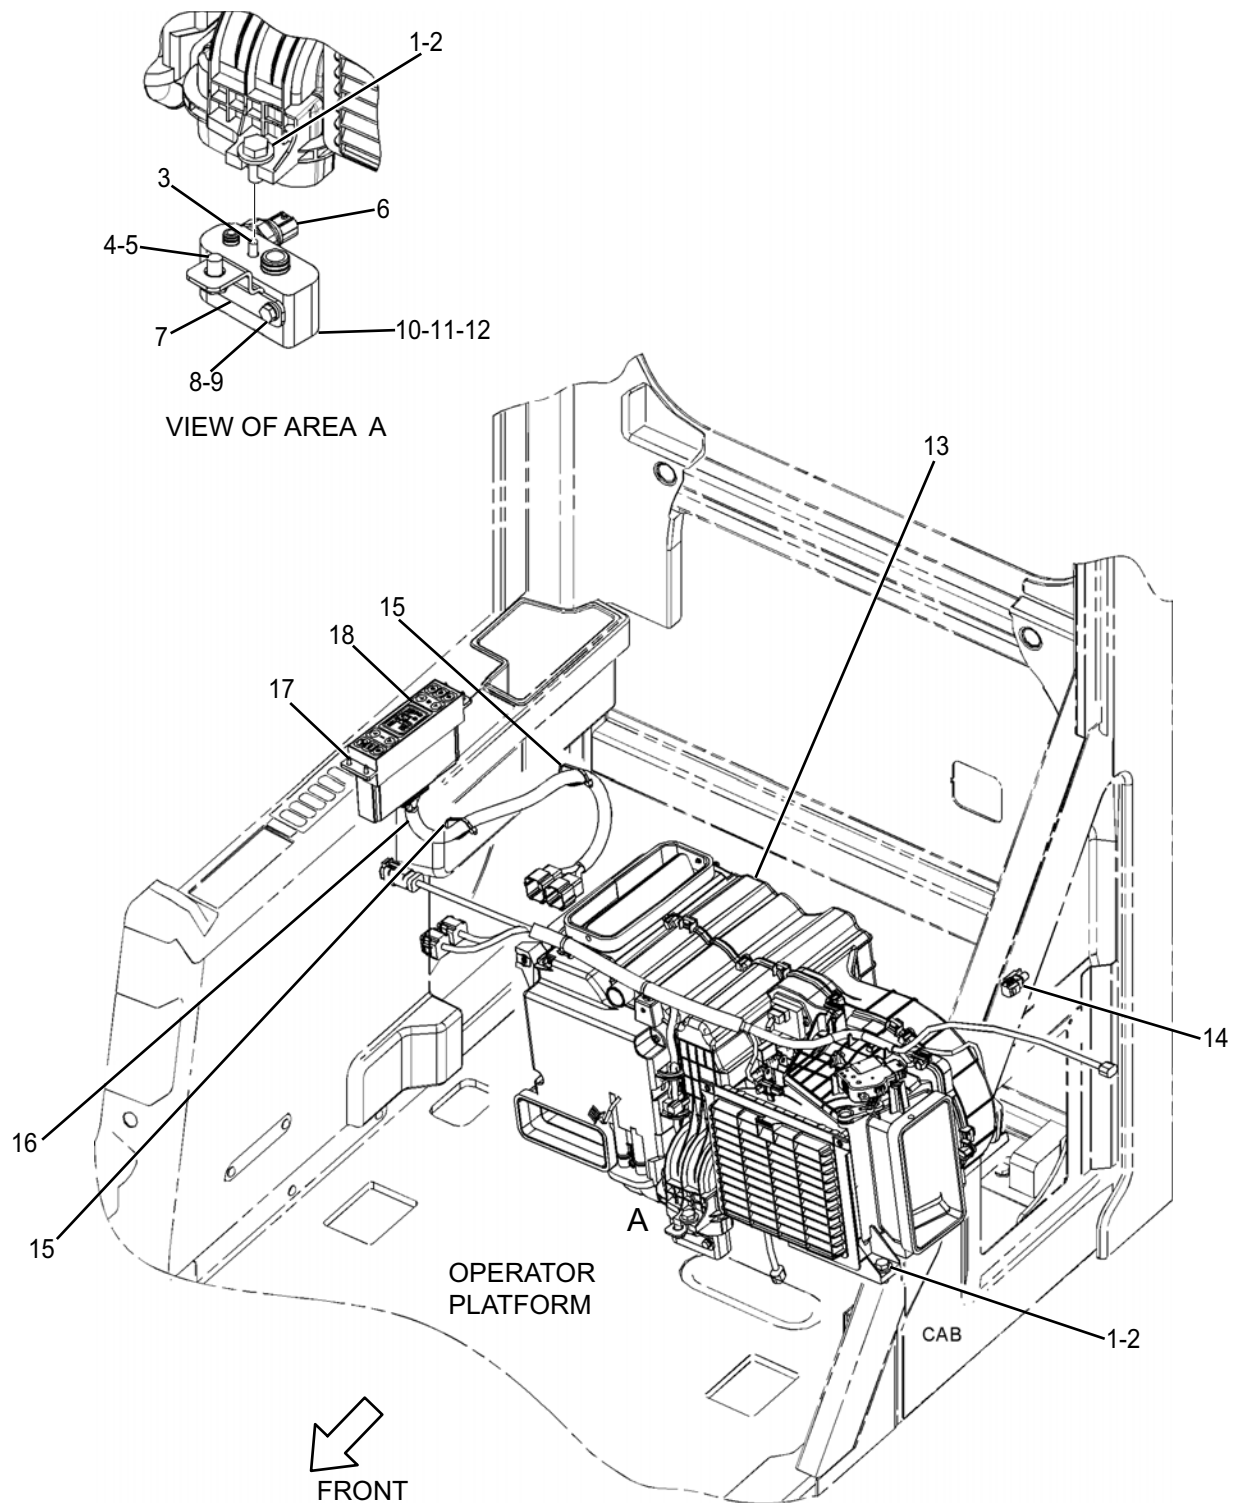


TABLE FOR FIGURE 03-48:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	8T-4136	BOLT (M10X1.5X25-MM)	6	
2	7X-7729	WASHER (11X25X3-MM THK)	6	
3	8T-8442	BOLT-SOCKET HEAD (M6X1X30-MM)	1	
4	8T-4191	BOLT (M10X1.5X16-MM)	1	
5	8T-4121	WASHER-HARD (11X21X2.5-MM THK)	1	
6	293-1139	SWITCH AS-PRESSURE (REFRIGERANT)	1	
7	423-5588	BRACKET	1	
8	5C-9553	BOLT (M6X1X16-MM)	2	
9	9X-8256	WASHER (6.6X12X2-MM THK)	3	
10	113-3468	SEAL-O-RING	1	
11	121-7063	SEAL-O-RING	1	
12	435-9945	MANIFOLD	1	
13	363-9493	AIR CONDITIONER GP	1	
14	235-8874	SENSOR-TEMPERATURE (AMBIENT AIR)	1	
15	3S-2093	STRAP-CABLE	2	
16	363-9495	HARNESS AS-WIRING	1	
17	119-5026	SCREW-PAN HEAD (10-16X0.63-IN)	4	
18	363-9494	PANEL AS-CONTROL (AIR CONDITIONER, HEATER)	1	

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 03-49 AIR CONDITIONER GP (SHEET 1 OF 2)

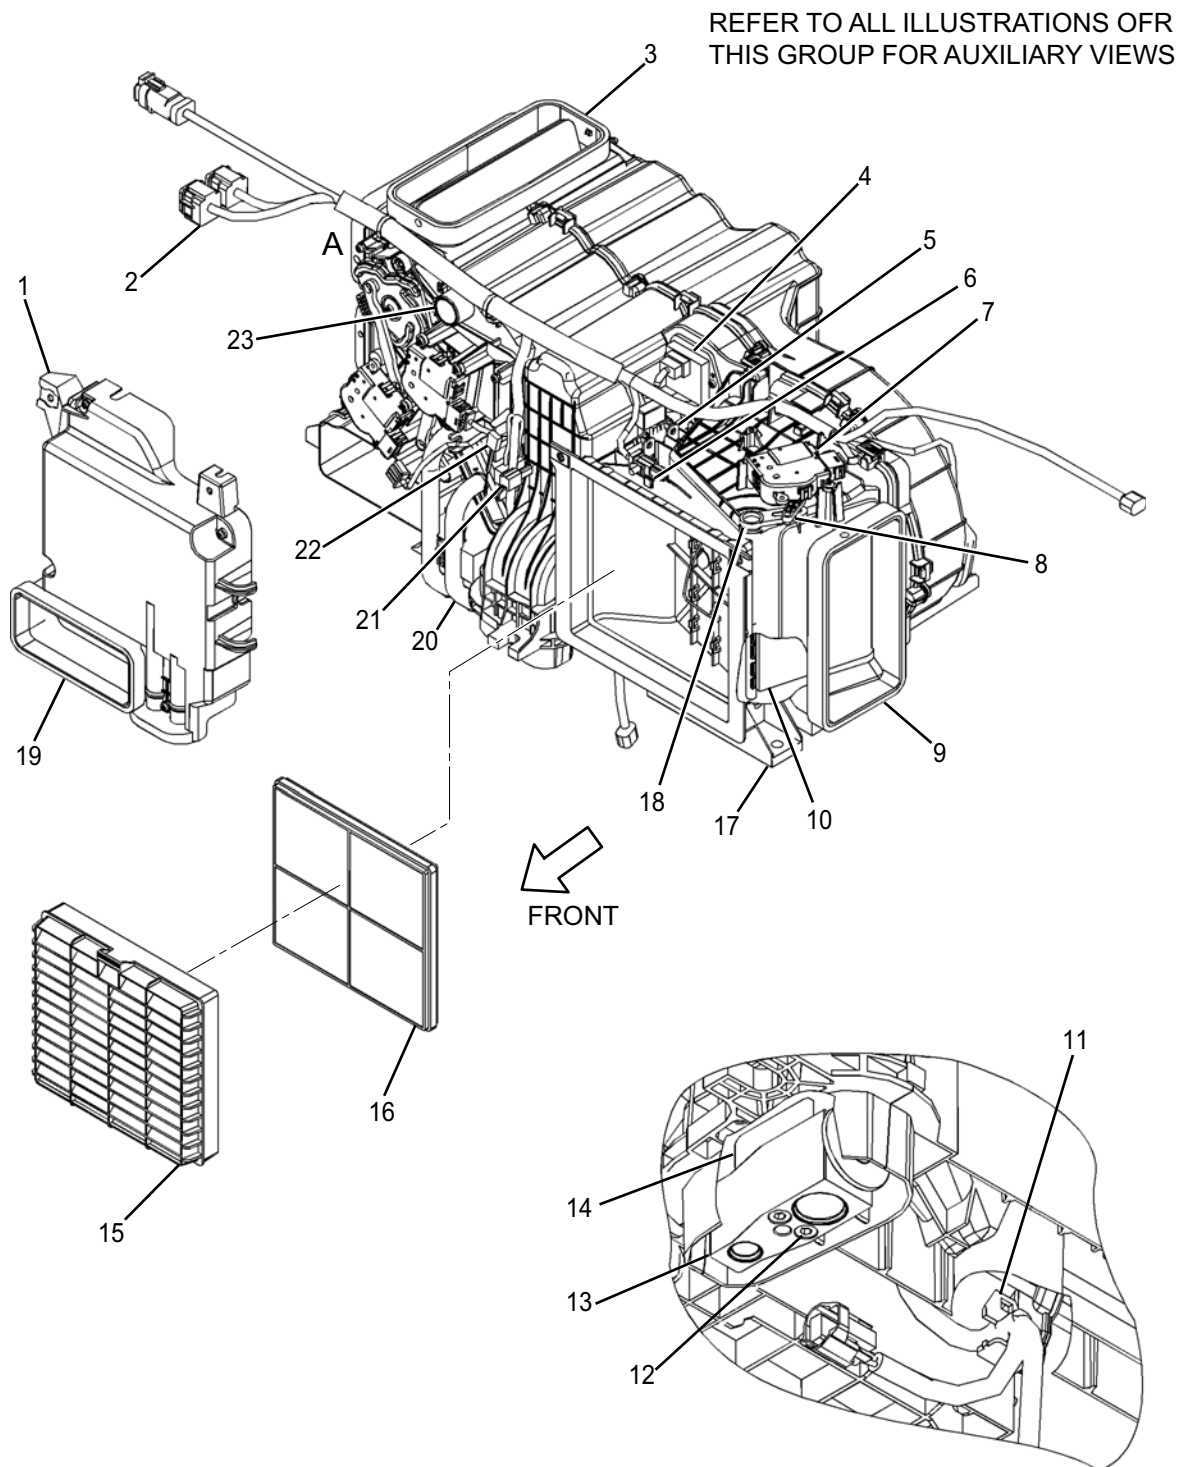


FIGURE 03-49 AIR CONDITIONER GP (SHEET 2 OF 2)

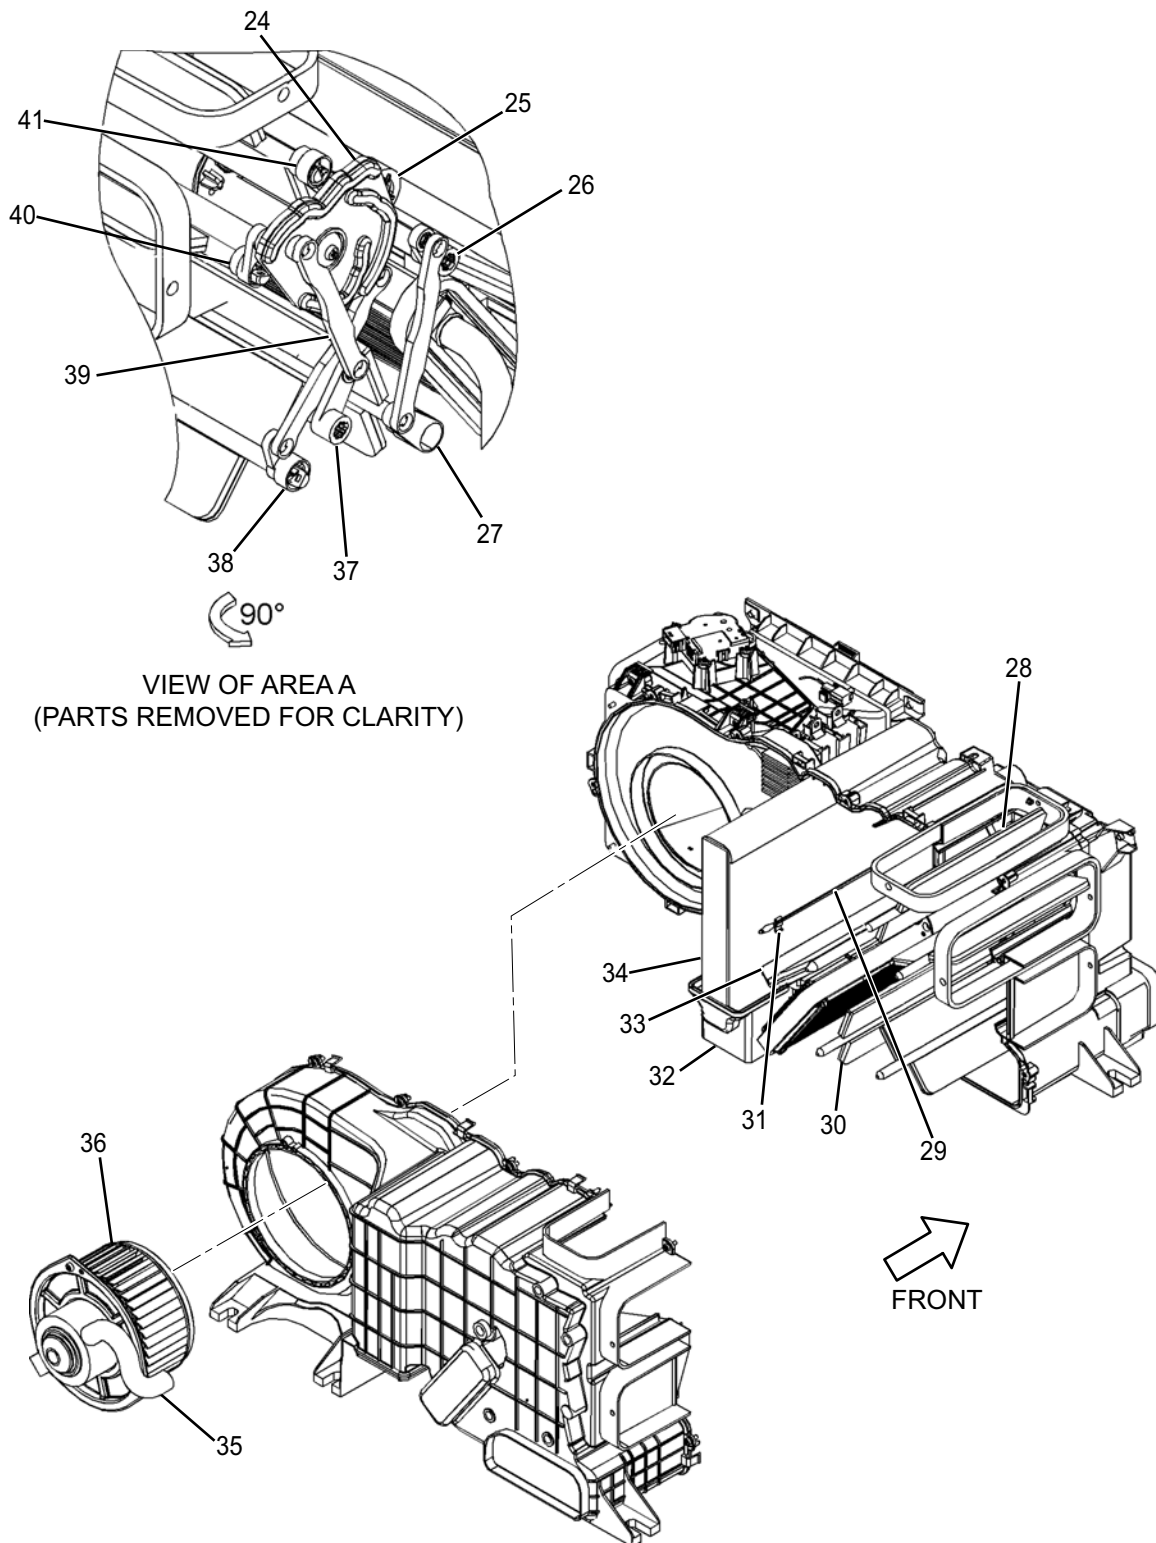


TABLE FOR FIGURE 03-49:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	363-9451	COVER AS (LINK)	1	
2	372-9365	HARNESS AS-HEATER & AIR COND	1	
3	363-9482	INSULATOR	2	
4	356-4944	CONTROL AS-FAN (BLOWER)	1	
5	124-4042	RELAY (BLOWER MOTOR)	3	
6	363-9477	SENSOR AS (INTAKE AIR TEMPERATURE)	1	
7	363-9459	MOTOR AS	3	
8	363-9466	LEVER	1	
9	363-9482	INSULATOR	1	
10	363-9461	DAMPER	1	
11	363-9480	CLIP-HARNESS	1	
12	281-0791	BOLT-SOCKET HEAD (M5X0.8X40-MM)	2	
13	363-9454	VALVE AS-EXPANSION	1	
14	363-9455	PLATE	1	
15	363-9452	COVER-FILTER	1	
16	363-9402	FILTER (AIR CONDITIONER)	1	
17	363-9450	HOUSING AS-AIR CONDITIONER (INTAKE AIR)	1	
18	363-9465	LEVER	1	
19	363-9483	INSULATOR	1	
20	363-9456	CORE AS-HEATER	1	
21	363-9476	SENSOR AS (EVAPORATOR)	1	
22	363-9478	SENSOR AS (WATER TEMPERATURE)	1	
23	363-9470	LEVER	1	
24	363-9460	PLATE	1	
25	363-9471	LEVER	1	

TABLE FOR FIGURE 03-49: (Cont.)

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
26	363-9473	LEVER	1	
27	363-9474	LEVER	1	
28	363-9463	DAMPER	1	
29	305-0419	HOLDER	1	
30	363-9462	DAMPER	3	
31	363-9481	HOLDER	1	
32	363-9449	CASE	1	
33	363-9464	DAMPER	1	
34	363-9453	COIL AS-EVAPORATOR	1	
	113-3467	•SEAL-O-RING	1	
	113-3468	•SEAL-O-RING	1	
35	363-9458	HOSE	1	
36	363-9457	MOTOR AS-BLOWER (WITH FAN)	1	
37	363-9472	LEVER	1	
38	363-9469	LEVER	1	
39	363-9475	ROD	3	
40	363-9468	LEVER	1	
41	363-9467	LEVER	1	

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 03-50 FOOTREST GP

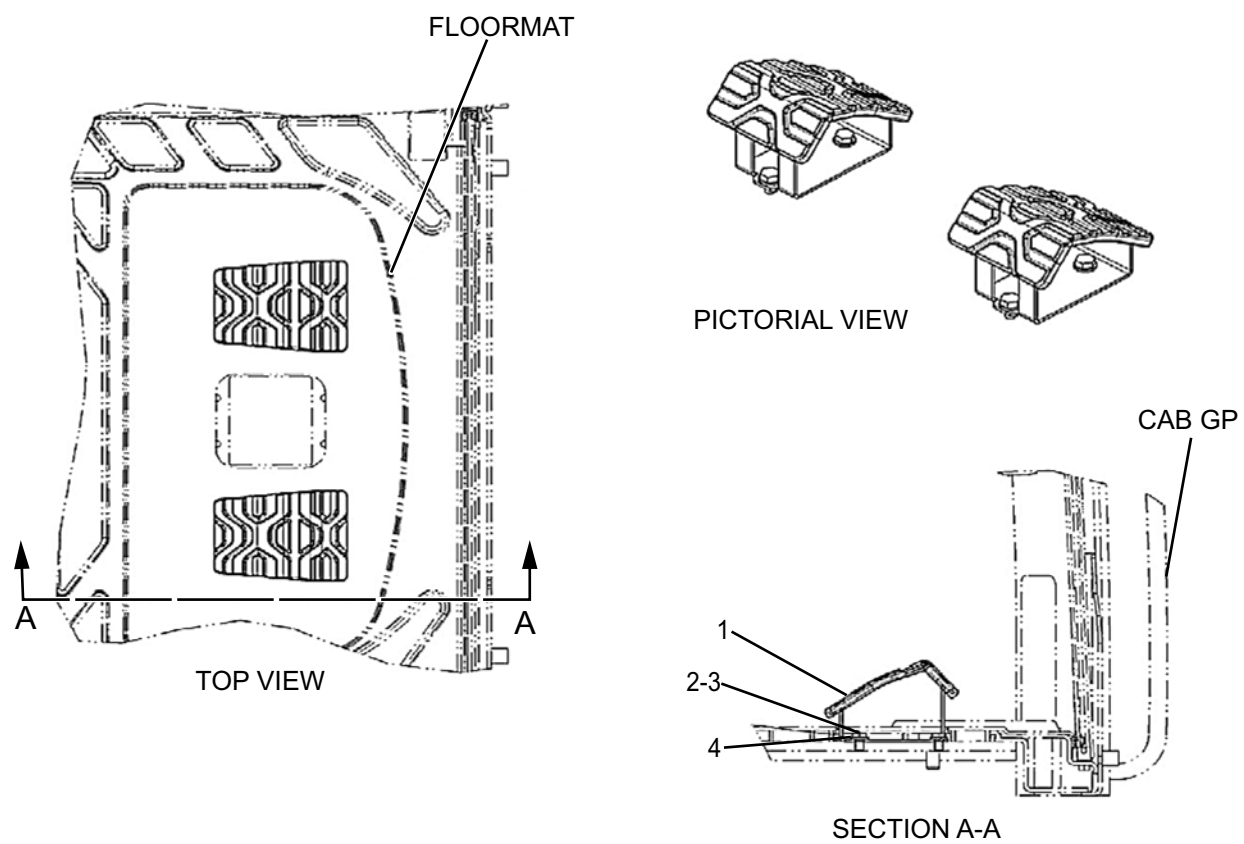


TABLE FOR FIGURE 03-50:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	122-9610	STEP-RUBBER	2	
2	8T-4121	WASHER-HARD (11X21X2.5-MM THK)	4	
3	8T-4191	BOLT (M10X1.5X16-MM)	4	
4	117-6356	STEP AS	2	

FIGURE 03-51 CONSOLE GP - OPR

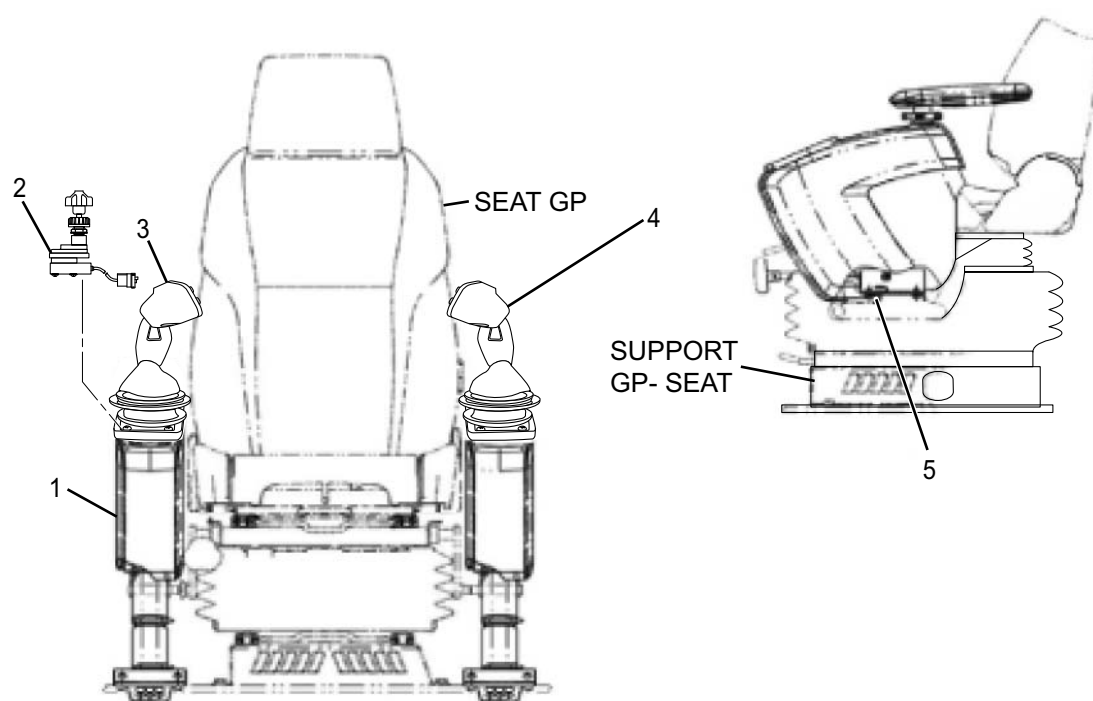


TABLE FOR FIGURE 03-51:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	318-8821	CONSOLE GP	2	
2	134-0670	THROTTLE CONTROL	1	
3	A-04325-715	JOYSTICK RH	1	
4	A-04325-705	JOYSTICK LH	1	
5	9X-2043	SCREW-TRUSS HEAD	8	

FIGURE 03-52 CONSOLE GP-OPERATOR-RH

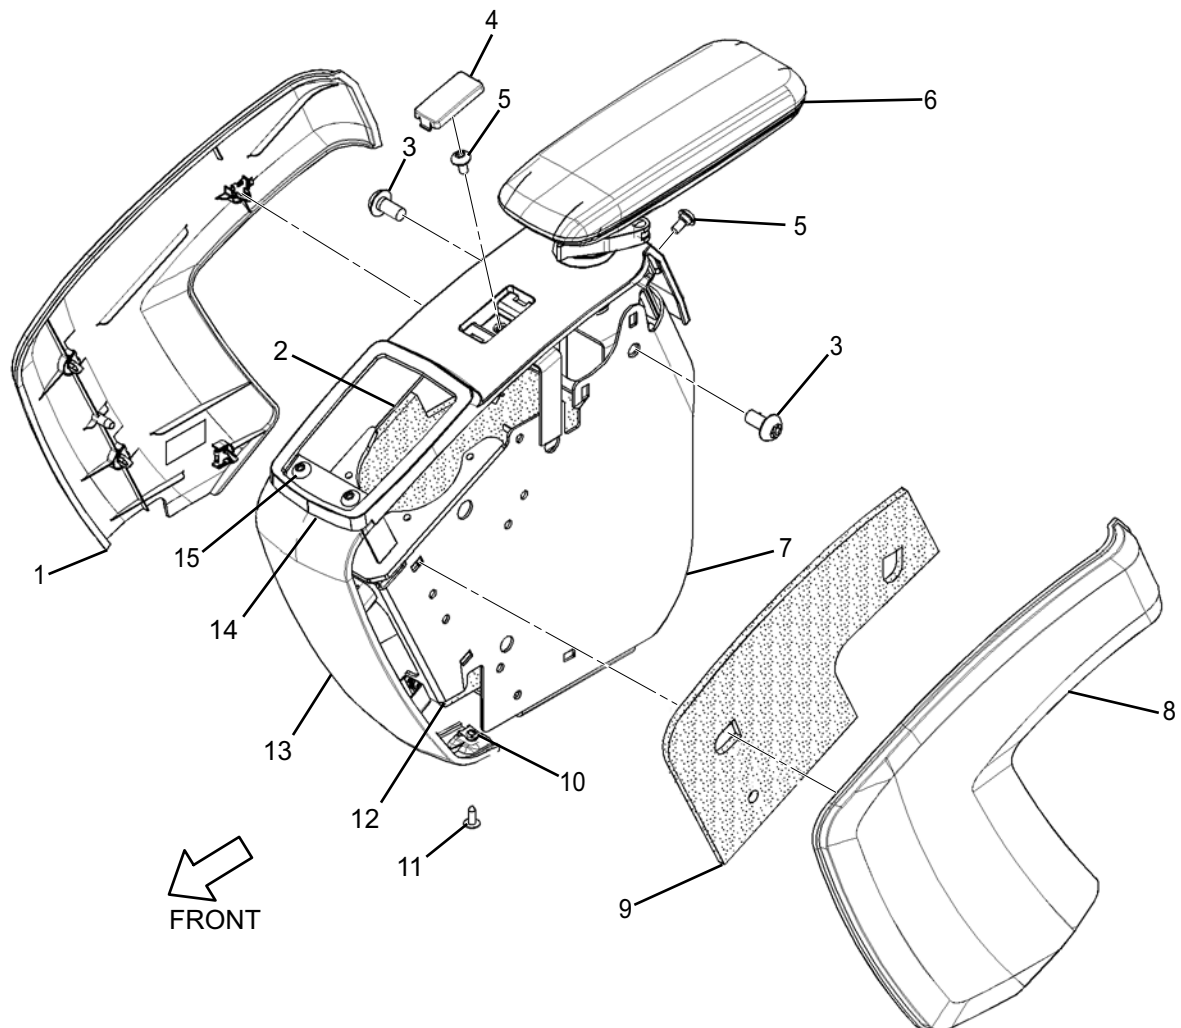


TABLE FOR FIGURE 03-52:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	357-3848	COVER AS	1	
	170-9724	•CLIP	4	
2	363-9597	INSULATOR	1	
3	9X-2041	SCREW-TRUSS HEAD (M10X1.5X20-MM)	3	
4	334-6451	COVER	1	
5	346-8025	ARMREST GP (RH)	1	
6	334-6466	SUPPORT AS	1	
7	357-3847	COVER AS	1	
	170-9724	•CLIP	4	
8	363-9594	INSULATOR	1	
9	234-6579	NUT-SPEED	1	
10	245-7790	SCREW-TAPPING	1	
11	363-9598	INSULATOR	1	
12	357-3845	COVER AS	1	
	170-9724	•CLIP	4	
13	334-6462	COVER	1	
14	128-2136	SCREW-TRUSS HEAD (M6X1X16-MM)	2	
15	128-2135	SCREW-TRUSS HEAD (M6X1X13-MM)	3	

FIGURE 03-53 ARMREST GP-RH

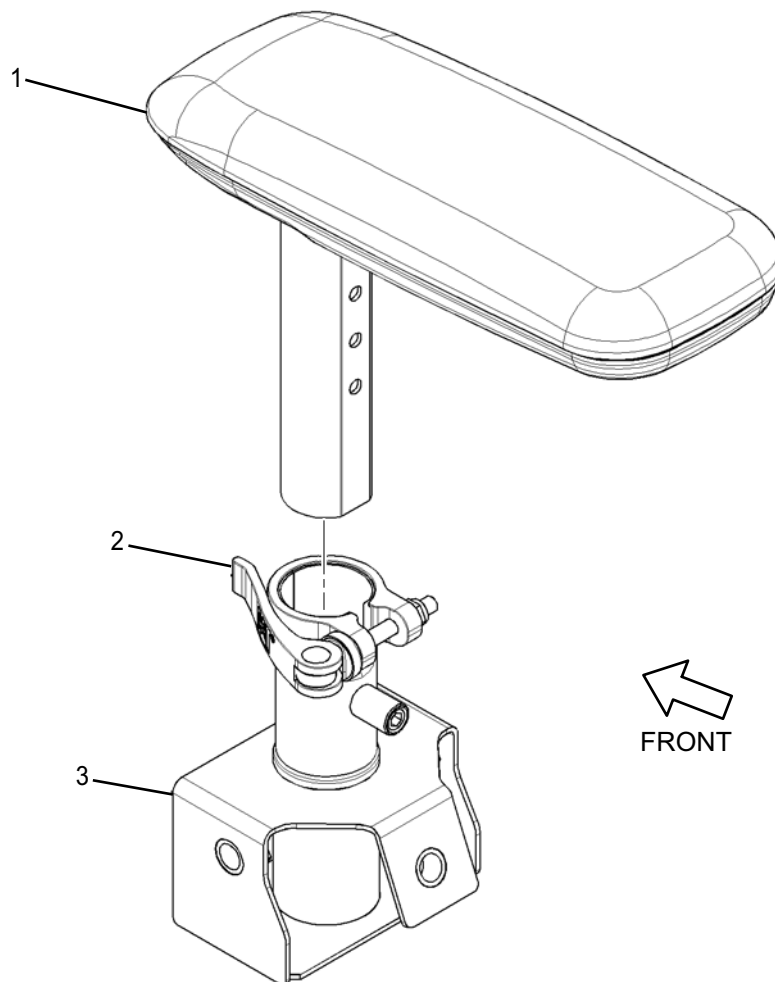


TABLE FOR FIGURE 03-53:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	340-6714	ARMREST GP	1	
2	340-6720	BRACKET AS	1	
3	340-6725	CLAMP		

FIGURE 03-54 ARMREST GP

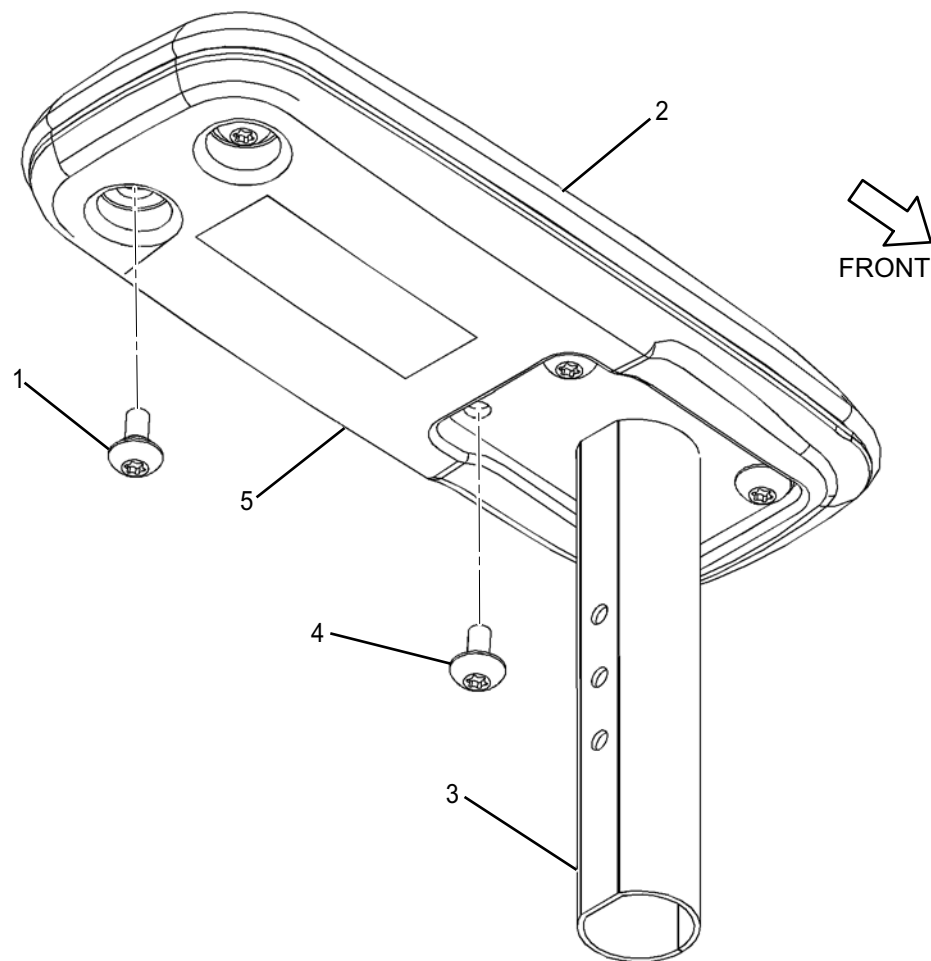


TABLE FOR FIGURE 03-54:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	128-2135	SCREW-TRUSS HEAD (M6X1X13-MM)	2	
2	340-6718	PAD AS	1	
3	340-6715	PIPE AS	1	
4	9X-2042	SCREW-TRUSS HEAD (M6X1X12-MM)	4	
5	340-6719	COVER	1	

FIGURE 03-55 WIRE COVER

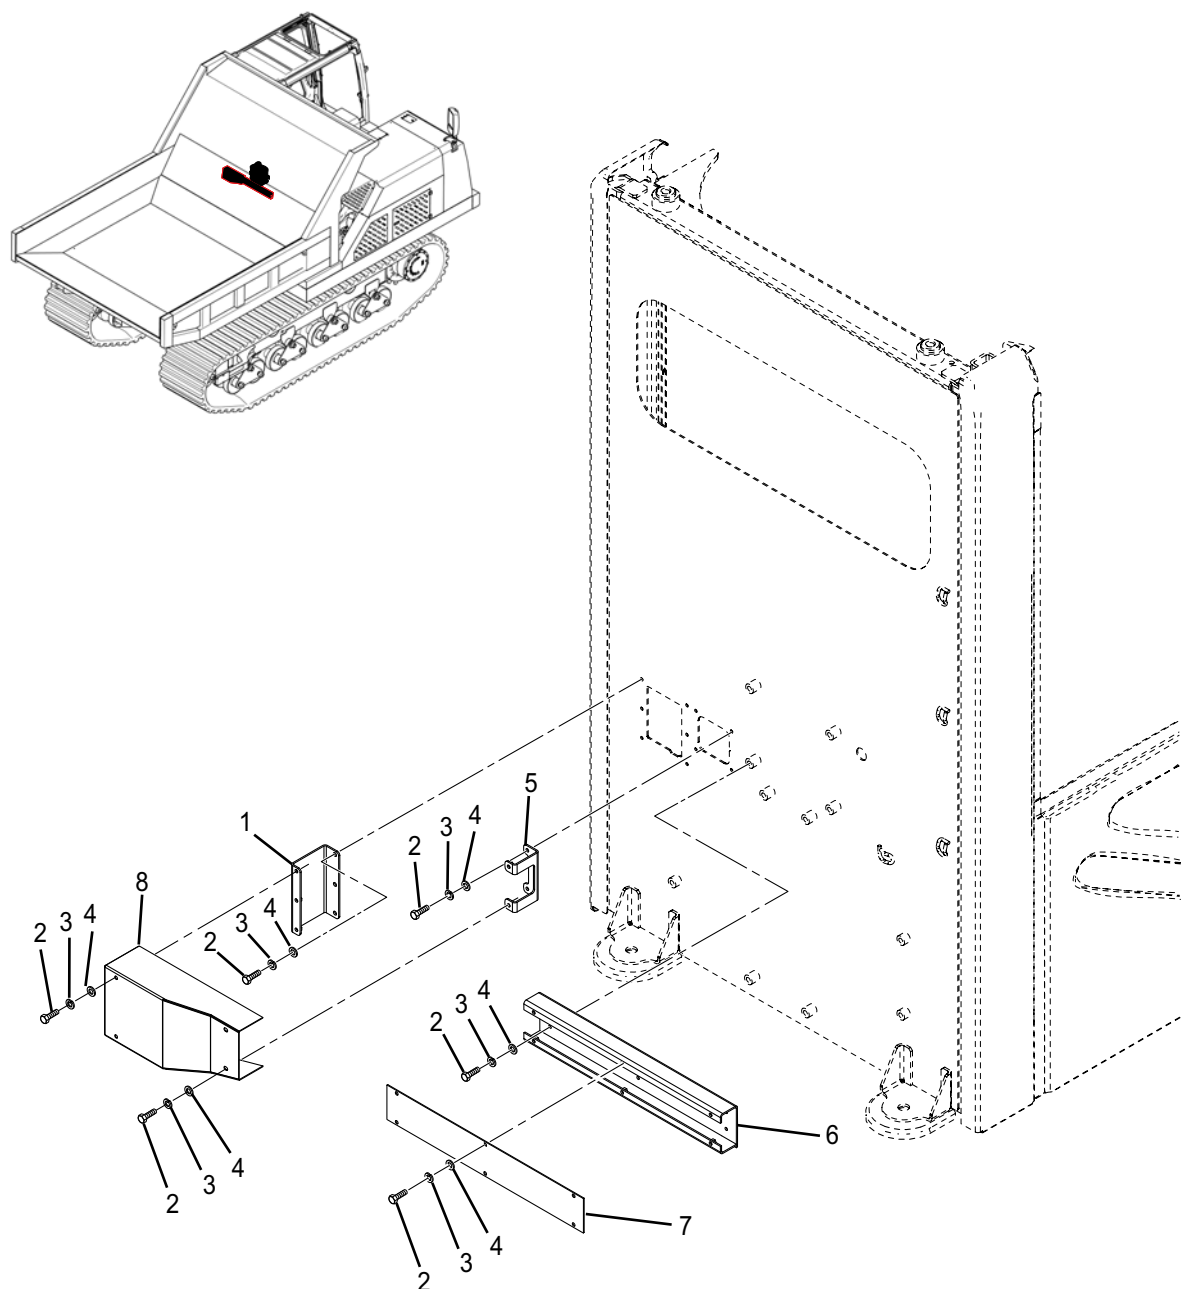


TABLE FOR FIGURE 03-55:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-04253-225	PLUG COVER 2 (BOLT PLATE 1)	1	
2	0-1000-00610	M6 X 10 HEX BOLT	21	
3	0-1100-00615	M6 LOCK WASHER	21	
4	0-1120-00616	M6 WASHER	42	
5	A-04253-226	PLUG COVER 3 (BOLT PLATE 2)	1	
6	A-04253-129	WIRE COVER, BASE	1	
7	A-04253-224	WIRE COVER 4 (COVER PLATE)	1	
8	A-04253-221	WIRE COVER (WIDE)	1	

THIS PAGE INTENTIONALLY LEFT BLANK

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 04-01 A/C SYSTEM

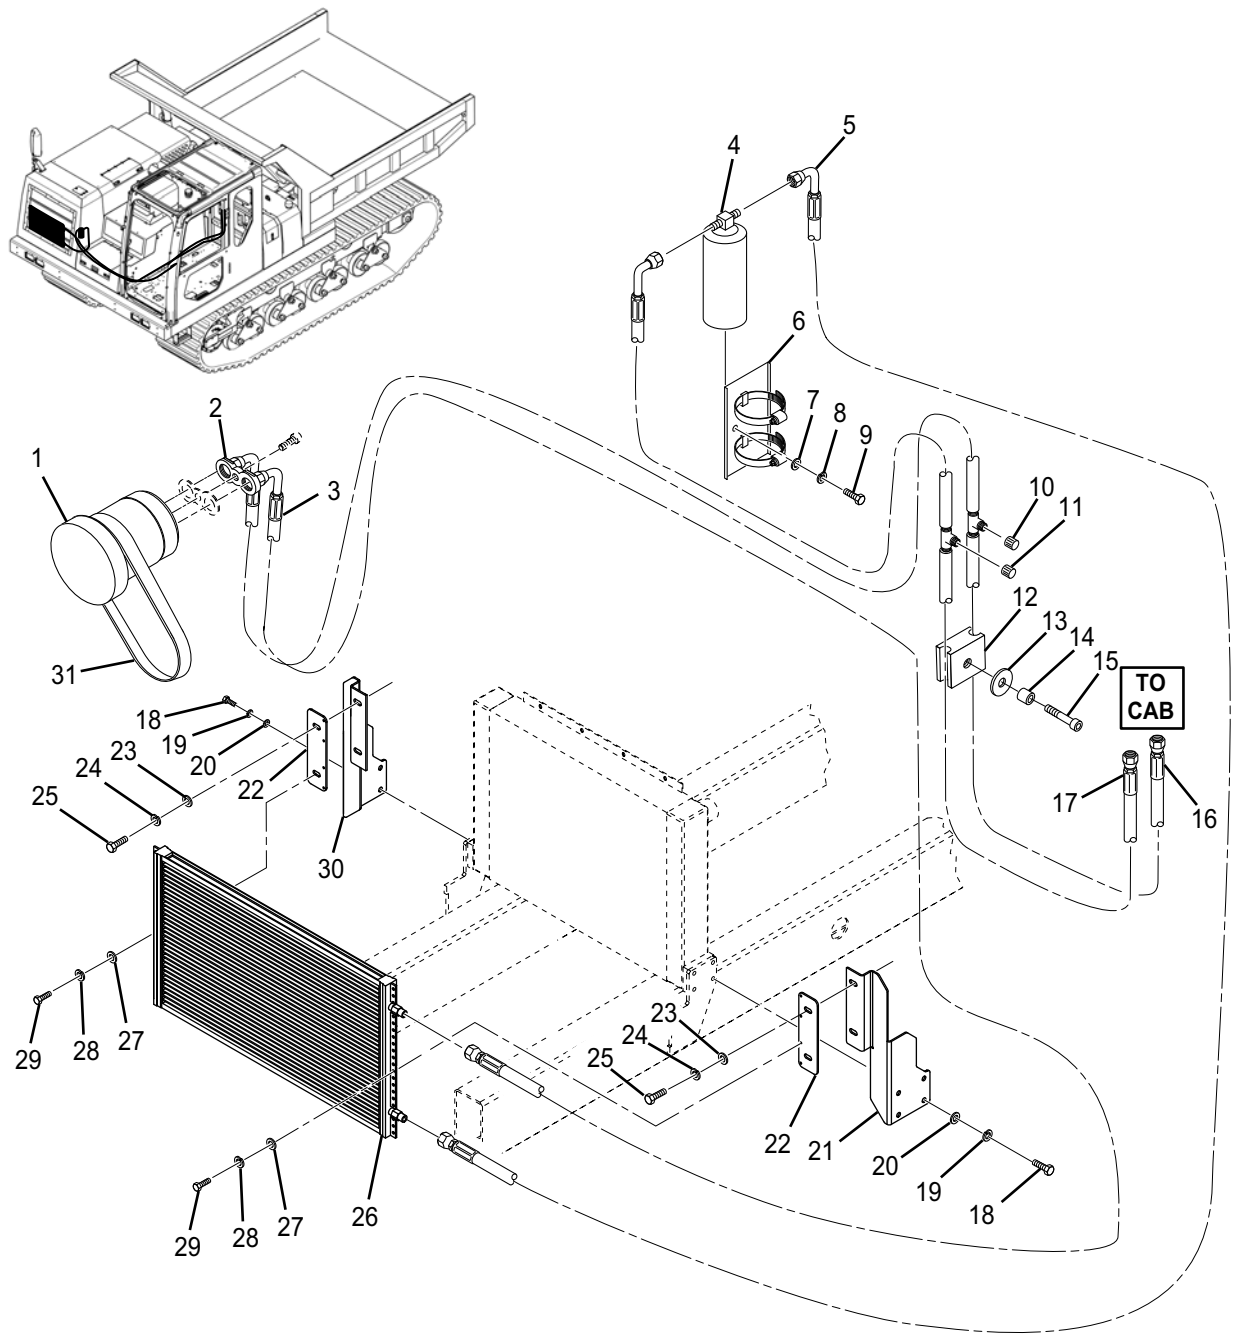


TABLE FOR FIGURE 04-01:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	320-1291	A/C COMPRESSOR	1	
2	A-04392-712	ADAPTER PADS	1	
3	A-04292-716	HOSE	1	
4	A-04292-714	FILTER/DRIER	1	
5	A-04292-717	HOSE	1	
6	A-04292-715	FILTER/DRIER MOUNT KIT	1	
7	0-1120-00816	M8 WASHER	6	
8	0-1100-00820	M8 LOCK WASHER	6	
9	0-1000-00820	M8 X 20 HEX BOLT	6	
10	10-2-0004	LOW SIDE CAP	1	
11	10-2-0006	HIGH SIDE CAP	1	
12	6G-2256	CLAMP BLOCK	1	
13	2G-8767	WASHER	1	
14	6G-2263	SPACER	1	
15	8T-4182	BOLT	1	
16	A-04292-719	HOSE	1	
17	A-04292-718	HOSE	1	
18	0-1000-01025	M10 X 25 HEX BOLT	8	
19	0-1100-01025	M10 LOCK WASHER	8	
20	0-1120-01020	M10 WASHER	8	
21	A-04392-210	A/C CONDENSOR MOUNT LH	1	
22	A-04392-212	A/C CONDENSER MOUNT PLATE	2	
23	0-1120-816	M8 WASHER	4	
24	0-1100-00820	M8 LOCK WASHER	4	
25	0-1000-00825	M8 X 25 HEX BOLT	4	
26	A-04392-713	A/C CONDENSER	1	
27	0-1120-00510	M5 WASHER	8	

TABLE FOR FIGURE 04-01: (Cont.)

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
28	0-1100-00513	M5 LOCK WASHER	8	
29	0-1000-00512	M5 X 12 HEX BOLT	8	
30	A-04392-211	A/C CONDENSOR MOUNT RH	1	
31	338-0508	BELT	1	

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 05-01 TENSIONER ASSEMBLY

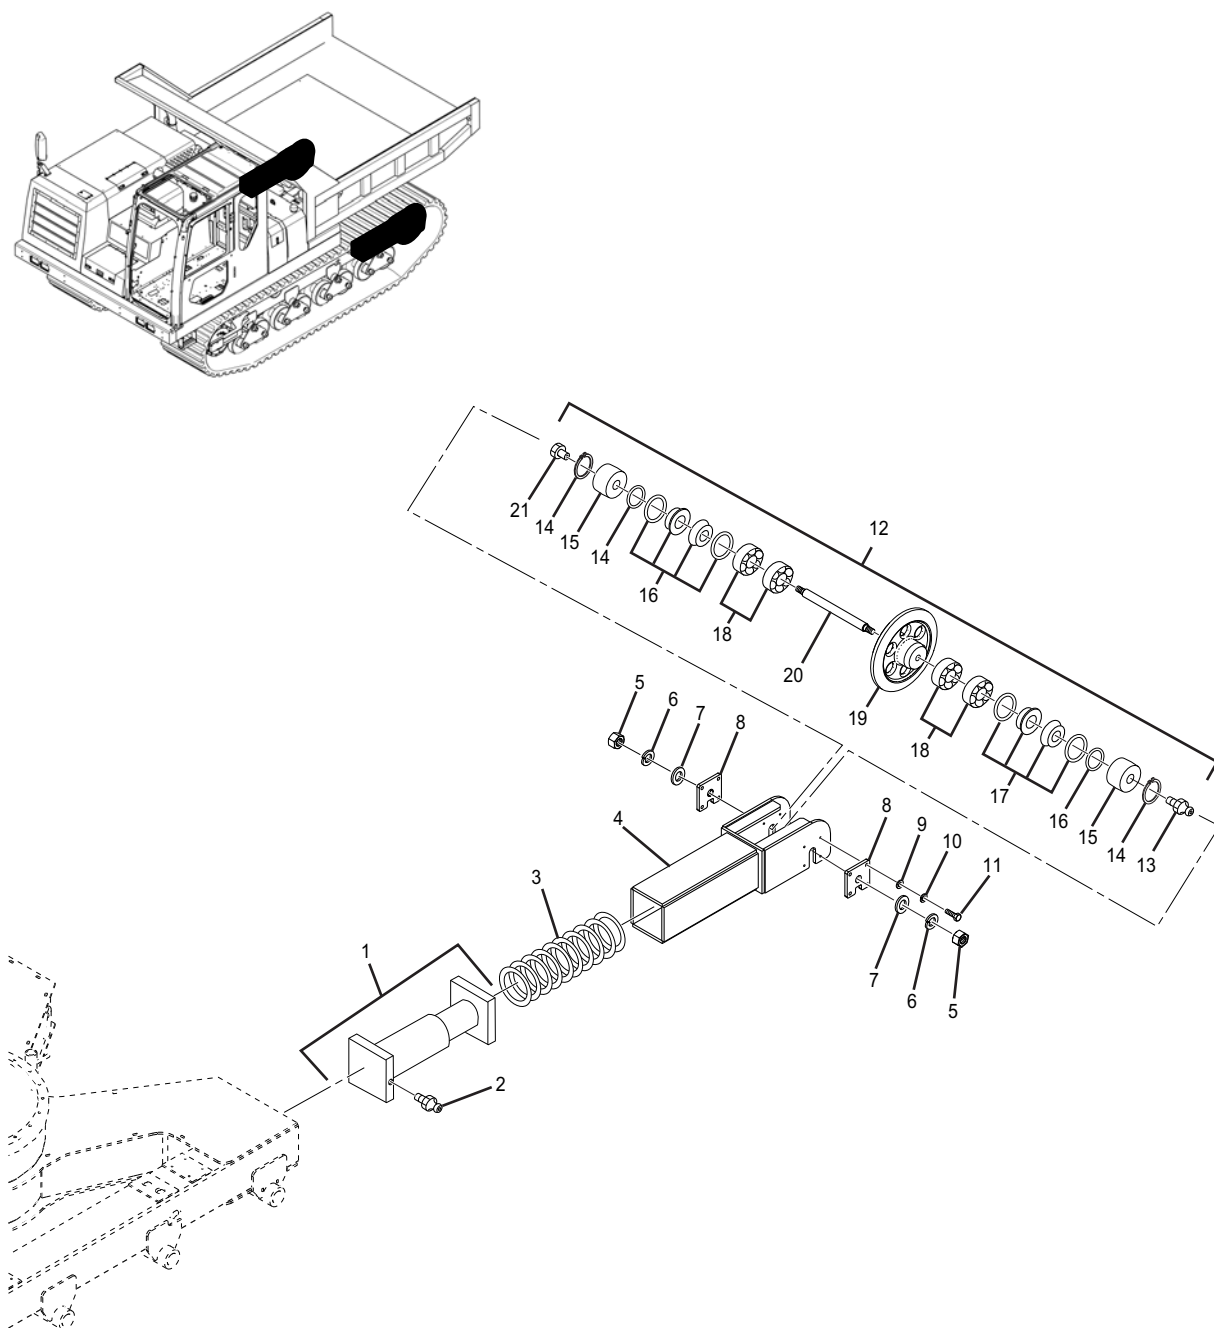


TABLE FOR FIGURE 05-01:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	1-17330-1221	CYLINDER ADJUSTER	2	
2	1-11330-1230	•TRACK ADJUSTMENT VALVE	2	
3	1-17330-1210	RECOIL SPRING	2	
4	A-04233-100	SLIDE HOLDER	2	
5	0-1210-33629	M36 NUT	4	
6	0-1100-03690	M36 LOCK WASHER	8	
7	1-19350-1180	M36 WASHER	8	
8	A-04233-200	LOCK PLATE, IDLER	4	
9	0-1140-31232	M12 WASHER	16	
10	0-1100-01230	M12 LOCK WASHER	16	
11	0-1000-31225	M12 X 25 HEX BOLT	16	
12	1-18330-0012	IDLER ASSEMBLY	2	
13	0-3400-00100	•GREASE NIPPLE	2	
14	0-3300-02565	•SNAP RING	4	
15	1-18330-1151	•CAP	4	
16	0-2000-03170	•O-RING	4	
17	1-19330-0020	•FLOATING SEAL KIT	4	
18	0-6003-00214	•ROLLER BEARING	8	
19	1-18320-1111	•IDLER	2	
20	1-18320-1121	•SHAFT	2	
21	1-18330-1170	•RELIEF FITTING	2	

FIGURE 05-02 ROLLERS, PLANETARY GEAR

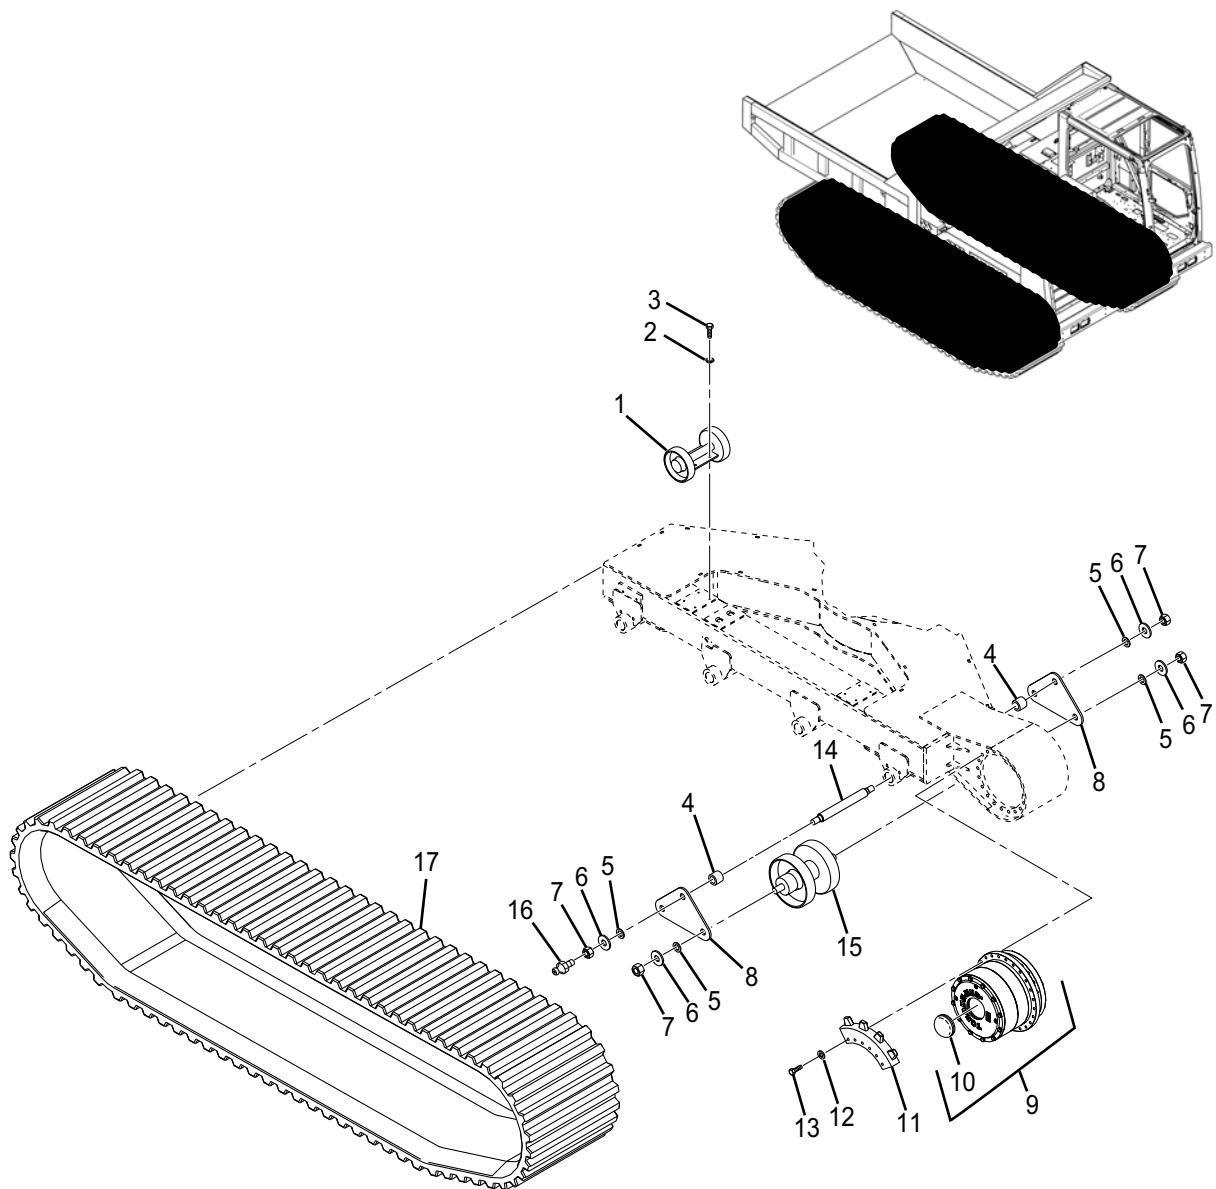


TABLE FOR FIGURE 05-02:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	1-24340-0011	TOP ROLLER	4	
2	0-1100-01230	M12 LOCK WASHER	16	
3	0-1000-31225	M12 X 25 HEX BOLT	16	
4	1-18350-1230	BUSHING	16	
5	1-19350-1180	M36 WASHER	48	
6	0-1100-03690	M36 LOCK WASHER	48	
7	0-1210-33629	M36 NUT	48	
8	A-04235-100	ROLLER PALTE	16	
9	A-08063-701	PLANETARY HUB ASSEMBLY	2	
10	M85900401	•AXLE CAP	2	
11	A-04232-200	SPROCKET SEGMENT	8	
12	1-28320-1140	3/4 EXTRA THICK WASHER (M20 HARD WASHER)	48	
13	0-1000-32060	M20 X 60 HEX BOLT	48	
14	1-18350-1213	PIVOT SHAFT	8	
15	1-46350-0010	TRACK ROLLER	32	
16	0-3400-00100	GREASE NIPPLE	8	
17	1-41310-1110	RUBBER TRACK 800 x 150 x 66	2	

FIGURE 05-03 CHASSIS STEPS

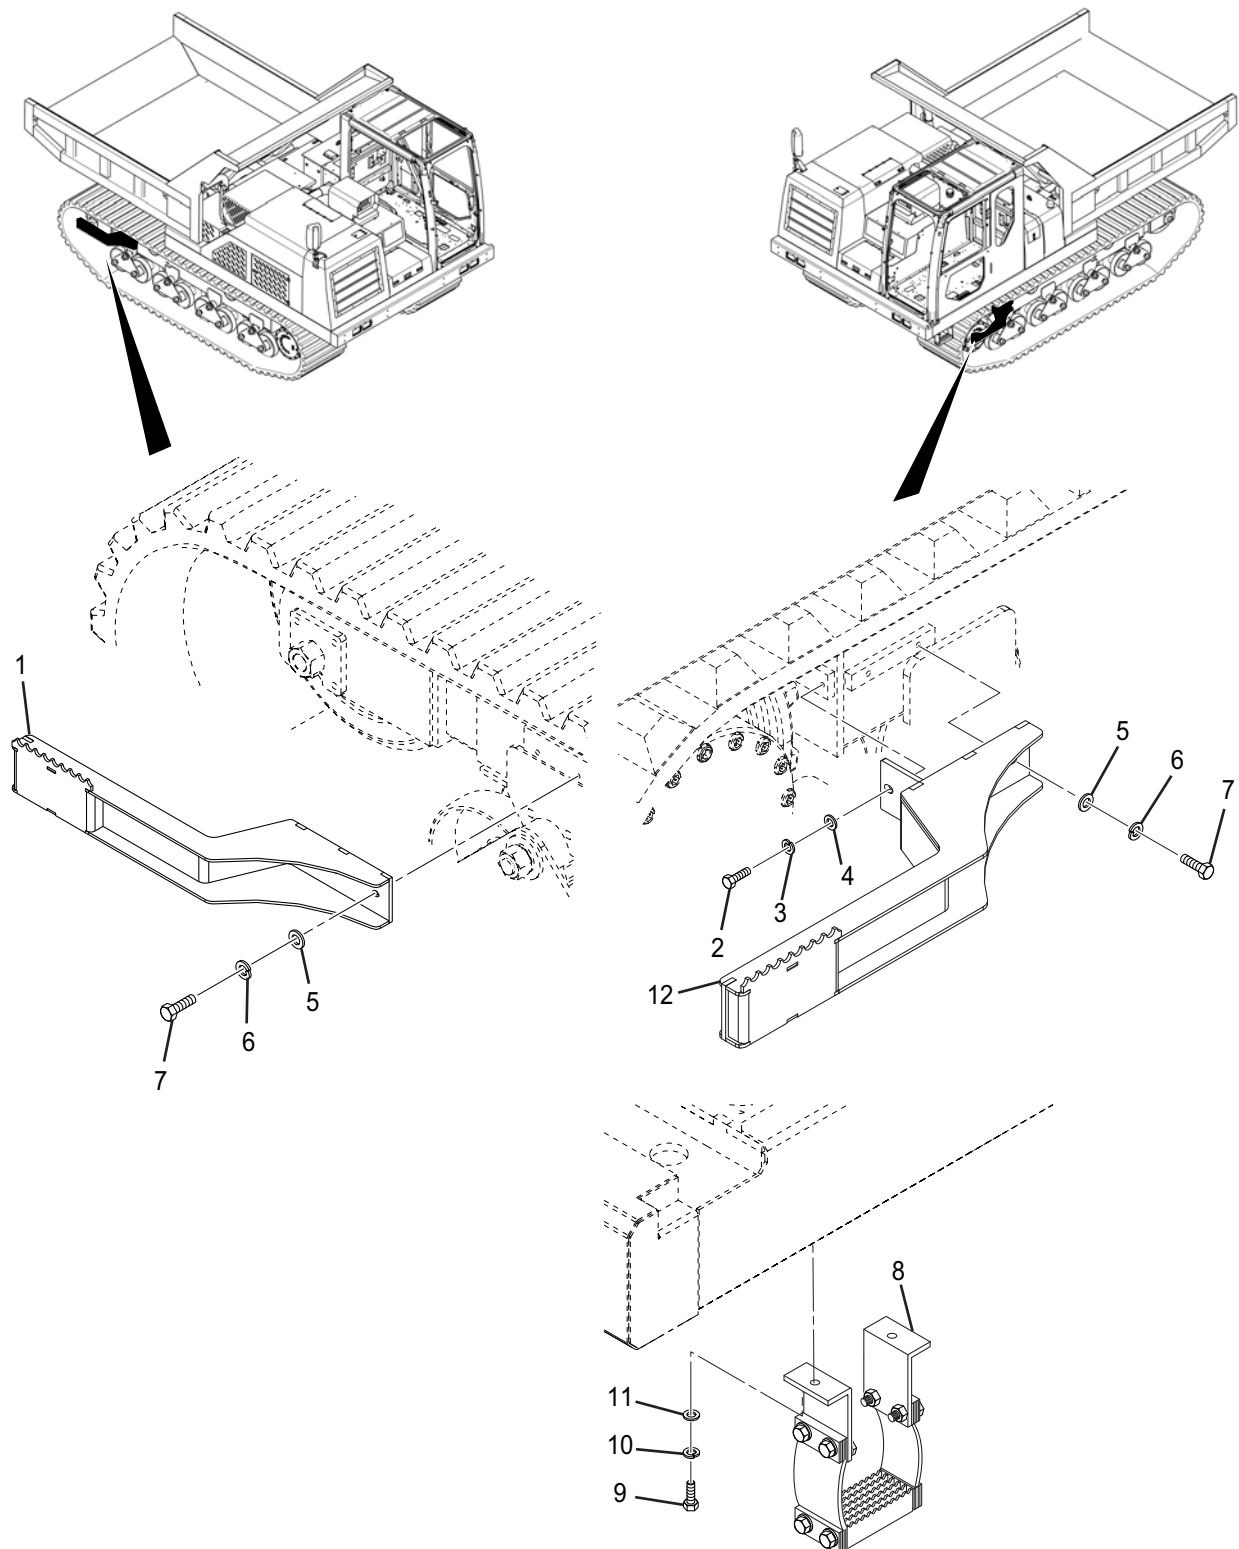


TABLE FOR FIGURE 05-03:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-04352-141	STEP, CHASSIS, IDLER SIDE	1	
2	0-1000-31230	M12 X 30 HEX BOLT, HIGH TENSION	4	
3	0-1100-01230	M12 LOCK WASHER	4	
4	0-1120-01223	M12 WASHER	4	
5	0-1140-31445	M14 WASHER	4	
6	0-1100-31435	M14 LOCK WASHER	4	
7	0-1000-31425	M14 X 25 HEX BOLT	4	
8	A-04352-171	STEP WIDE LADDER	1	
9	0-1000-01025	M10 X 25 HEX BOLT	2	
10	0-1100-01025	M10 LOCK WASHER	2	
11	0-1120-01020	M10 WASHER	2	
12	A-04252-141	STEP, CHASSIS, TRAVEL MOTOR SIDE	1	

THIS PAGE INTENTIONALLY LEFT BLANK

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 06-01 MAIN PUMPS

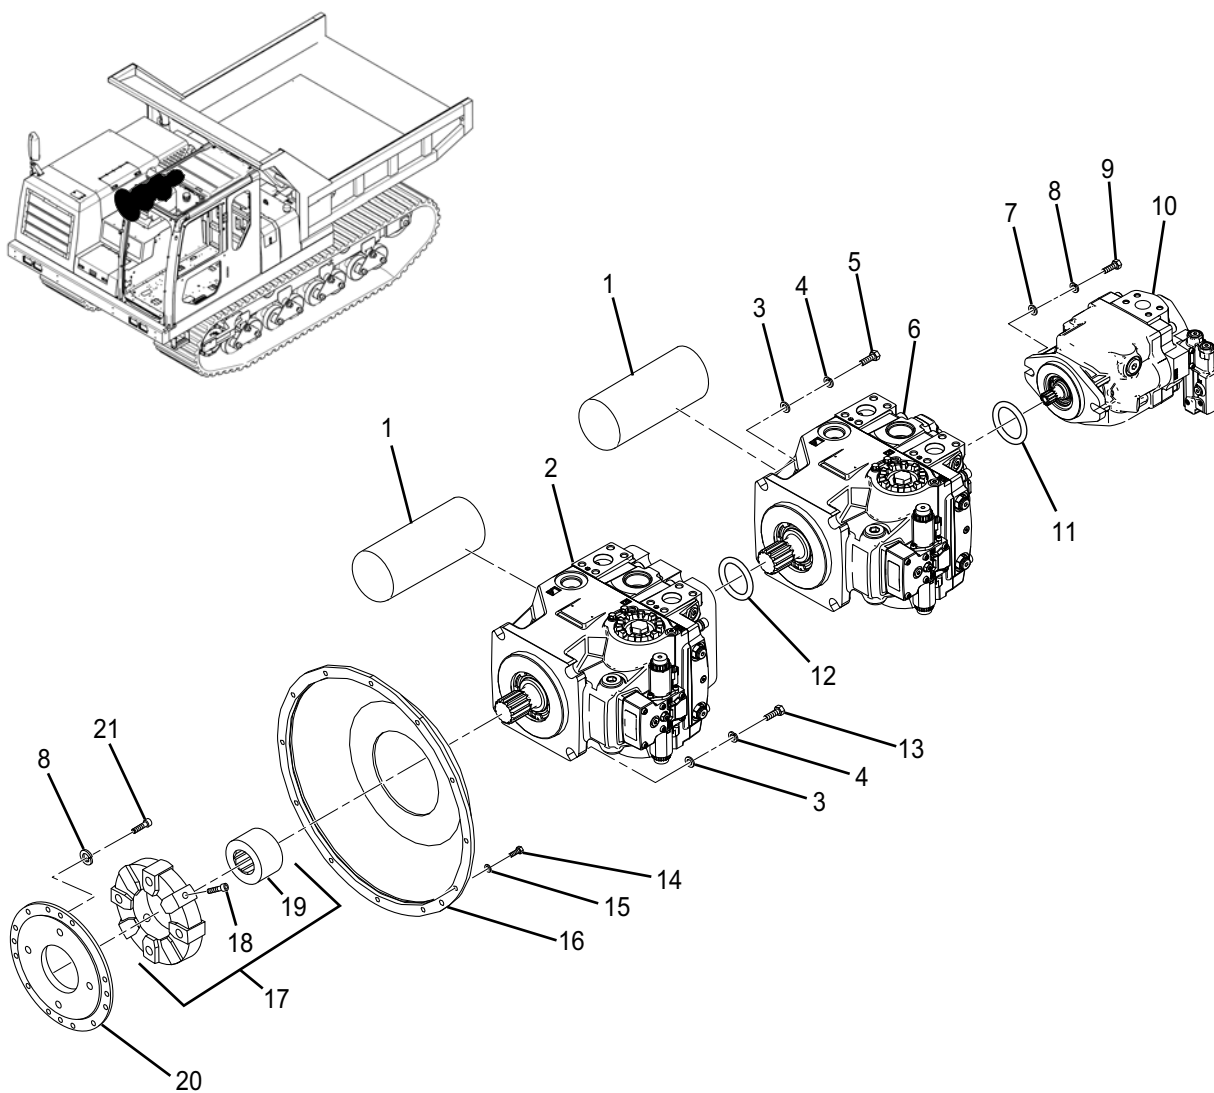


TABLE FOR FIGURE 06-01:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	11004919	PUMP FILTER	2	
2	A-04261-701	FRONT PUMP	1	
3	0-1120-02032	M20 WASHER	8	
4	0-1100-02051	M20 LOCK WASHER	8	
5	0-1000-32050	M20 X 50 HEX BOLT	4	
6	A-04261-702	REAR PUMP	1	
7	0-1120-01223	M12 WASHER	2	
8	0-1100-01230	M12 LOCK WASHER	10	
9	0-1000-31235	M12 X 35 HEX BOLT	2	
10	A-04361-705	GEAR PUMP	1	
11	A-04261-704	O-RING, MEDIUM	1	
12	A-04261-703	O-RING, LARGE	1	
13	0-1000-32045	M20 X 45 HEX BOLT	4	
14	0-1000-31035	M10 X 35 HEX BOLT	12	
15	0-1100-31025	M10 LOCK WASHER	12	
16	1-41160-1151	BELL HOUSING	1	
17	A-04216-700	COUPLING	1	
18	A-04216-701	•M20 X 65 HEX BOLT	8	
19	1-54160-1130	•BOSS	1	
20	1-27160-1141	CENTER PLATE	1	
21	0-1500-00730	UNC 7/16 X 30 HEX BOLT	8	

PUMP FILTER
DONALDSON
PART# P164378

FIGURE 06-02 HYDRAULIC PUMP LINES

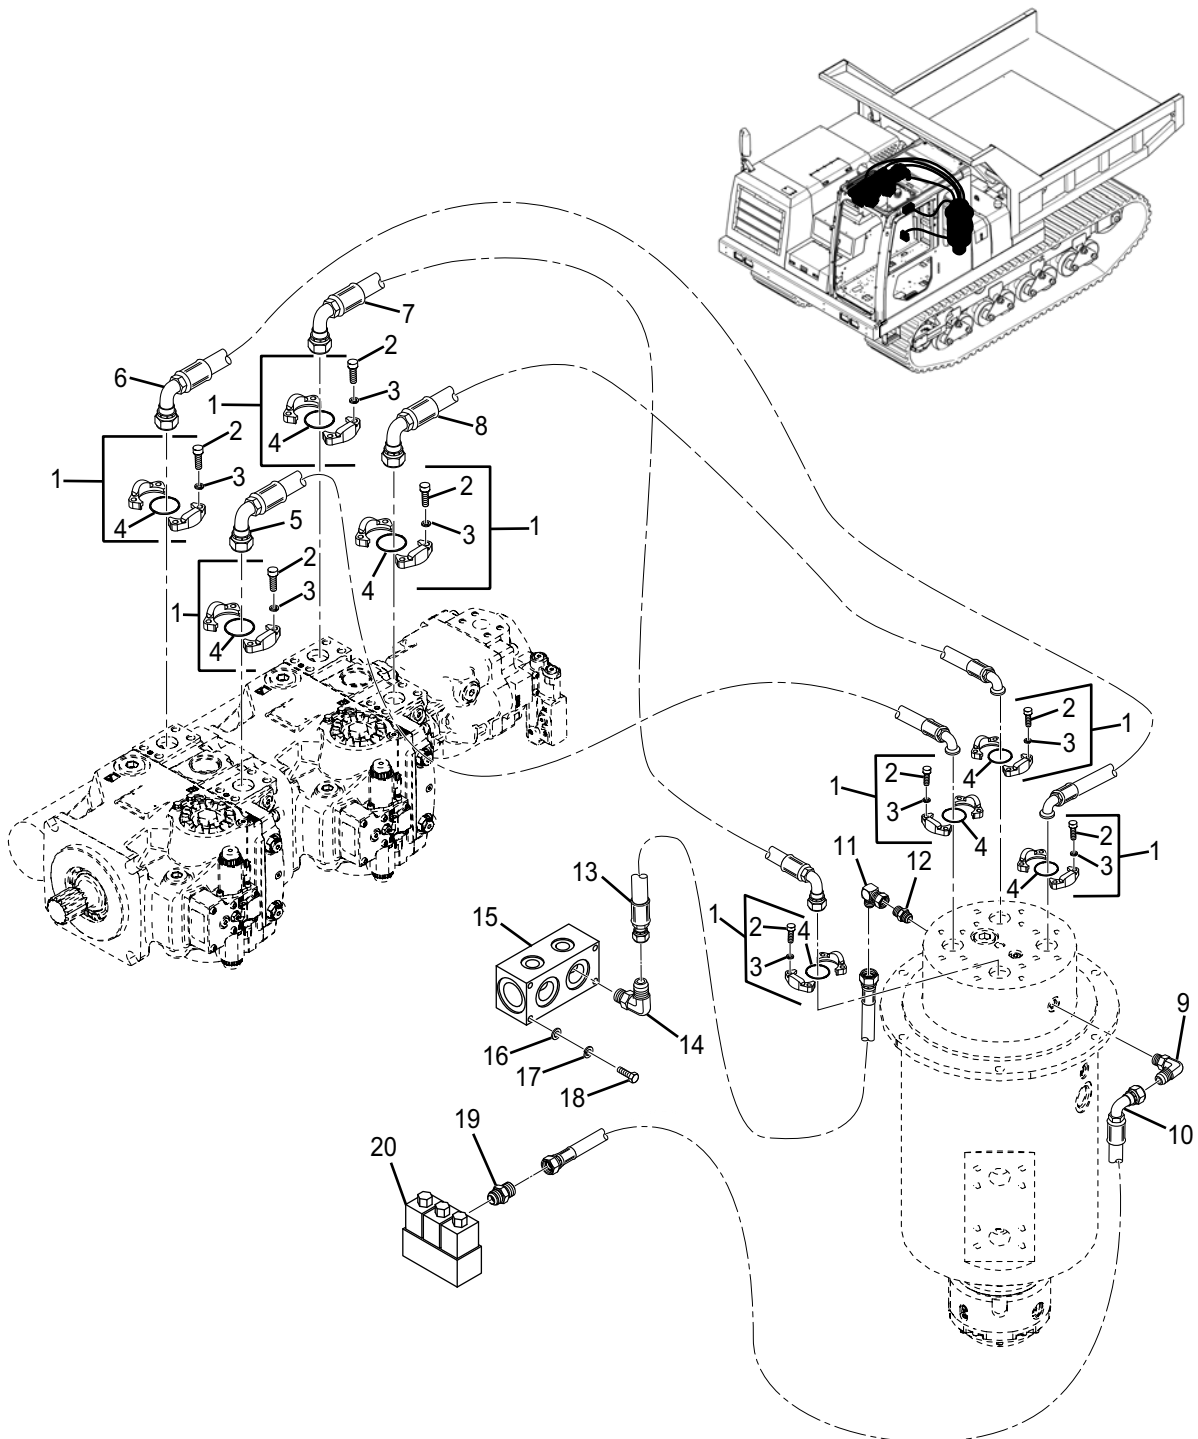


TABLE FOR FIGURE 06-02:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-04267-900	SPLIT FLANGE ASSEMBLY, 20 CODE 62	8	
2	12-45-SHCS-P	•M12 X 45 ALLEN HEAD BOLT	8	
3	12-LWHC-P	•M12 HI-COLLAR LOCK WASHER	8	
4	A-04267-904	•O-RING	8	
5	A-04367-716	HOSE	1	
6	A-04367-717	HOSE	1	
7	A-04367-715	HOSE	1	
8	A-04367-718	HOSE	1	
9	6801-04-06-NWO-FG	STRAIGHT THREAD ELBOW	1	
10	A-04367-719	HOSE	1	
11	6500-12-12	SWIVEL NUT ELBOW	1	
12	6400-12-16-0	STRAIGHT THREAD CONNECTOR	1	
13	A-04367-720	HOSE	1	
14	6801-12-16-NWO-FG	STRAIGHT THREAD ELBOW	1	
15	A-04367-600	TANK RETURN MANIFOLD	1	
16	0-1120-00816	M8 WASHER	4	
17	0-1100-00820	M8 LOCK WASHER	4	
18	0-1000-00875	M8 X 75 HEX BOLT	4	
19	6400-04-06-O	STRAIGHT THREAD CONNECTOR	1	
20	A-04262-700	3-WAY VALVE	1	

FIGURE 06-03 OIL COOLER AND AUXILIARY PUMP

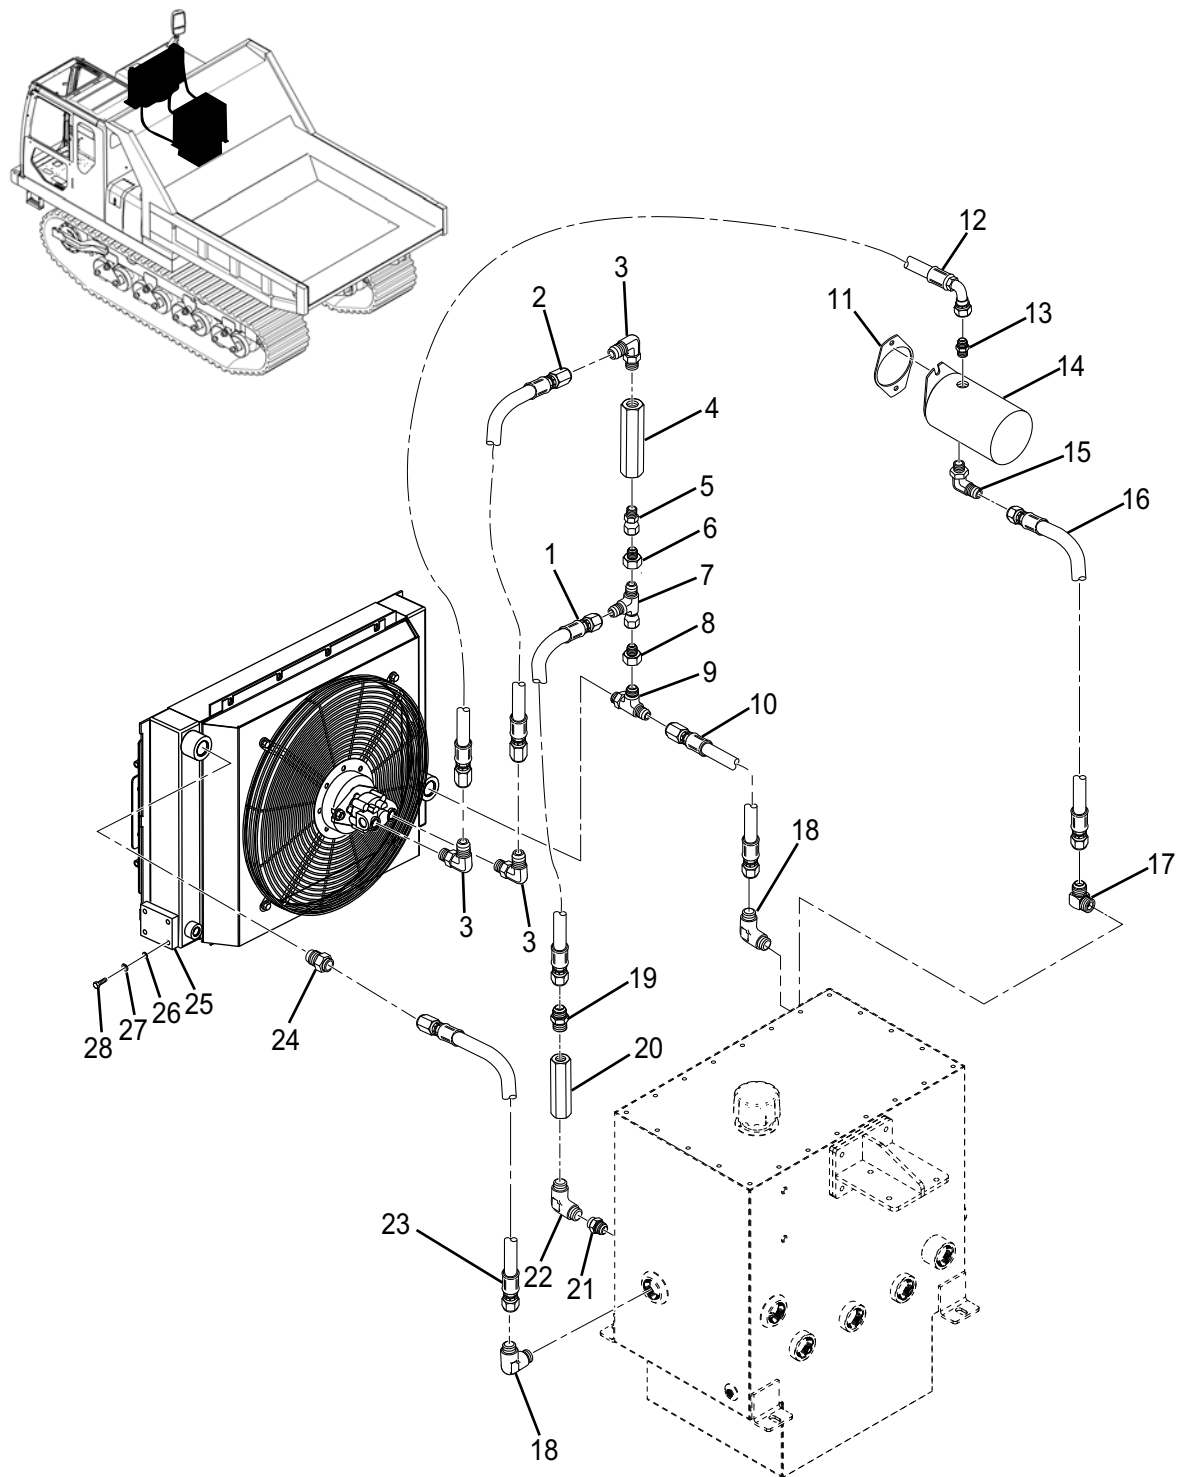


TABLE FOR FIGURE 06-03:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-04367-790	HOSE 28 INCH	1	
2	A-04367-800	HOSE 20 INCH	1	
3	6801-08-08-NWO-FG	STRAIGHT THREAD ELBOW	1	
4	A-04262-702	CHECK VALVE	1	
5	6402-08-08-O	SWIVEL STRAIGHT THREAD CONNECTOR	1	
6	2406-16-08	TUBE END REDUCER	1	
7	6602-16-16-16	SWIVEL NUT RUN TEE	1	
8	2406-20-16	TUBE END REDUCER	1	
9	6804-20-20-20-NWO	STRAIGHT THREAD RUN TEE	1	
10	A-04367-788	HOSE 15 INCH	1	
11	A-04261-707	GASKET	1	
12	A-04367-801	HOSE 27.5 INCH	1	
13	6400-08-10-O	STRAIGHT THREAD CONNECTOR	1	
14	A-04261-706	AUXILIARY PUMP	1	
15	6801-12-12-NWO-FG	STRAIGHT THREAD ELBOW	1	
16	A-04367-802	HOSE 33 INCH	1	
17	2501-12-16-FG	MALE ELBOW	1	
18	2501-20-24-FG	MALE ELBOW	2	
19	2404-16-16	MALE CONNECTOR	1	
20	8-12670-1210	CHECK VALVE	1	
21	5406-20-16	PIPE THREAD REDUCER	1	
22	5500-16-16-FG	MALE PIPE ELBOW	1	
23	A-04367-789	HOSE 30.5 INCH	1	
24	6400-20-20-O	STRAIGHT THREAD CONNECTOR	1	

TABLE FOR FIGURE 06-03: (Cont.)

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
25	A-04269-700	OIL COOLER	1	
26	0-1120-01020	M10 WASHER	8	
27	0-1100-01025	M10 LOCK WASHER	8	
28	0-1000-01025	M10 X 25 HEX BOLT	8	

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 06-04 TRAVEL MOTOR LINES

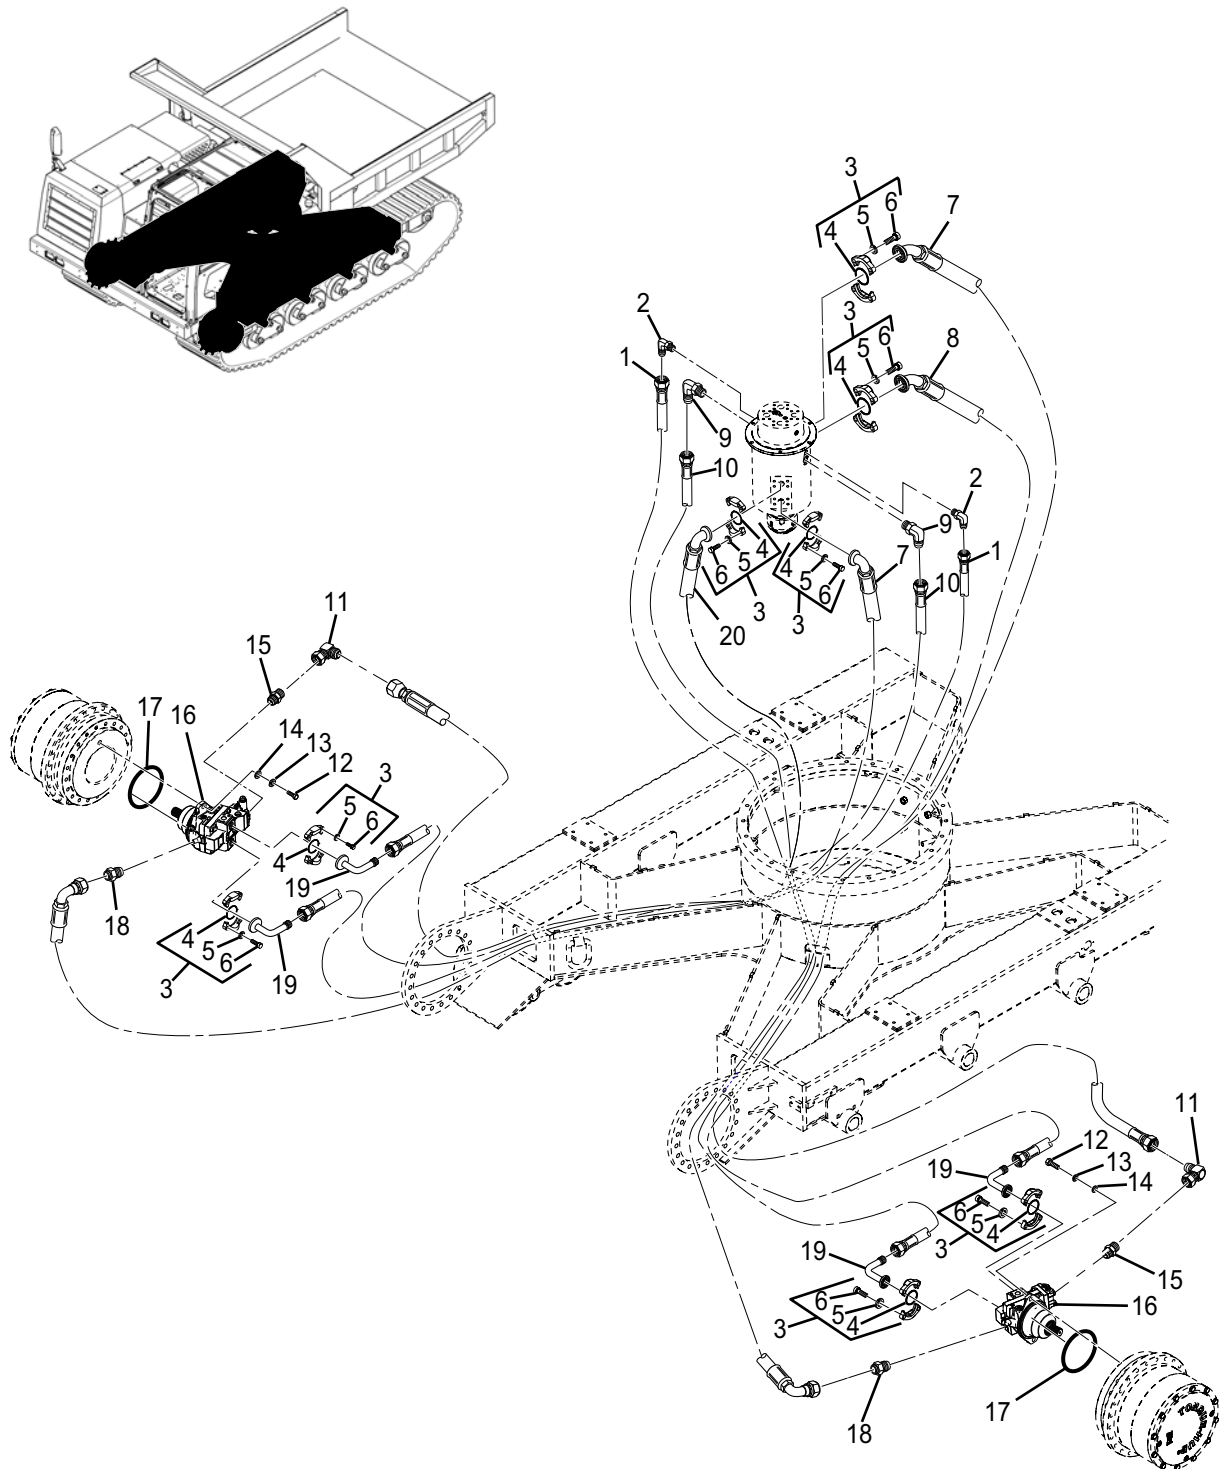


TABLE FOR FIGURE 06-04:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-04367-705	HOSE 106 INCH	2	
2	6801-04-06-NWO-FG	STRAIGHT THREAD ELBOW	2	
3	A-04267-900	SPLIT FLANGE ASSEMBLY, 20 CODE 62	8	
4	A-04267-904	•O-RING	8	
5	A-04267-903	•WASHER	8	
6	A-04267-902	•BOLT	32	
7	A-04367-702	HOSE 81 INCH	2	
8	A-04367-703	HOSE 82 INCH	1	
9	6801-12-16-NWO-FG	STRAIGHT THREAD ELBOW	2	
10	A-04367-706	HOSE 91 INCH	2	
11	6500-12-12	SWIVEL NUT ELBOW	2	
12	0-1000-02045	M20 X 45 HEX BOLT	4	
13	0-1100-02051	M20 LOCK WASHER	4	
14	0-1110-02040	M20 WASHER	4	
15	6400-12-12-O	STRAIGHT THREAD CONNECTOR	2	
16	A-04263-700	TRAVEL MOTOR	2	
17	A-04263-702	O-RING, PLANETARY	2	
18	7001-04-12	METRIC ADAPTER	2	
19	FS1804-20-20-FG	FLANGE ELBOW	4	
20	A-04367-704	HOSE 80.5 INCH	1	

FIGURE 06-05 DUMP LINES

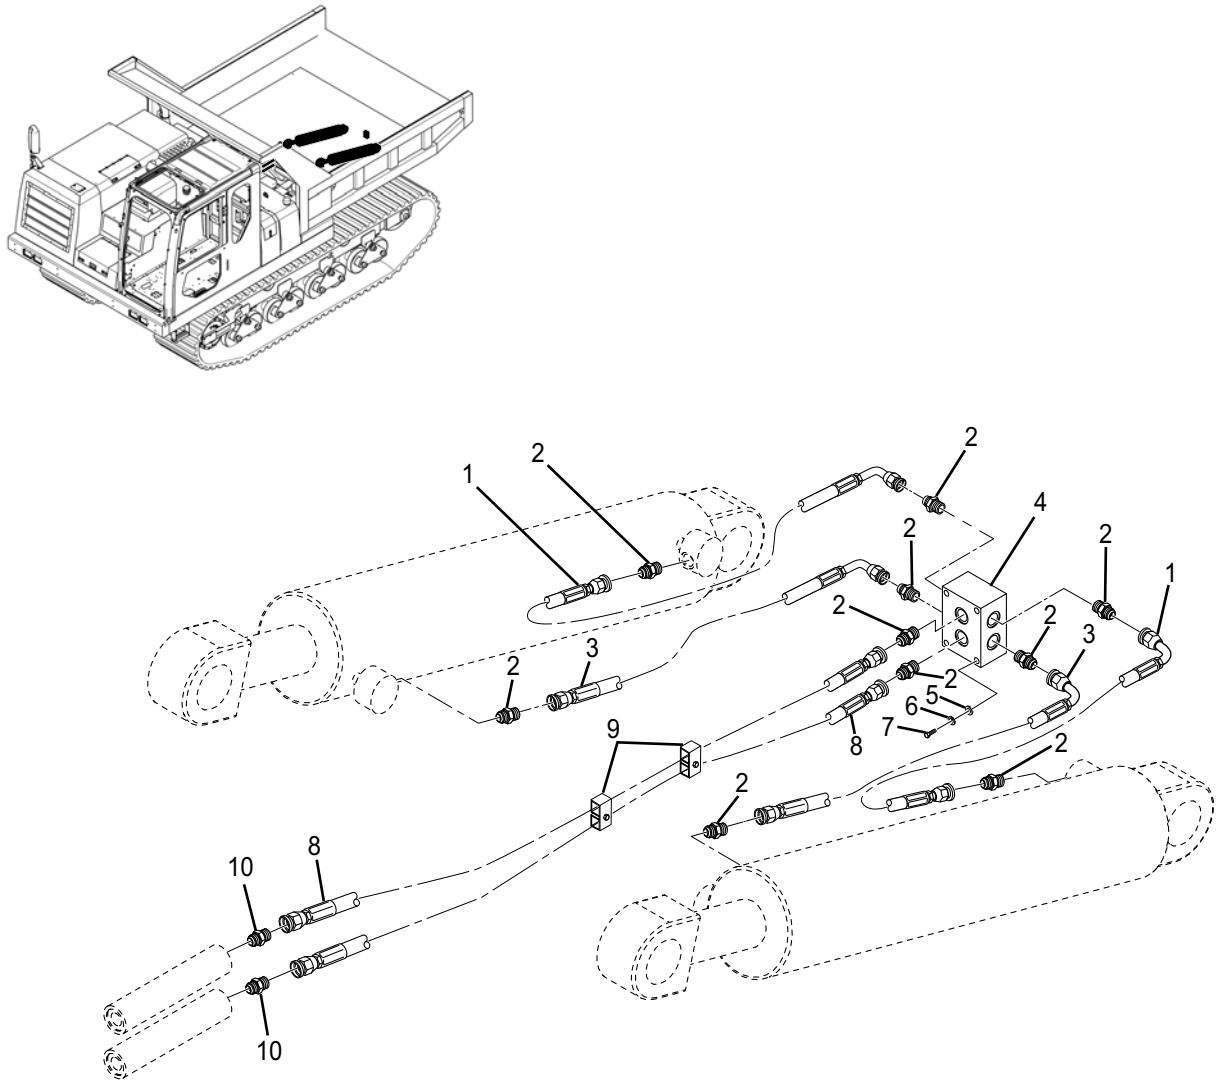


TABLE FOR FIGURE 06-05:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-04367-810	HOSE 28.5 INCH	2	
2	6400-08-10-O	STRAIGHT THREAD CONNECTOR	10	
3	A-04367-809	HOSE 38 INCH	2	
4	A-04367-500	DUMP TEE	1	
5	0-1120-00816	M8 WASHER	4	
6	0-1100-00820	M8 LOCK WASHER	4	
7	0-1000-00875	M8 X 75 HEX BOLT	4	
8	A-04367-808	HOSE 60 INCH	2	
9	A-04352-717	CLAMP DOUBLE	2	
10	6400-08-10-O	STRAIGHT THREAD CONNECTOR	2	

FIGURE 06-06 SWIVEL TOP LINES

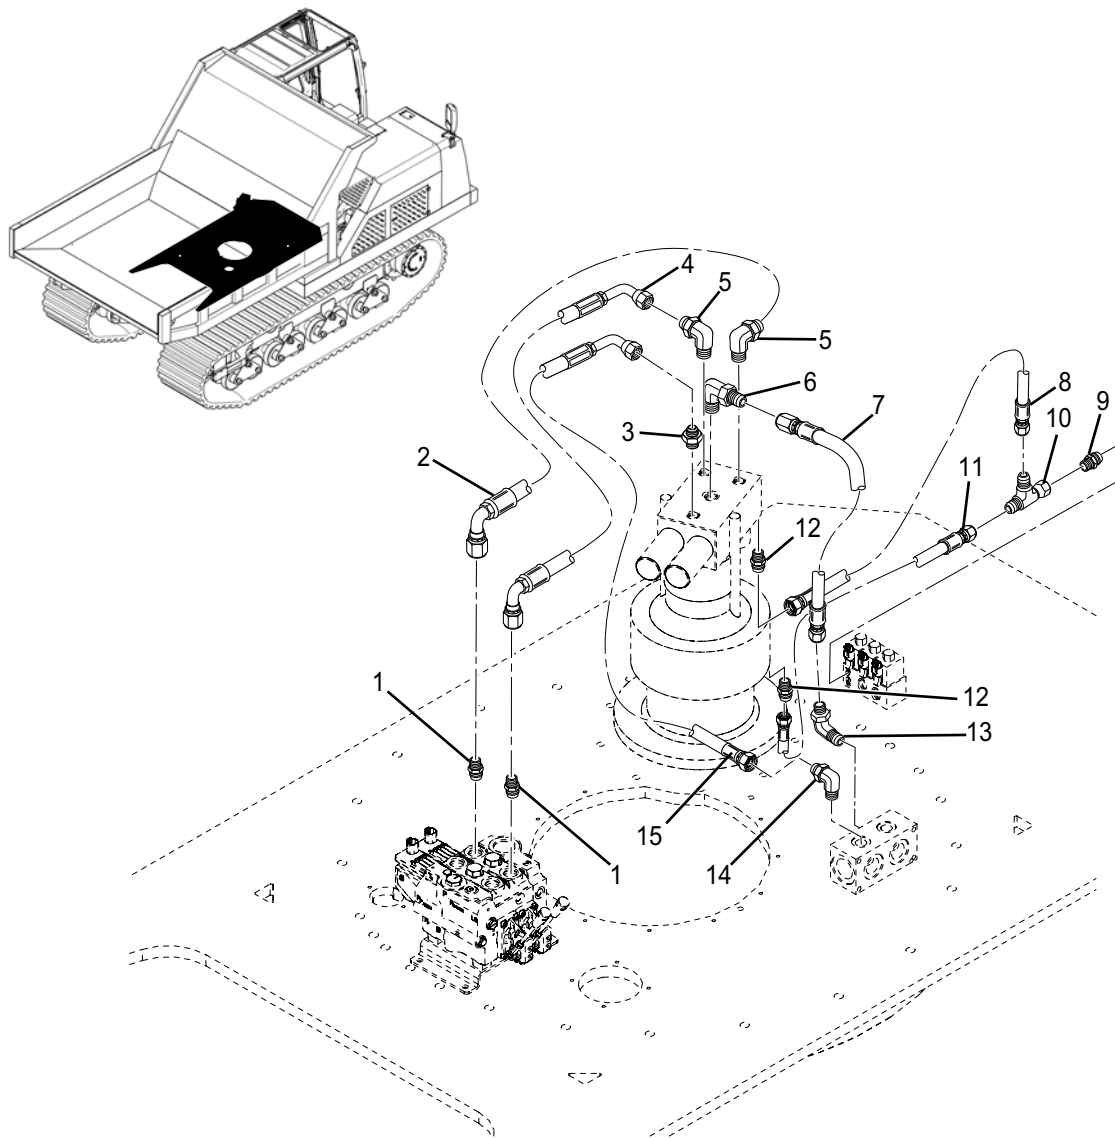


TABLE FOR FIGURE 06-06:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	6400-08-12-O	STRAIGHT THREAD CONNECTOR	2	
2	A-04367-815	HOSE 33.5 INCH	1	
3	7002-08-06-BS	MJ-MBSPP CONNECTOR	1	
4	A-04367-816	HOSE 34 INCH	1	
5	7202-08-08-NWO	MJ-MBSPPAORB 90 ELBOW	1	
6	7202-12-12-NWO	MJ-MBSPPAORB 90 ELBOW	1	
7	A-04367-820	HOSE 32 INCH	1	
8	A-04367-819	HOSE 16 INCH	1	
9	6400-04-06-O	STRAIGHT THREAD CONNECTOR	1	
10	6602-04-04-04	SWIVEL NUT RUN TEE	1	
11	A-04367-818	HOSE 14 INCH	1	
12	7002-04-04-BS	MJ-MBSPP CONNECTOR	2	
13	6802-12-16-NWO	45 STRAIGHT THREAD ELBOW	1	
14	6801-08-10-NWO-FG	STRAIGHT THREAD ELBOW	1	
15	A-04367-817	HOSE 36 INCH	1	

FIGURE 06-07 HYDRAULIC FILTER LINES

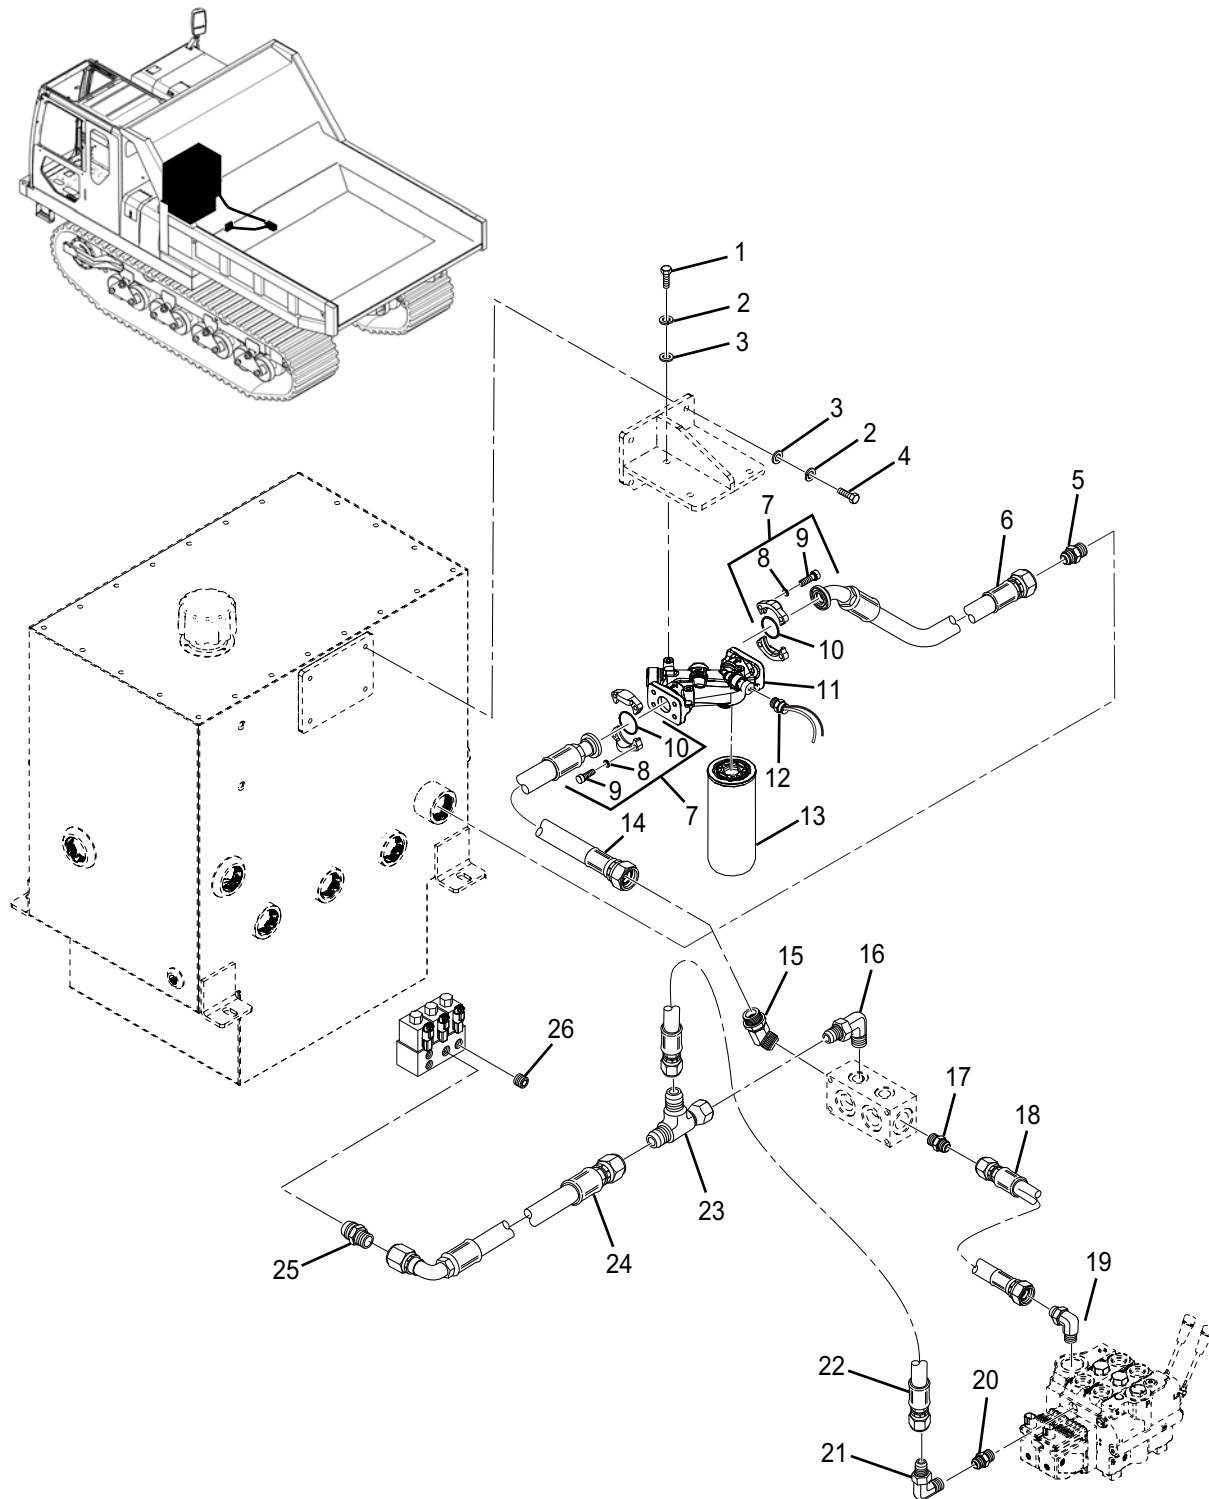


TABLE FOR FIGURE 06-07:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	0-1500-30630	3-8 16 UNC X 30	3	
2	0-1100-01025	M10 LOCK WASHER	7	
3	0-1120-01020	M10 WASHER	7	
4	0-1000-01025	M10 X 25 HEX BOLT	4	
5	2404-20-24	MALE CONNECTOR	1	
6	A-04367-765	HOSE 22.5 INCH	1	
7	A-04267-910	SPLIT FLANGE KIT	2	
8	A-04267-913	•WASHER	8	
9	A-04267-912	•BOLT	8	
10	A-04267-914	•O-RING	2	
11	A-04265-700	DUAL FILTER HEAD	1	
12	A-04265-702	FILTER INDICATOR SWITCH	1	
13	A-04265-701	FILTER ELEMENT	2	
14	A-04367-766	HOSE 44 INCH	1	
15	6802-20-20-NWO	45 STRAIGHT THREAD ELBOW	1	
16	6801-04-10-NWO-FG	STRAIGHT THREAD ELBOW	1	
17	6400-16-16-O	STRAIGHT THREAD CONNECTOR	1	
18	A-04367-748	HOSE 30.5 INCH	1	
19	6801-16-20-NWO-FG	STRAIGHT THREAD ELBOW	1	
20	6400-04-06-O	STRAIGHT THREAD CONNECTOR	1	
21	6500-04-04	SWIVEL NUT ELBOW	1	
22	A-04367-750	HOSE 50 INCH	1	
23	6602-04-04-04	SWIVEL NUT RUN TEE	1	
24	A-04367-827	HOSE 24.5 INCH	1	
25	6400-04-06-O	STRAIGHT THREAD CONNECTOR	1	

TABLE FOR FIGURE 06-07: (Cont.)

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
26	6408-06-O	HEX HEAD PLUG	1	

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 06-08 HYDRAULIC TANK LINES

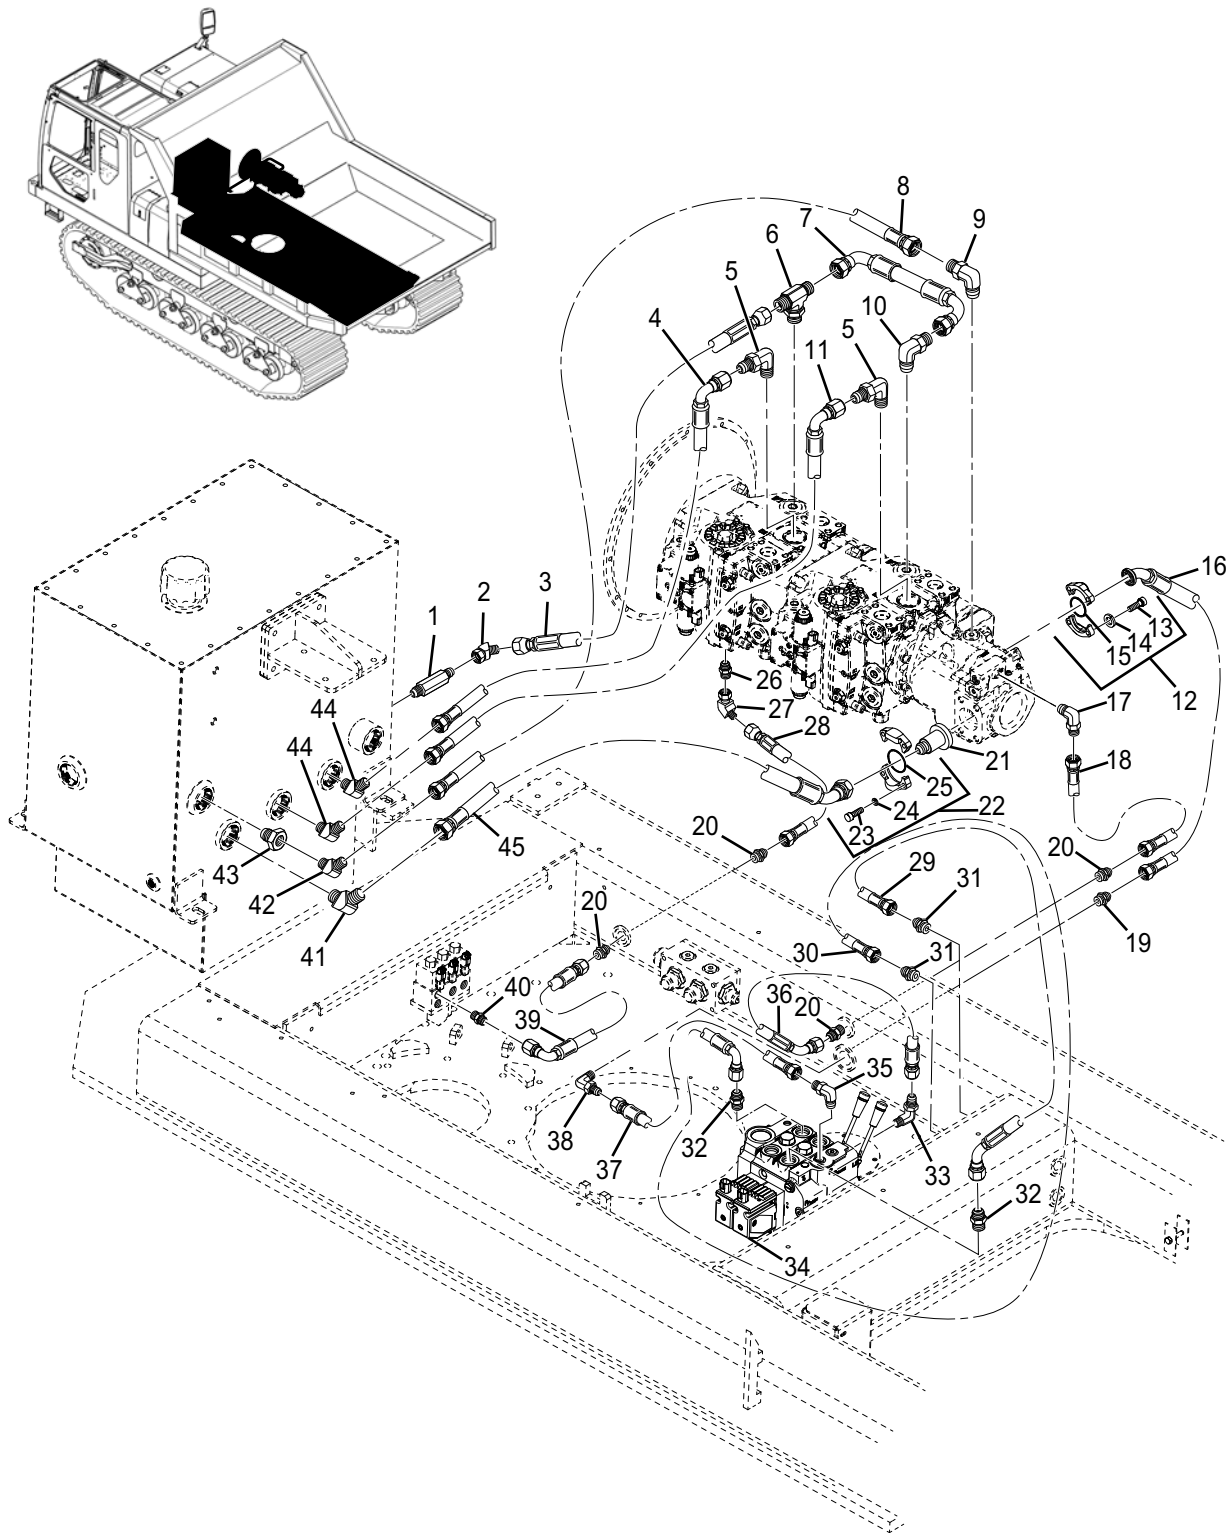


TABLE FOR FIGURE 06-08:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	5404-N-16-16X4	PIPE NIPPLE WITH NUT	1	
2	2505-16-16	MJ-FP 45 ELBOW	1	
3	A-04367-767	HOSE 20 INCH	1	
4	A-04367-764	HOSE 30.5 INCH	1	
5	6801-20-20-NWO-FG	STRAIGHT THREAD ELBOW	2	
6	6803-16-16-16-NWO	STRAIGHT THREAD BRANCH TEE	1	
7	A-04367-862	HOSE 13 INCH	1	
8	A-04367-772	HOSE 55 INCH	1	
9	6801-08-10-NWO-FG	STRAIGHT THREAD ELBOW	1	
10	6801-16-16-NWO-FG	STRAIGHT THREAD ELBOW	1	
11	A-04367-763	HOSE 38 INCH	1	
12	A-04367-930	SPLIT FLANGE KIT	1	
13	A-04367-932	•BOLT	4	
14	A-04367-933	•WASHER	4	
15	A-04367-934	•O-RING	1	
16	A-04367-863	HOSE 27 INCH	1	
17	6801-04-04-NWO-FG	STRAIGHT THREAD ELBOW	1	
18	A-04367-731	HOSE 31 INCH	1	
19	6400-12-16-O	STRAIGHT THREAD CONNECTOR	1	
20	6400-04-10-O	STRAIGHT THREAD CONNECTOR	4	
21	1700-24-32	MJ-FLANGE STRAIGHT	1	
22	A-04367-920	SPLIT FLANGE KIT	1	
23	A-04367-922	•BOLT	4	

TABLE FOR FIGURE 06-08: (Cont.)

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
24	A-04367-923	•WASHER	4	
25	A-04367-924	•O-RING	1	
26	6400-04-06-O	STRAIGHT THREAD CONNECTOR	2	
27	6500-04-04	SWIVEL NUT ELBOW	1	
28	A-04367-730	HOSE 20 INCH	1	
29	A-04367-811	HOSE 19.5 INCH	1	
30	A-04367-812	HOSE 16.5 INCH	1	
31	6801-08-10-NWO-FG	STRAIGHT THREAD ELBOW	2	
32	6400-08-12-O	STRAIGHT THREAD CONNECTOR	2	
33	6801-08-10-NWO-FG	STRAIGHT THREAD ELBOW	1	
34	A-04362-701	VALVE ASSEMBLY, DUMP/SWING	1	
35	6801-12-16-NWO-FG	STRAIGHT THREAD ELBOW	1	
36	A-04367-749	HOSE 26 INCH	1	
37	A-04367-747	HOSE 30.5 INCH	1	
38	6801-12-16-NWO-FG	STRAIGHT THREAD ELBOW	1	
39	A-04367-826	HOSE 18 INCH	1	
40	6400-04-06-O	STRAIGHT THREAD CONNECTOR	1	
41	2503-24-24	45 MALE ELBOW	1	
42	2503-08-08-FG	45 MALE ELBOW	1	
43	5406-24-08	PIPE THREAD REDUCER	1	
44	2503-20-24	45 MALE ELBOW	2	
45	A-04367-762	HOSE 44.5 INCH	1	

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 07-01 DUMP BED

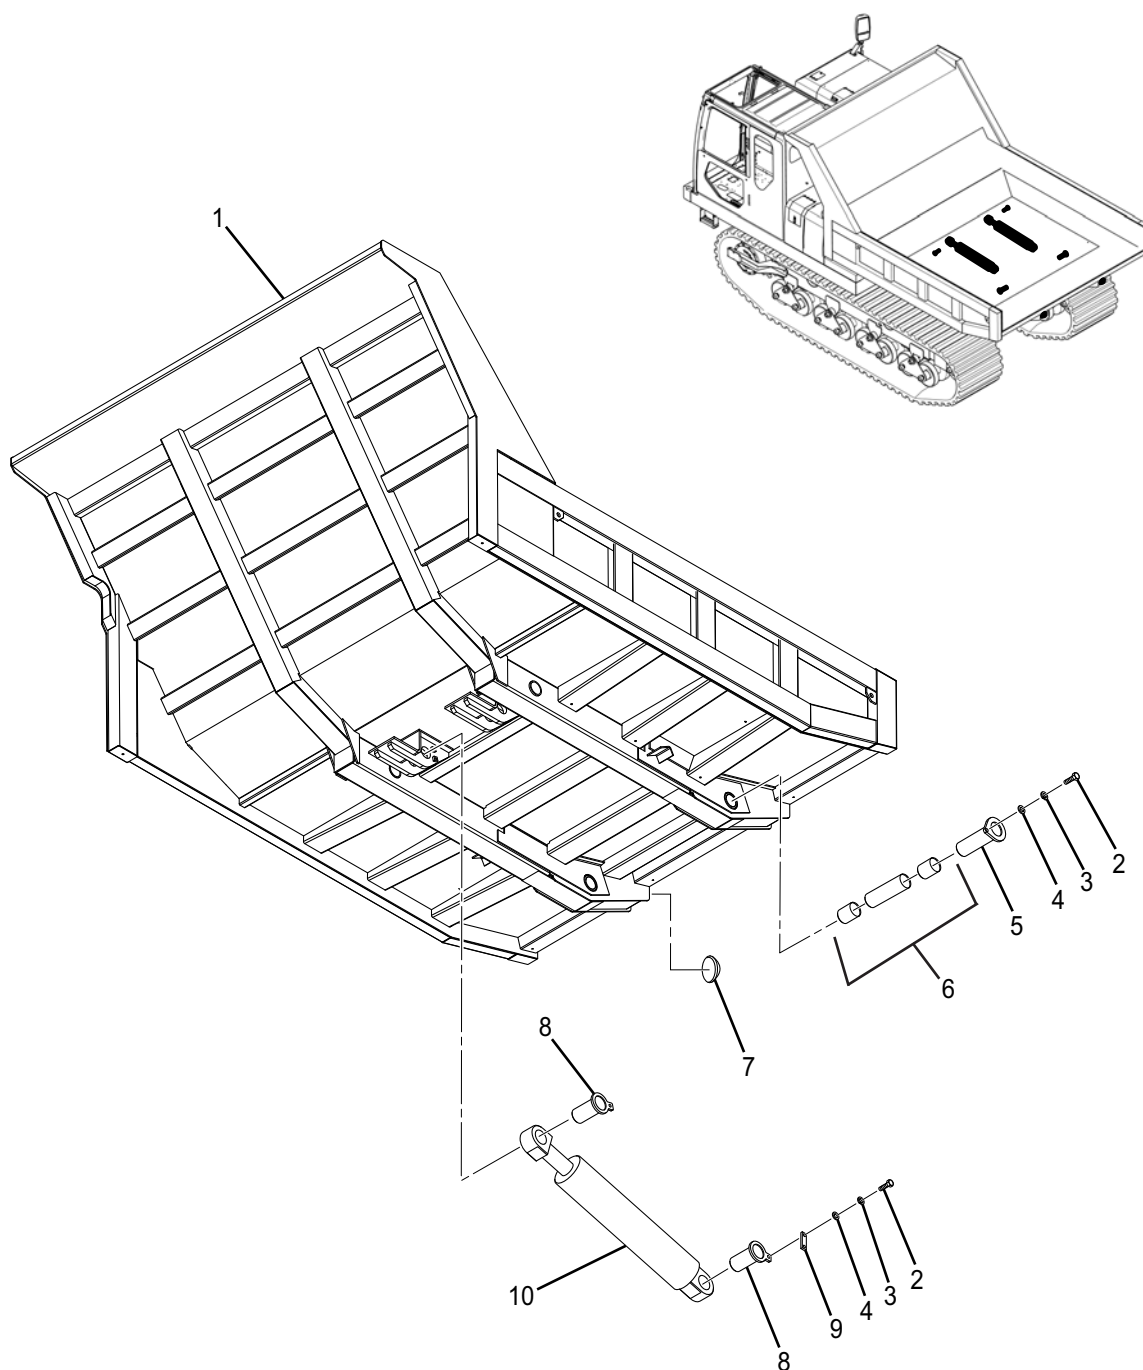


TABLE FOR FIGURE 07-01:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-04371-100	DUMP BED 2200VDR	1	
2	0-1000-01025	M10 X 25 HEX BOLT	2	
3	0-1100-01025	M10 LOCK WASHER	2	
4	0-1120-01020	M10 WASHER	2	
5	A-04371-217	HINGE PIN	2	
6	A-04371-800	HINGE PIN BUSHING, 02.3679/02.3719x 2.9565x6.4960	2	
7	1-11710-1150	REFLECTOR	2	
8	A-04371-207	CYLINDER PIN	4	
9	A-04371-258	PIN KEEPER	4	
10	A-04364-700	DUMP CYLINDER	2	

part# 431682 (head seal set)
part# 430673 (piston seal set)

THIS PAGE INTENTIONALLY LEFT BLANK

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 08-01 ECM HARNESS AND PROXIMITY HARNESS

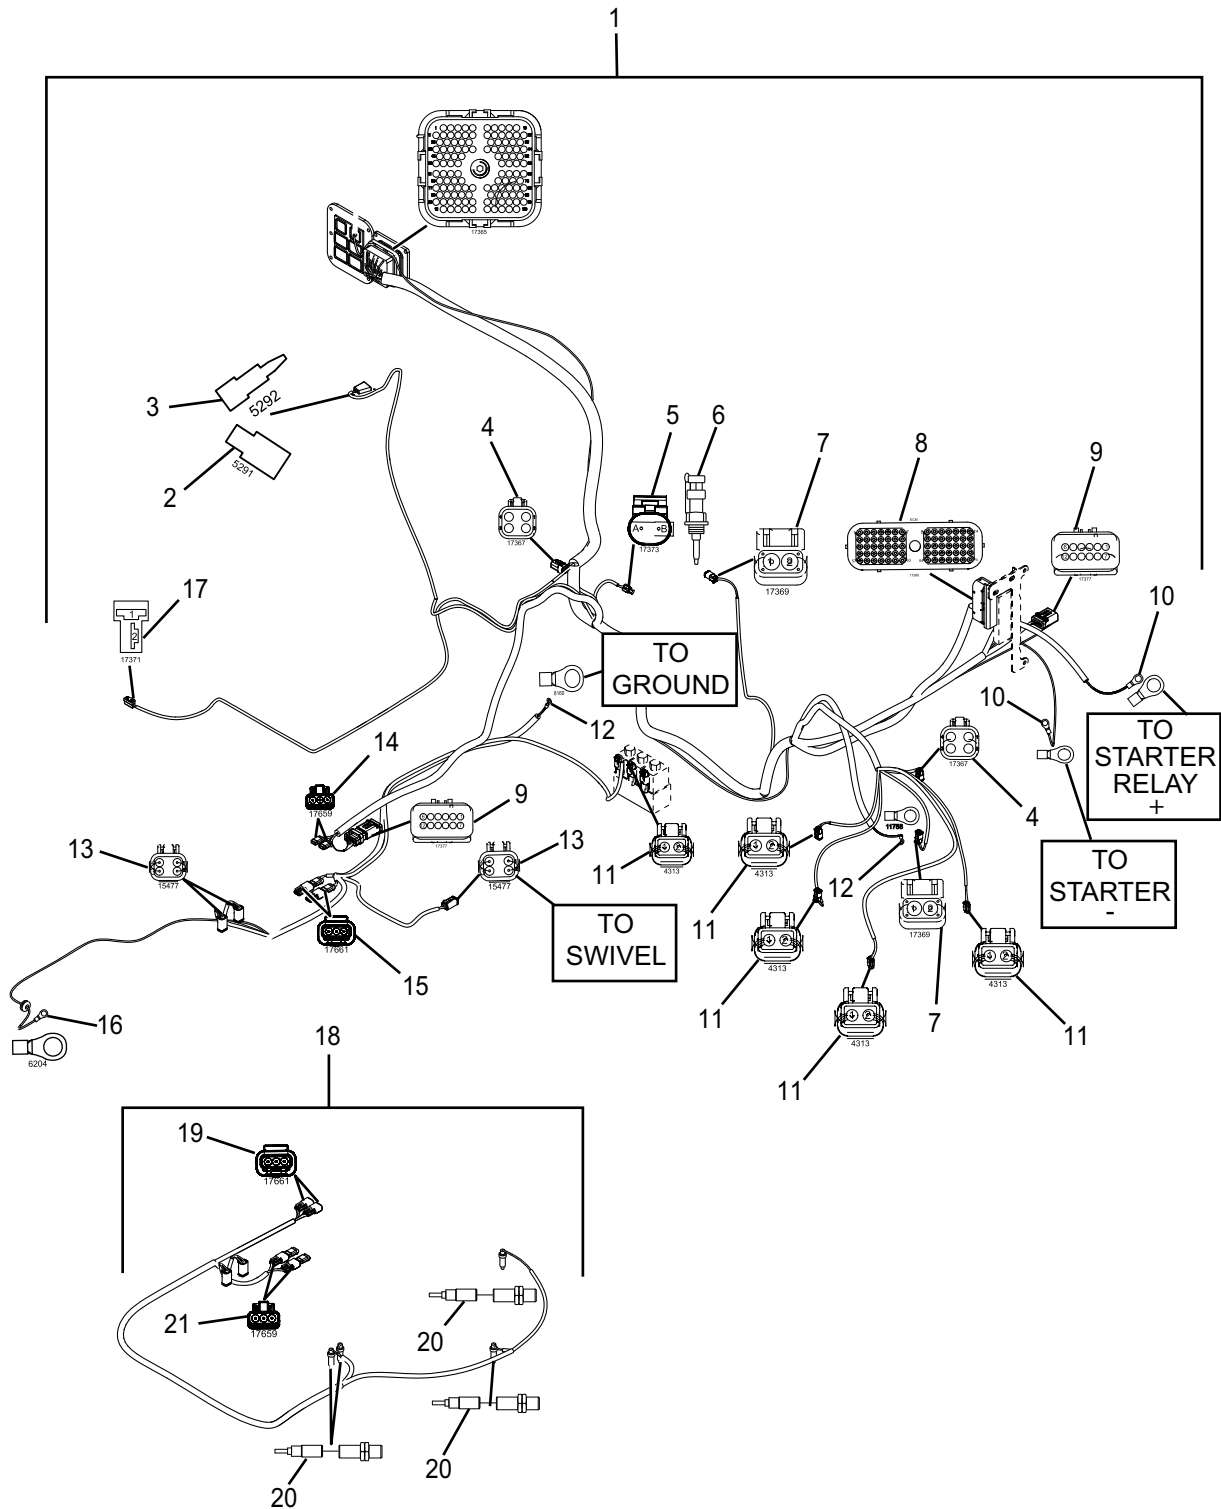


TABLE FOR FIGURE 08-01:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-04325-800	ECM HARNESS	1	
2	5291	•CONNECTOR	1	
3	5292	•CONNECTOR	1	
4	17367	•CONNECTOR	1	
5	A-04225-709	•CONNECTOR, HYDRAULIC OIL TEMPERATURE SENSOR	1	
6	A-04225-708	•HYDRAULIC OIL TEMPERATURE SENSOR	1	
7	17369	•CONNECTOR	1	
8	17366	•CONNECTOR	1	
9	17377	•CONNECTOR	2	
10	10067	•CONNECTOR	2	
11	4313	•CONNECTOR	5	
12	11758	•CONNECTOR	2	
13	15477	•CONNECTOR	2	
14	17659	•CONNECTOR	2	
15	17661	•CONNECTOR	2	
16	6204	•CONNECTOR	1	
17	17371	•CONNECTOR	1	
18	A-04325-803	REAR HARNESS	1	
19	17661	•CONNECTOR	2	
20	A-04325-915	•PROXIMITY SENSOR	4	
21	17659	•CONNECTOR	2	

FIGURE 08-02 BATTERY CABLES

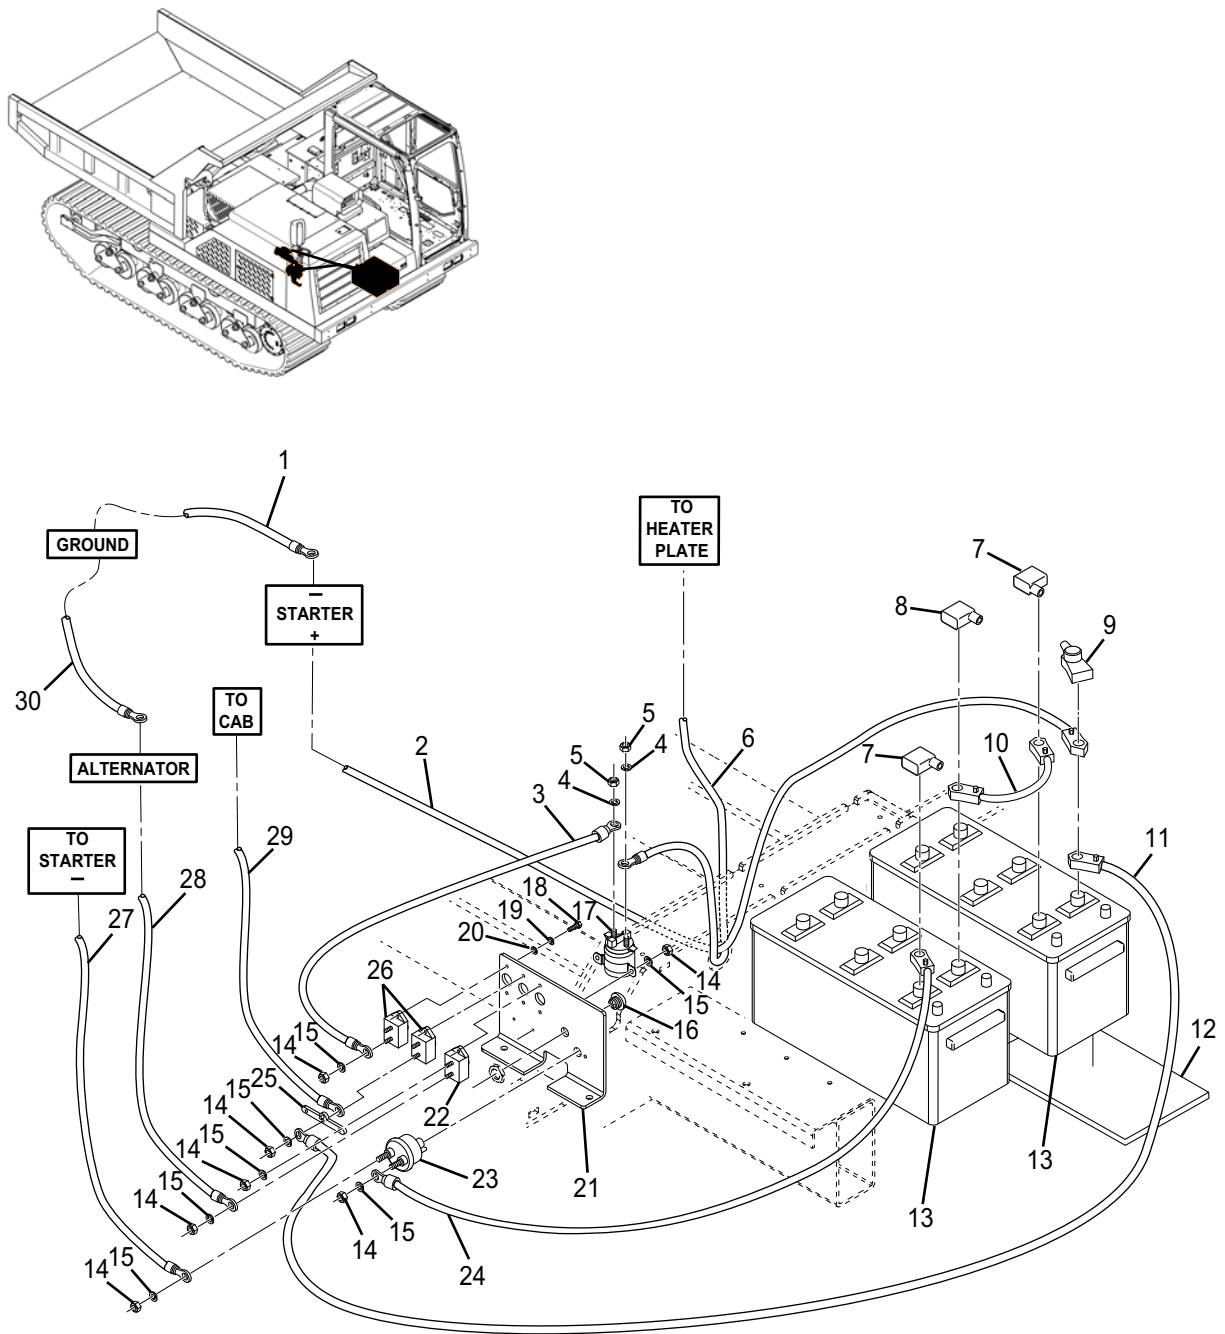


TABLE FOR FIGURE 08-02:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-04325-910	STARTER GL CABLE	1	
2	A-04325-903	BATTERY CABLE	1	
3	A-04325-911	ENGINE GROUND	1	
4	0-1120-00616	M6 WASHER	2	
5	0-1200-00605	M6 NUT	2	
6	A-04325-909	BATTERY CABLE	1	
7	A-04225-721	TERMINAL CAP BLACK (-)	2	
8	A-04225-720	TERMINAL CAP RED (+)	2	
9	A-04225-725	TERMINAL CAP RED (+)	1	
10	A-04325-900	BATTERY CABLE	1	
11	A-04325-905	BATTERY CABLE	1	
12	A-04325-990	BATTERY MAT	2	
13	A-04225-850	BATTERY 4D	2	
14	0-1200-00806	M8 NUT	2	
15	0-1120-00816	M8 WASHER	2	
16	181KA	WARNING LIGHT	1	
17	125-1302	HEATER RELAY SWITCH	1	
18	0-1000-00512	M5 X 12 HEX BOLT	6	
19	0-1100-00513	M5 LOCK WASHER	6	
20	0-1120-00510	M5 WASHER	6	
21	A-04352-259	BREAKER BRACKET	1	
22	171-2206	BREAKER (50A) - CAT	1	
23	7N-0719	BATTERY MAIN SWITCH W/KEY	1	
24	A-04325-901	BATTERY CABLE	1	
25	A-04225-851	COPPER BUS BAR 1/4 X 1 X 4-1/2	1	
26	171-2210	BREAKER (80A) - CAT	2	
27	A-04325-904	BATTERY CABLE	1	

TABLE FOR FIGURE 08-02: (Cont.)

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
28	A-04325-906	BATTERY CABLE	1	
29	A-04325-908	BATTERY CABLE	1	
30	A-04325-907	ALTERNATOR GL CABLE	1	

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 08-03 FORWARD HARNESS

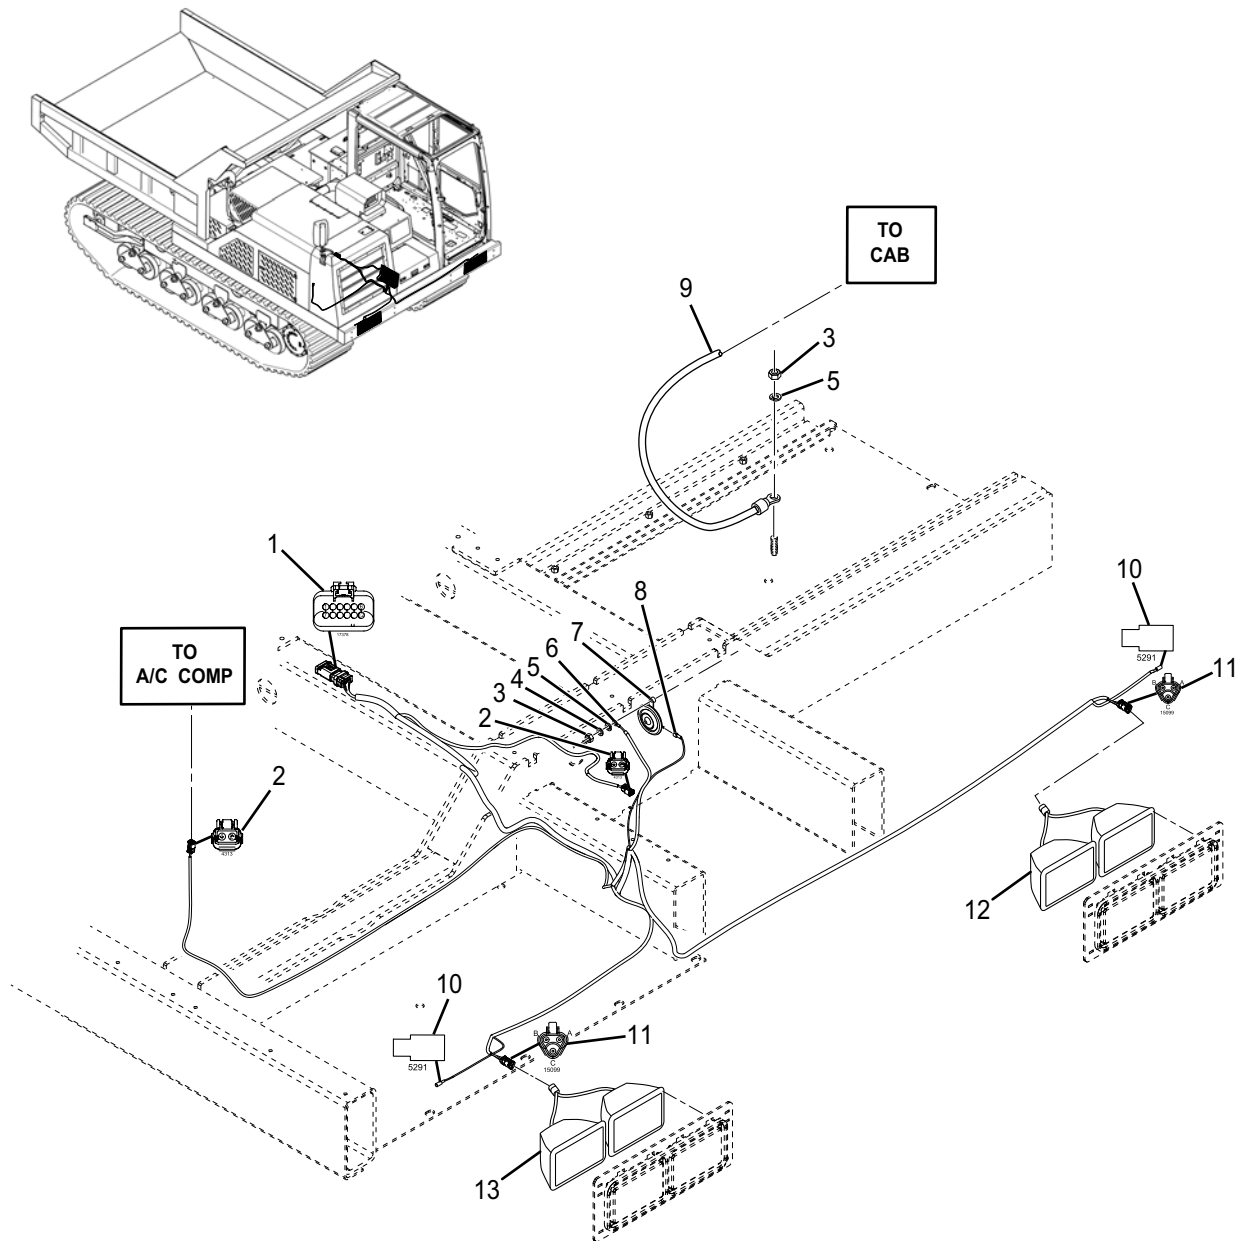


TABLE FOR FIGURE 08-03:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-04325-802	FORWARD HARNESS	1	
2	4313	CONNECTOR	2	
3	0-1200-01008	M10 NUT	2	
4	0-1100-01025	M10 LOCK WASHER	1	
5	0-1120-01020	M10 WASHER	2	
6	13286	CONNECTOR	1	
7	0-5600-02401	HORN	1	
8	13287	CONNECTOR	1	
9	A-04225-703	CAB GROUND	1	
10	5291	CONNECTOR	2	
11	A-04225-711	CONNECTOR	2	
12	1-46210-1000	LEFT HEADLIGHT	1	
13	1-46210-1100	RIGHT HEADLIGHT	1	

FIGURE 08-04 BACK UP CAMERA AND ALARM

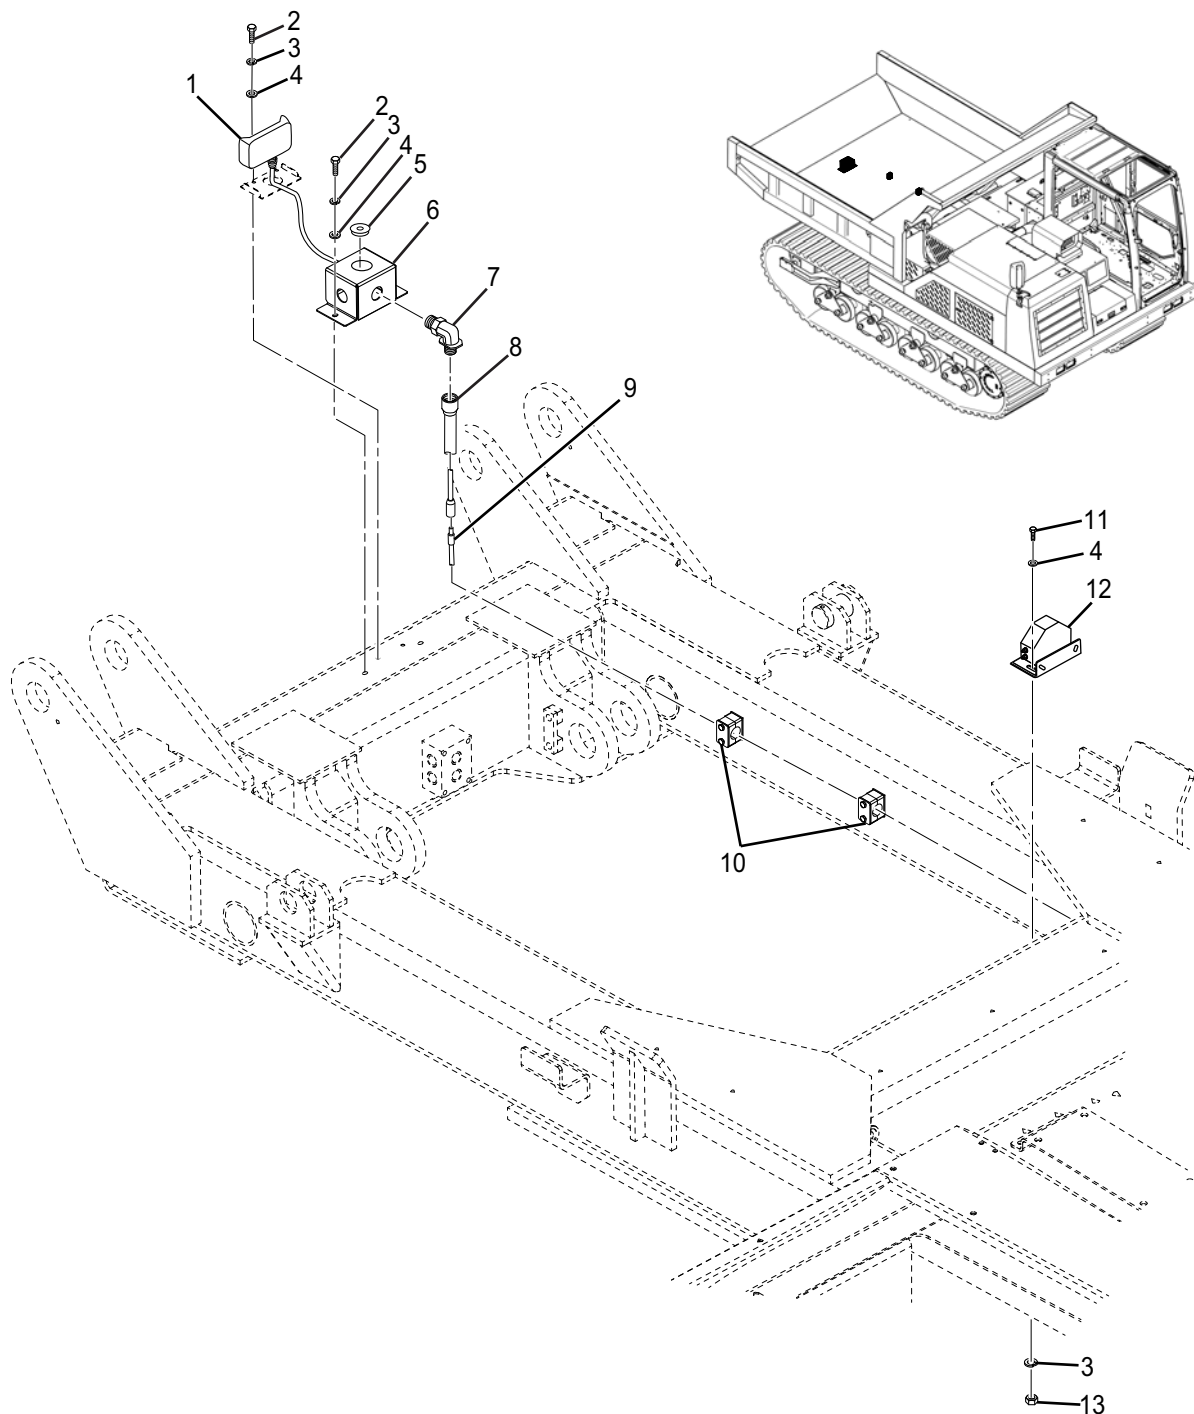


TABLE FOR FIGURE 08-04:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-04225-710	BACKUP CAMERA	1	
2	0-1000-00612	M6 X 12 HEX BOLT	4	
3	0-1100-00615	M6 LOCK WASHER	6	
4	0-1120-00616	M6 WASHER	6	
5	A-04252-708	GROMMET	1	
6	A-04252-234	BACKUP CAMERA COVER	1	
7	A-04352-719	ELBOW	1	
8	A-04352-718	TUBE, CONDUIT	1	
9	A-04225-815	CABLE, BACKUP CAMERA	1	
10	A-04352-707	CLAMP SINGLE	4	
11	0-1000-00620	M6 X 20 HEX BOLT	2	
12	1-46210-1510	BACKUP ALARM	1	
13	0-1200-00605	M6 NUT	2	

THIS PAGE INTENTIONALLY LEFT BLANK

THIS PAGE INTENTIONALLY LEFT BLANK

FIGURE 09-01 DECALS

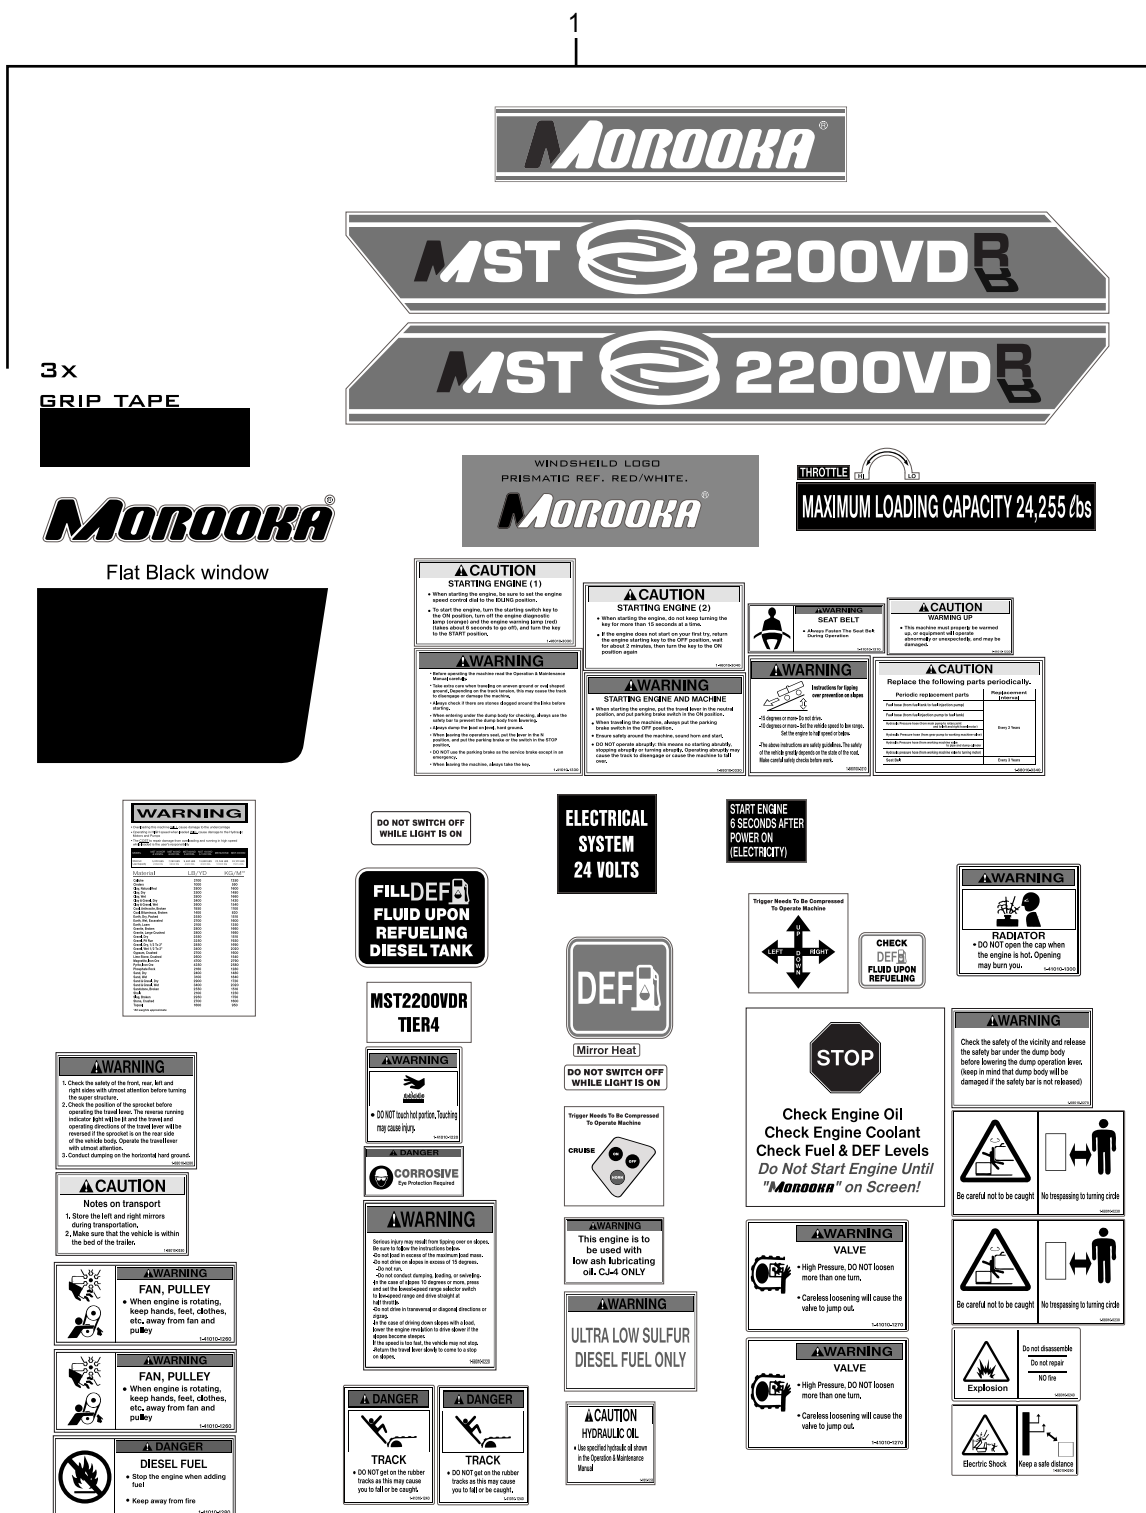


TABLE FOR FIGURE 09-01:

INDEX	PART NO.	DESCRIPTION	QTY	SERIAL NO.
1	A-04303-700	DECAL KIT	1	

THIS PAGE INTENTIONALLY LEFT BLANK

NUMERICAL INDEX

THIS PAGE INTENTIONALLY LEFT BLANK

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
0-1000-00408	03-11	11	0-1000-01020	02-08	4
0-1000-00512	02-04	6	0-1000-01025	01-03	14
0-1000-00512	04-01	29	0-1000-01025	01-04	2
0-1000-00512	08-02	18	0-1000-01025	01-05	10
0-1000-00610	03-55	2	0-1000-01025	02-01	20
0-1000-00610	02-02	14	0-1000-01025	02-02	26
0-1000-00610	02-04	4	0-1000-01025	02-03	10
0-1000-00610	02-05	16	0-1000-01025	02-04	17
0-1000-00610	02-07	8	0-1000-01025	02-05	23
0-1000-00612	08-04	2	0-1000-01025	02-07	34
0-1000-00616	01-05	2	0-1000-01025	04-01	18
0-1000-00620	01-03	4	0-1000-01025	05-03	9
0-1000-00620	02-01	10	0-1000-01025	06-03	28
0-1000-00620	02-07	30	0-1000-01025	06-07	4
0-1000-00620	08-04	11	0-1000-01025	07-01	2
0-1000-00820	01-06	12	0-1000-01220	02-06	8
0-1000-00820	02-01	7	0-1000-01220	02-07	11
0-1000-00820	04-01	9	0-1000-01230	02-01	25
0-1000-00825	01-04	7	0-1000-01630	02-03	27
0-1000-00825	02-02	5	0-1000-02045	06-04	12
0-1000-00825	02-03	4	0-1000-02060	02-07	29
0-1000-00825	02-05	12	0-1000-31035	06-01	14
0-1000-00825	04-01	25	0-1000-31225	01-01	10
0-1000-00830	01-03	9	0-1000-31225	02-03	13
0-1000-00875	06-02	18	0-1000-31225	05-01	11
0-1000-00875	06-05	7	0-1000-31225	05-02	3
0-1000-01020	01-04	6	0-1000-31230	05-03	2
0-1000-01020	02-06	14	0-1000-31235	06-01	9

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
0-1000-31425	05-03	7	0-1100-00820	02-01	8
0-1000-31650	02-01	18	0-1100-00820	02-02	3
0-1000-31670	01-01	14	0-1100-00820	02-03	3
0-1000-31680	01-01	19	0-1100-00820	02-05	8
0-1000-31890	02-07	4	0-1100-00820	02-06	26
0-1000-31895	02-07	23	0-1100-00820	04-01	8
0-1000-32045	02-07	15	0-1100-00820	04-01	24
0-1000-32045	06-01	13	0-1100-00820	06-02	17
0-1000-32050	06-01	5	0-1100-00820	06-05	6
0-1000-32060	05-02	13	0-1100-01025	01-03	15
0-1001-31200	02-07	24	0-1100-01025	01-04	3
0-1020-31030	02-01	5	0-1100-01025	01-05	11
0-1050-00825	02-06	27	0-1100-01025	01-06	3
0-1100-00513	02-04	7	0-1100-01025	02-01	21
0-1100-00513	04-01	28	0-1100-01025	02-02	27
0-1100-00513	08-02	19	0-1100-01025	02-03	9
0-1100-00615	03-55	3	0-1100-01025	02-04	16
0-1100-00615	01-03	5	0-1100-01025	02-05	5
0-1100-00615	01-05	3	0-1100-01025	02-06	13
0-1100-00615	02-01	11	0-1100-01025	02-07	33
0-1100-00615	02-02	15	0-1100-01025	02-08	3
0-1100-00615	02-04	3	0-1100-01025	04-01	19
0-1100-00615	02-05	18	0-1100-01025	05-03	10
0-1100-00615	02-07	7	0-1100-01025	06-03	27
0-1100-00615	08-04	3	0-1100-01025	06-07	2
0-1100-00820	01-03	10	0-1100-01025	07-01	3
0-1100-00820	01-04	8	0-1100-01025	08-03	4
0-1100-00820	01-06	11	0-1100-01230	02-01	26

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
0-1100-01230	02-03	14	0-1120-00616	02-05	15
0-1100-01230	02-06	9	0-1120-00616	02-07	6
0-1100-01230	02-07	10	0-1120-00616	08-02	4
0-1100-01230	05-01	10	0-1120-00616	08-04	4
0-1100-01230	05-02	2	0-1120-00816	01-03	11
0-1100-01230	05-03	3	0-1120-00816	01-04	9
0-1100-01230	06-01	8	0-1120-00816	01-06	10
0-1100-02051	02-07	16	0-1120-00816	02-01	9
0-1100-02051	02-07	26	0-1120-00816	02-02	4
0-1100-02051	06-01	4	0-1120-00816	02-03	2
0-1100-02051	06-04	13	0-1120-00816	02-05	9
0-1100-03690	05-01	6	0-1120-00816	02-06	25
0-1100-03690	05-02	6	0-1120-00816	04-01	7
0-1100-31025	06-01	15	0-1120-00816	06-02	16
0-1100-31230	01-01	11	0-1120-00816	06-05	5
0-1100-31435	05-03	6	0-1120-00816	08-02	15
0-1100-31640	01-01	7	0-1120-01020	01-03	16
0-1100-31640	02-03	21	0-1120-01020	01-04	4
0-1110-02040	06-04	14	0-1120-01020	01-05	12
0-1120-00510	02-04	8	0-1120-01020	01-06	16
0-1120-00510	04-01	27	0-1120-01020	02-01	22
0-1120-00510	08-02	20	0-1120-01020	02-02	28
0-1120-00616	03-55	4	0-1120-01020	02-03	8
0-1120-00616	01-03	3	0-1120-01020	02-04	15
0-1120-00616	01-05	4	0-1120-01020	02-05	6
0-1120-00616	02-01	12	0-1120-01020	02-06	12
0-1120-00616	02-02	16	0-1120-01020	02-07	32
0-1120-00616	02-04	2	0-1120-01020	02-08	2

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
0-1120-01020	04-01	20	0-1200-00806	01-06	14
0-1120-01020	05-03	11	0-1200-00806	02-02	2
0-1120-01020	06-03	26	0-1200-00806	02-05	7
0-1120-01020	06-07	3	0-1200-00806	08-02	14
0-1120-01020	07-01	4	0-1200-01008	01-03	18
0-1120-01020	08-03	5	0-1200-01008	01-05	13
0-1120-01223	02-01	27	0-1200-01008	01-06	17
0-1120-01223	02-03	15	0-1200-01008	02-02	29
0-1120-01223	02-06	10	0-1200-01008	02-05	4
0-1120-01223	02-07	9	0-1200-01008	08-03	3
0-1120-01223	05-03	4	0-1200-02016	02-07	25
0-1120-01223	06-01	7	0-1200-31613	01-01	6
0-1120-02032	06-01	3	0-1200-31613	02-03	20
0-1120-31832	02-07	3	0-1210-33629	05-01	5
0-1120-816	04-01	23	0-1210-33629	05-02	7
0-1130-00408	03-11	10	0-1260-00506	02-02	31
0-1140-31232	01-01	12	0-1500-00730	06-01	21
0-1140-31232	05-01	9	0-1500-30630	06-07	1
0-1140-31445	05-03	5	0-2000-03170	05-01	16
0-1140-31645	01-01	8	0-3300-02565	05-01	14
0-1140-31645	02-01	19	0-3400-00100	05-01	13
0-1140-31645	02-03	22	0-3400-00100	05-02	16
0-1200-00605	01-03	6	0-5600-02401	08-03	7
0-1200-00605	01-05	14	0-6003-00214	05-01	18
0-1200-00605	02-02	19	085-6444	03-32	11
0-1200-00605	02-05	20	085-6445	03-33	5
0-1200-00605	08-02	5	085-6446	03-33	3
0-1200-00605	08-04	13	085-6447	03-33	2

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
085-6448	03-33	1	11004919	06-01	1
085-6449	03-33	4	1-11330-1230	05-01	2
085-6449	03-19	5	1-11510-1210	02-07	31
095-0736	03-19	7	1-11660-1140	02-06	5
095-0755	03-34	40	1-11660-1150	02-06	6
096-2622	03-41	11	1-11660-1160	02-06	2
096-2622	03-31	12	1-11660-1170	02-06	3
096-3884	03-41	6	1-11660-1220	02-06	4
096-3884	03-31	27	1-11660-1231	02-06	17
096-6166	03-15	3	1-11710-1150	07-01	7
099-0823	03-34	6	113-3467	03-49	
099-0823	03-29	11	113-3468	03-48	10
099-2374	03-44	13	113-3468	03-49	
099-3506	03-18	5	113-8490	03-42	9
099-3607	03-34	38	113-8491	03-42	5
10006B-606	01-07	2	113-8492	03-42	8
10008B-608	01-07	7	113-8493	03-42	6
10067	08-01	10	1-17330-1210	05-01	3
101-2846	03-15	11	1-17330-1221	05-01	1
101-8899	03-41	9	11758	08-01	12
101-8899	03-31	10	117-6306	03-44	6
101-8900	03-41	2	117-6356	03-50	4
101-8900	03-31	4	1-18320-1111	05-01	19
10-2-0004	04-01	10	1-18320-1121	05-01	20
10-2-0006	04-01	11	1-18330-0012	05-01	12
102-8805	03-13	2	1-18330-1151	05-01	15
105-3487	03-35	1	1-18330-1170	05-01	21
106-2704	03-10	3	1-18350-1213	05-02	14

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
1-18350-1230	05-02	4	128-2136	03-23	3
1-19330-0020	05-01	17	128-2136	03-29	15
1-19350-1180	05-01	7	128-2136	03-30	6
1-19350-1180	05-02	5	1-28320-1130	02-07	17
119-5026	03-48	17	1-28320-1140	05-02	12
1-19660-1231	02-06	16	12-LWHC-P	06-02	3
121-1022	03-16	5	13286	08-03	6
121-7063	03-48	11	13287	08-03	8
122-9610	03-50	1	134-0670	03-51	2
1-24340-0011	05-02	1	138-8454	03-44	5
124-3548	03-42	7	1-39110-1210	01-01	13
124-3952	03-14	6	139-7119	03-47	11
124-3953	03-14	7	1-41160-1151	06-01	16
124-4042	03-49	5	141-2759	03-42	4
12-45-SHCS-P	06-02	2	1-41310-1110	05-02	17
125-1302	08-02	17	142-0485	03-46	2
125-7875	03-15		144-0195	03-22	4
127-0580	03-34	45	145-2970	03-20	2
1-27160-1141	06-01	20	1-46210-1000	08-03	12
128-2135	03-34	5	1-46210-1100	08-03	13
128-2135	03-52	15	1-46210-1510	08-04	12
128-2135	03-54	1	1-46350-0010	05-02	15
128-2135	03-08	2	1-51150-1130	02-04	12
128-2135	03-23	2	1-51150-1180	02-04	11
128-2135	03-28	5	1-51150-1200	02-04	10
128-2135	03-29	14	151-6703	03-41	18
128-2135	03-30	3	151-6703	03-31	9
128-2136	03-52	14	151-6704	03-41	8

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
151-6704	03-31	26	161-3669	03-14	
151-6777	03-25	4	161-3670	03-14	
151-6813	03-45	11	161-3694	03-19	13
151-9461	03-41	29	162-0349	03-17	1
151-9461	03-31	8	163-6795	03-34	31
151-9497	03-41		163-6795	03-15	12
151-9497	03-31		164-0514	03-41	
151-9557	03-44	17	164-0514	03-31	19
151-9576	03-45	10	164-0515	03-34	29
1-54160-1130	06-01	19	164-0515	03-41	20
15477	08-01	13	164-0515	03-31	21
155-7042	03-14	9	164-0519	03-41	
156-6175	03-15	14	164-0519	03-31	16
156-6480	03-34	43	164-0655	03-30	7
156-6599	03-34	46	164-8474	03-23	7
156-6631	03-47	10	164-8474	03-29	1
156-6643	03-41	1	167-3630	03-15	
156-6643	03-31	5	167-3631	03-15	
161-3128	03-42	2	167-7039	03-41	7
161-3128	03-42	3	167-7039	03-31	28
161-3128	03-42	10	167-7042	03-34	10
161-3128	03-42	11	1-68150-0020	02-04	9
161-3128	03-42	12	1-68360-0010	02-07	22
161-3128	03-42	13	1-68630-0010	02-01	16
161-3128	03-42	14	1700-24-32	06-08	21
161-3128	03-42	15	170-2986	03-16	4
161-3639	03-41	12	170-6888	03-42	1
161-3639	03-31	14	170-9724	03-52	

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
170-9724	03-52		178-5574	03-47	2
170-9724	03-52		178-5574	03-31	31
170-9724	03-28		178-5576	03-46	6
171-2206	08-02	22	178-5659	03-06	3
171-2210	08-02	26	181KA	08-02	16
171-7325	03-34	42	185-8180	03-41	16
171-7325	03-38	2	185-8180	03-31	17
171-7325	03-28	16	185-8182	03-25	
171-7477	03-19	15	185-8187	03-25	
17366	08-01	8	185-8205	03-28	8
17367	08-01	4	185-8205	03-29	12
17369	08-01	7	185-8221	03-45	1
17371	08-01	17	185-8280	03-36	3
17377	08-01	9	185-8280	03-37	3
176-1931	02-05	27	185-8281	03-37	2
176-1941	03-36	4	185-8290	03-14	
176-1941	03-37	4	189-2690	03-41	28
176-1986	03-34	12	189-2690	03-31	3
17659	08-01	14	189-2693	03-19	12
17659	08-01	21	189-2694	03-19	6
17661	08-01	15	189-2864	03-34	18
17661	08-01	19	198-3899	03-07	2
178-5570	03-40	3	1R-5998	03-34	19
178-5572	03-47	3	201-4391	03-41	
178-5573	03-41	14	201-4391	03-31	
178-5573	03-47	7	201-4417	03-34	
178-5573	03-31	25	209-4588	01-06	20
178-5574	03-41	24	211273A	01-02	3

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
213-0772	03-16	6	255-2752	03-12	1
228-7103	01-06	24	256-6454	01-06	25
229-9028	03-08	12	259-7354	03-41	19
234-6579	03-52	9	259-7354	03-31	23
234-6579	03-28	1	267-7064	03-38	4
235-8874	03-48	14	276-6740	01-06	21
235-8929	03-18	7	278-0017	01-01	15
235-8966	03-30	5	278-5203	01-01	3
235-9001	03-23	17	280-8618	03-34	41
238-2210	03-10	2	281-0791	03-49	12
2404-08-06	01-07	6	293-1139	03-48	6
2404-16-16	06-03	19	2BLV2006F	01-07	5
2404-20-24	06-07	5	2G-8767	04-01	13
2406-16-08	06-03	6	2L-8067	03-15	
2406-20-16	06-03	8	2L-8075	03-15	
243-4510	03-15		2U-2552	03-39	1
245-7790	03-52	10	305-0419	03-49	29
245-7790	03-29	4	316-8854	03-47	8
245-7895	03-07	4	316-8882	03-04	1
2501-06-06	01-07	3	316-8889	03-05	1
2501-12-16-FG	06-03	17	316-8892	03-06	2
2501-20-24-FG	06-03	18	316-8894	03-05	4
2503-08-08-FG	06-08	42	316-8897	03-07	1
2503-20-24	06-08	44	316-8922	03-01	1
2503-24-24	06-08	41	316-8930	03-17	4
2505-16-16	06-08	2	316-8931	03-20	1
251-0637	03-40	6	316-8932	03-20	5
251-0637	03-15	7	316-8968	03-02	1

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
316-8987	03-05	2	327-6550	03-34	23
316-8987	03-06	9	327-6554	03-23	4
318-8821	03-51	1	327-6616	03-23	8
320-1291	04-01	1	327-6618	03-08	3
324-5770	03-16	16	327-6625	03-25	9
324-5771	03-16	1	327-6640	03-06	4
327-6436	03-11	2	327-6642	03-06	6
327-6463	03-29	17	327-6643	03-06	8
327-6464	03-29	9	327-6645	03-07	9
327-6465	03-29	2	327-6646	03-07	5
327-6466	03-29	13	327-6647	03-07	3
327-6467	03-29	16	327-6648	03-07	7
327-6470	03-30	13	327-7538	03-10	1
327-6471	03-30	10	327-9967	03-15	5
327-6472	03-30	1	328-0246	03-11	8
327-6475	03-28		328-0397	03-10	4
327-6476	03-28	3	331-7979	03-23	11
327-6479	03-18	10	331-8008	03-23	1
327-6480	03-28	6	333-4161	03-25	6
327-6484	03-08	5	333-4176	03-26	9
327-6486	03-24	1	333-4179	03-06	5
327-6487	03-24	2	333-4180	03-07	6
327-6533	03-08	4	333-4181	03-07	8
327-6534	03-08	1	333-4344	03-25	7
327-6535	03-08	11	333-4345	03-27	1
327-6536	03-08	9	333-4346	03-27	2
327-6537	03-08	6	333-4347	03-27	3
327-6540	03-03	1	333-4353	03-28	2

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
333-4363	03-29	10	334-6507	03-44	15
333-4364	03-30	12	334-6508	03-44	11
333-4365	03-30	11	334-6509	03-44	14
333-4366	03-30	9	334-6526	03-41	26
334-6388	03-44	1	334-6526	03-31	1
334-6389	03-45	2	334-6527	03-41	25
334-6451	03-52	4	334-6527	03-31	13
334-6462	03-52	13	334-6528	03-41	3
334-6466	03-52	6	334-6528	03-31	7
334-6469	03-45	9	334-6530	03-41	
334-6478	03-45	13	334-6530	03-31	
334-6479	03-45	3	334-6531	03-41	22
334-6481	03-45	8	334-6531	03-31	22
334-6482	03-45	7	334-6533	03-31	30
334-6484	03-45	14	334-6534	03-41	5
334-6485	03-45	4	334-6534	03-31	29
334-6486	03-45		334-6535	03-41	15
334-6488	03-45		334-6535	03-31	18
334-6489	03-45		334-6536	03-41	17
334-6490	03-45	5	334-6536	03-31	24
334-6492	03-44	8	334-6537	03-41	21
334-6493	03-46	7	334-6537	03-31	20
334-6495	03-46	5	334-6538	03-41	4
334-6497	03-44	10	334-6538	03-31	6
334-6499	03-44	2	334-6542	03-34	24
334-6501	03-44	18	334-6546	03-34	9
334-6504	03-44	19	334-6549	03-34	7
334-6505	03-44	12	334-6550	03-34	32

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
334-6551	03-34	28	340-6714	03-53	1
334-6552	03-34	25	340-6715	03-54	3
334-6553	03-36	2	340-6718	03-54	2
334-6554	03-36	1	340-6719	03-54	5
334-6557	03-34	30	340-6720	03-53	2
334-6558	03-37	1	340-6725	03-53	3
334-6559	03-37	5	340-6727	03-47	12
334-6562	03-34	16	340-6742	03-28	12
334-6564	03-34	27	341-3348	02-03	25
334-6565	03-34	33	342-3067	03-15	4
334-6566	03-34	3	342-3546	03-14	12
334-6567	03-34	4	342-3548	03-14	2
334-6568	03-34	11	342-3549	03-25	3
336-1132	03-06	1	342-3550	03-47	1
336-1206	03-08	10	342-3551	03-47	5
336-5895	03-16	13	342-3552	03-47	4
338-0508	04-01	31	342-3564	03-26	6
340-6484	03-17	3	342-3601	03-15	8
340-6582	03-38	5	342-3747	03-28	11
340-6584	03-38	1	346-7359	03-30	2
340-6585	03-38	3	346-7361	03-28	9
340-6586	03-34	26	346-7363	03-28	14
340-6587	03-34	13	346-7366	03-28	13
340-6592	03-19	2	346-7372	03-29	5
340-6593	03-18	4	346-7375	03-34	22
340-6594	03-18	3	346-7427	03-09	2
340-6595	03-18	9	346-7428	03-09	3
340-6625	03-47	6	346-7429	03-09	1

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
346-7906	03-19	1	357-3848	03-52	1
346-7907	03-19	8	357-3861	03-30	8
346-7908	03-19	10	357-3891	03-25	5
346-7922	03-18	1	357-3898	03-28	4
346-7924	03-19	9	357-3899	03-28	7
346-7953	03-25	1	357-3901	03-28	
346-7957	03-26	5	357-3964	03-28	15
346-7976	03-40	2	357-3966	03-29	8
346-7998	03-26	1	357-3975	03-28	10
346-8025	03-52	5	357-3977	03-21	1
346-8030	03-47	9	357-4127	03-40	4
346-8036	03-45	15	363-2712	01-07	22
346-8052	03-17	9	363-9373	03-44	16
346-8062	03-25	8	363-9402	03-49	16
346-8063	03-41	23	363-9449	03-49	32
350-8461	03-12	2	363-9450	03-49	17
353-1845	03-25	2	363-9451	03-49	1
353-1846	03-17	6	363-9452	03-49	15
353-1887	03-34	44	363-9453	03-49	34
353-1910	03-11	6	363-9454	03-49	13
353-2020	03-38	7	363-9455	03-49	14
353-2024	03-34	47	363-9456	03-49	20
353-2046	03-23	15	363-9457	03-49	36
353-2087	03-20	3	363-9458	03-49	35
354-7383	01-06	19	363-9459	03-49	7
356-4944	03-49	4	363-9460	03-49	24
357-3845	03-52	12	363-9461	03-49	10
357-3847	03-52	7	363-9462	03-49	30

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
363-9463	03-49	28	372-9285	03-14	
363-9464	03-49	33	372-9334	03-14	1
363-9465	03-49	18	372-9365	03-49	2
363-9466	03-49	8	383-3479	01-07	17
363-9467	03-49	41	383-5545	03-32	6
363-9468	03-49	40	383-5556	03-32	1
363-9469	03-49	38	383-5577	03-32	5
363-9470	03-49	23	383-5578	03-32	7
363-9471	03-49	25	383-5579	03-32	9
363-9472	03-49	37	383-5580	03-32	8
363-9473	03-49	26	383-5581	03-32	10
363-9474	03-49	27	383-5582	03-32	4
363-9475	03-49	39	383-5583	03-32	3
363-9476	03-49	21	383-5631	03-14	13
363-9477	03-49	6	383-5632	03-14	11
363-9478	03-49	22	383-5644	03-38	6
363-9480	03-49	11	383-5650	03-41	27
363-9481	03-49	31	383-5650	03-31	2
363-9482	03-49	3	383-5651	03-32	2
363-9482	03-49	9	383-5666	03-34	34
363-9483	03-49	19	384-8512	01-07	12
363-9493	03-48	13	385-5363	01-01	16
363-9494	03-48	18	389-2688	01-03	20
363-9495	03-48	16	3E-8020	03-34	15
363-9594	03-52	8	3S-2093	03-48	15
363-9597	03-52	2	3S-2093	03-11	9
363-9598	03-52	11	3S-2093	03-15	6
369-0153	03-16	2	3S-2093	03-15	

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
3S-2093	03-16	3	5404-N-16-16X4	06-08	1
423-5588	03-48	7	5406-20-16	06-03	21
430-5703	03-44	4	5406-24-08	06-08	43
430-9449	01-01	5	5406-HP-08	02-04	18
4313	08-01	11	5406-HP-08	02-06	18
4313	08-03	2	5500-06-06-FG	01-07	4
435-9945	03-48	12	5500-16-16-FG	06-03	22
4404-10-08	01-02	5	5502-08-06	01-02	4
447-1711	03-17	10	5A-3604	03-05	3
451-2175	03-17	8	5C-2890	03-46	3
451-2175	03-20	7	5C-7793	03-34	39
451-2178	03-20	4	5C-8312	03-44	7
453-1256	03-20	6	5C-9553	03-48	8
453-1259	03-17	2	5C-9553	03-26	8
453-4794	03-45	16	5D-4822	03-18	6
454-8385	02-03	26	5P-3059	03-15	
4B-4278	03-34	35	5P-8500	03-11	7
4I-1205	03-34	37	6204	08-01	16
4I-1260	03-19	4	6400-04-06-O	06-02	19
4I-3090	03-40	5	6400-04-06-O	06-06	9
4I-3144	03-34	2	6400-04-06-O	06-07	20
4I-4270	03-34	14	6400-04-06-O	06-07	25
4I-4286	03-41	10	6400-04-06-O	06-08	26
4I-4286	03-31	11	6400-04-06-O	06-08	40
4I-4361	03-19	3	6400-04-10-O	06-08	20
5291	08-01	2	6400-08-10-O	06-03	13
5291	08-03	10	6400-08-10-O	06-05	2
5292	08-01	3	6400-08-10-O	06-05	10

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
6400-08-12-O	06-06	1	6801-12-16-NWO-FG	06-04	9
6400-08-12-O	06-08	32	6801-12-16-NWO-FG	06-08	35
6400-12-12-O	06-04	15	6801-12-16-NWO-FG	06-08	38
6400-12-16-0	06-02	12	6801-16-16-NWO-FG	06-08	10
6400-12-16-O	06-08	19	6801-16-20-NWO-FG	06-07	19
6400-16-16-O	06-07	17	6801-20-20-NWO-FG	06-08	5
6400-20-20-O	06-03	24	6802-12-16-NWO	06-06	13
6402-08-08-O	06-03	5	6802-20-20-NWO	06-07	15
6408-06-O	06-07	26	6803-16-16-16-NWO	06-08	6
6500-04-04	06-07	21	6804-20-20-20-NWO	06-03	9
6500-04-04	06-08	27	6G-2256	04-01	12
6500-12-12	06-02	11	6G-2263	04-01	14
6500-12-12	06-04	11	6I-0260	01-01	17
6602-04-04-04	06-06	10	6I-5342	03-19	11
6602-04-04-04	06-07	23	6J-0456	01-01	4
6602-06-06-06	01-07	20	6V-3265	03-21	2
6602-16-16-16	06-03	7	6V-3265	03-22	3
6801-04-04-NWO-FG	06-08	17	6V-5683	03-39	2
6801-04-06-NWO-FG	06-02	9	6V-8202	03-04	2
6801-04-06-NWO-FG	06-04	2	6V-8231	03-14	4
6801-04-10-NWO-FG	06-07	16	6V-9491	03-15	2
6801-08-08-NWO-FG	06-03	3	7001-04-12	06-04	18
6801-08-10-NWO-FG	06-06	14	7002-04-04-BS	06-06	12
6801-08-10-NWO-FG	06-08	9	7002-08-06-BS	06-06	3
6801-08-10-NWO-FG	06-08	31	7202-08-08-NWO	06-06	5
6801-08-10-NWO-FG	06-08	33	7202-12-12-NWO	06-06	6
6801-12-12-NWO-FG	06-03	15	7I-2673	03-15	1
6801-12-16-NWO-FG	06-02	14	7K-1181	03-10	5

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
7N-0719	08-02	23	8T-4121	03-21	3
7T-6799	03-13	1	8T-4121	03-22	2
7X-7729	03-48	2	8T-4121	03-23	5
7X-7729	03-08	7	8T-4121	03-26	3
7Y-3470	03-14	8	8T-4133	03-34	36
7Y-3472	03-14	5	8T-4136	03-48	1
7Y-3474	03-22	5	8T-4136	03-08	8
7Y-3950	03-15		8T-4137	03-34	1
7Y-3951	03-15		8T-4137	03-16	11
7Y-3954	03-15		8T-4137	03-26	4
7Y-3955	03-15		8T-4171	03-16	15
7Y-3962	03-15		8T-4179	03-23	13
7Y-3963	03-15		8T-4182	04-01	15
7Y-3964	03-15		8T-4190	03-23	9
7Y-3965	03-15		8T-4191	03-48	4
7Y-5505	03-15	9	8T-4191	03-50	3
7Y-8561	03-46	1	8T-4191	03-02	2
8-12670-1210	06-03	20	8T-4191	03-17	7
840-475	01-06	2	8T-4191	03-21	4
840-550	01-06	7	8T-4191	03-22	1
8C-7581	03-11	4	8T-4191	03-23	6
8T-0337	03-15	10	8T-4192	03-23	14
8T-4121	03-48	5	8T-4195	03-01	3
8T-4121	03-50	2	8T-4223	03-23	12
8T-4121	03-01	2	8T-4224	03-18	2
8T-4121	03-02	3	8T-4648	03-23	16
8T-4121	03-16	12	8T-4779	03-34	20
8T-4121	03-17	5	8T-8442	03-48	3

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
8T-8729	03-13	3	9X-2044	03-14	3
8T-8729	03-15		9X-2045	03-19	14
8T-8737	03-13	4	9X-2616	03-06	7
8T-8737	03-15		9X-6153	03-39	3
8Y-6352	03-29	7	9X-8256	03-35	2
9K-0700	03-21	5	9X-8256	03-46	4
9W-0852	03-15		9X-8256	03-48	9
9X-2041	03-34	8	9X-8256	03-16	14
9X-2041	03-44	9	9X-8256	03-26	7
9X-2041	03-52	3	9X-8257	03-34	21
9X-2041	03-25		9X-8257	03-23	10
9X-2041	03-26	2	A-04211-700	01-01	1
9X-2042	03-34	17	A-04213-701	02-03	11
9X-2042	03-40	1	A-04215-220	02-04	5
9X-2042	03-41	13	A-04215-705	02-04	14
9X-2042	03-44	3	A-04215-706	02-04	13
9X-2042	03-45	12	A-04216-700	06-01	17
9X-2042	03-45		A-04216-701	06-01	18
9X-2042	03-54	4	A-04225-700	02-02	13
9X-2042	03-11	1	A-04225-701	02-02	8
9X-2042	03-14	10	A-04225-702	02-02	9
9X-2042	03-15	13	A-04225-703	08-03	9
9X-2042	03-18	8	A-04225-704	03-16	18
9X-2042	03-29	3	A-04225-706	03-11	5
9X-2042	03-30	4	A-04225-707	03-16	19
9X-2042	03-31	15	A-04225-708	02-06	19
9X-2043	03-51	5	A-04225-708	08-01	6
9X-2044	03-45	6	A-04225-709	08-01	5

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
A-04225-710	08-04	1	A-04253-221	03-55	8
A-04225-711	08-03	11	A-04253-224	03-55	7
A-04225-720	08-02	8	A-04253-225	03-55	1
A-04225-721	08-02	7	A-04253-226	03-55	5
A-04225-725	08-02	9	A-04253-701	02-05	26
A-04225-810	03-16	9	A-04253-703	03-29	6
A-04225-811	03-10	6	A-04261-701	06-01	2
A-04225-812	03-16	7	A-04261-702	06-01	6
A-04225-813	03-16	8	A-04261-703	06-01	12
A-04225-814	03-16	10	A-04261-704	06-01	11
A-04225-815	08-04	9	A-04261-706	06-03	14
A-04225-850	08-02	13	A-04261-707	06-03	11
A-04225-851	08-02	25	A-04262-700	06-02	20
A-04232-200	05-02	11	A-04262-702	06-03	4
A-04233-100	05-01	4	A-04263-700	06-04	16
A-04233-200	05-01	8	A-04263-702	06-04	17
A-04235-100	05-02	8	A-04265-700	06-07	11
A-04252-118	02-02	11	A-04265-701	06-07	13
A-04252-141	05-03	12	A-04265-702	06-07	12
A-04252-234	08-04	6	A-04266-700	02-06	20
A-04252-701	02-02	32	A-04266-705	02-06	15
A-04252-702	02-02	39	A-04266-720	02-06	22
A-04252-702	02-05	2	A-04266-721	02-06	21
A-04252-708	08-04	5	A-04266-723	02-06	23
A-04252-754	02-02	21	A-04267-900	06-02	1
A-04252-754	02-05	25	A-04267-900	06-04	3
A-04253-129	03-55	6	A-04267-902	06-04	6
A-04253-131	03-11	3	A-04267-903	06-04	5

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
A-04267-904	06-02	4	A-04313-002	02-03	7
A-04267-904	06-04	4	A-04313-104	02-03	6
A-04267-910	06-07	7	A-04313-112	02-03	17
A-04267-912	06-07	9	A-04313-191	02-03	16
A-04267-913	06-07	8	A-04313-192	02-03	12
A-04267-914	06-07	10	A-04313-193	02-03	23
A-04269-700	06-03	25	A-04313-194	02-03	18
A-04291-704	01-02	2	A-04313-195	02-03	19
A-04292-714	04-01	4	A-04313-196	02-03	24
A-04292-715	04-01	6	A-04313-232	02-03	1
A-04292-716	04-01	3	A-04313-800	02-03	5
A-04292-717	04-01	5	A-04315-140	02-04	1
A-04292-718	04-01	17	A-04315-801	01-07	8
A-04292-719	04-01	16	A-04315-802	01-07	1
A-04299-801	01-05	15	A-04315-803	01-07	13
A-04303-700	09-01	1	A-04315-804	01-07	11
A-04311-222	01-01	2	A-04315-805	01-07	10
A-04311-238	01-01	18	A-04315-806	01-07	16
A-04311-257	01-01	9	A-04315-809	01-07	19
A-04312-103	01-06	23	A-04315-810	01-07	18
A-04312-134	01-06	18	A-04315-820	01-07	15
A-04312-135	01-06	13	A-04315-829	01-07	9
A-04312-166	01-06	26	A-04315-850	01-07	14
A-04312-203	01-06	5	A-04317-139	01-03	22
A-04312-700	01-06	9	A-04317-140	01-03	7
A-04312-701	01-06	8	A-04317-202	01-03	2
A-04312-800	01-06	1	A-04317-203	01-03	8
A-04312-801	01-06	6	A-04317-210	01-03	12

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
A-04317-211	01-03	13	A-04351-232	02-08	6
A-04317-212	01-03	17	A-04351-233	02-08	9
A-04317-264	01-03	21	A-04351-234	02-08	8
A-04317-265	01-03	19	A-04351-235	02-08	1
A-04325-705	03-51	4	A-04351-236	02-08	5
A-04325-715	03-51	3	A-04351-251	02-07	36
A-04325-716	03-16	17	A-04351-252	02-07	35
A-04325-800	08-01	1	A-04352-113	02-05	1
A-04325-802	08-03	1	A-04352-125	02-02	24
A-04325-803	08-01	18	A-04352-126	02-02	25
A-04325-900	08-02	10	A-04352-127	02-02	33
A-04325-901	08-02	24	A-04352-128	02-02	34
A-04325-903	08-02	2	A-04352-129	01-05	8
A-04325-904	08-02	27	A-04352-130	01-05	9
A-04325-905	08-02	11	A-04352-131	02-02	18
A-04325-906	08-02	28	A-04352-132	02-02	6
A-04325-907	08-02	30	A-04352-133	02-02	1
A-04325-908	08-02	29	A-04352-137	02-05	22
A-04325-909	08-02	6	A-04352-138	02-05	3
A-04325-910	08-02	1	A-04352-139	02-05	19
A-04325-911	08-02	3	A-04352-141	05-03	1
A-04325-915	08-01	20	A-04352-143	02-02	12
A-04325-990	08-02	12	A-04352-171	05-03	8
A-04337-100	02-07	1	A-04352-183	02-01	23
A-04351-100	02-01	1	A-04352-223	02-02	22
A-04351-120	02-01	24	A-04352-225	02-02	20
A-04351-148	02-07	28	A-04352-227	02-02	23
A-04351-231	02-08	7	A-04352-228	02-02	30

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
A-04352-259	08-02	21	A-04366-115	02-06	24
A-04352-273	01-05	5	A-04366-116	02-06	11
A-04352-306	02-02	7	A-04366-202	02-06	1
A-04352-312	02-02	35	A-04366-800	02-06	7
A-04352-313	02-02	40	A-04367-500	06-05	4
A-04352-347	02-05	21	A-04367-600	06-02	15
A-04352-384	02-02	10	A-04367-702	06-04	7
A-04352-701	01-03	1	A-04367-703	06-04	8
A-04352-701	01-05	7	A-04367-704	06-04	20
A-04352-701	02-02	17	A-04367-705	06-04	1
A-04352-703	01-06	15	A-04367-706	06-04	10
A-04352-703	02-05	10	A-04367-715	06-02	7
A-04352-707	08-04	10	A-04367-716	06-02	5
A-04352-710	02-02	36	A-04367-717	06-02	6
A-04352-713	02-05	11	A-04367-718	06-02	8
A-04352-714	01-05	1	A-04367-719	06-02	10
A-04352-717	06-05	9	A-04367-720	06-02	13
A-04352-718	08-04	8	A-04367-730	06-08	28
A-04352-719	08-04	7	A-04367-731	06-08	18
A-04352-730	01-05	6	A-04367-747	06-08	37
A-04352-731	02-05	14	A-04367-748	06-07	18
A-04352-740	02-02	38	A-04367-749	06-08	36
A-04352-741	02-05	24	A-04367-750	06-07	22
A-04361-135	02-05	13	A-04367-762	06-08	45
A-04361-136	02-05	17	A-04367-763	06-08	11
A-04361-705	06-01	10	A-04367-764	06-08	4
A-04362-701	06-08	34	A-04367-765	06-07	6
A-04364-700	07-01	10	A-04367-766	06-07	14

PART NO.	FIG NO.	INDEX	PART NO.	FIG NO.	INDEX
A-04367-767	06-08	3	A-04367-932	06-08	13
A-04367-772	06-08	8	A-04367-933	06-08	14
A-04367-788	06-03	10	A-04367-934	06-08	15
A-04367-789	06-03	23	A-04368-156	02-07	14
A-04367-790	06-03	1	A-04368-168	02-07	19
A-04367-800	06-03	2	A-04368-169	02-07	18
A-04367-801	06-03	12	A-04368-201	02-01	13
A-04367-802	06-03	16	A-04368-202	02-01	15
A-04367-808	06-05	8	A-04368-254	02-01	17
A-04367-809	06-05	3	A-04368-261	02-07	21
A-04367-810	06-05	1	A-04368-262	02-07	2
A-04367-811	06-08	29	A-04368-263	02-07	5
A-04367-812	06-08	30	A-04368-264	02-07	12
A-04367-815	06-06	2	A-04368-710	02-01	14
A-04367-816	06-06	4	A-04368-711	02-07	13
A-04367-817	06-06	15	A-04368-800	02-07	20
A-04367-818	06-06	11	A-04369-130	01-04	1
A-04367-819	06-06	8	A-04369-131	01-04	5
A-04367-820	06-06	7	A-04371-100	07-01	1
A-04367-826	06-08	39	A-04371-110	02-01	4
A-04367-827	06-07	24	A-04371-207	07-01	8
A-04367-862	06-08	7	A-04371-208	02-01	6
A-04367-863	06-08	16	A-04371-217	07-01	5
A-04367-920	06-08	22	A-04371-222	02-01	3
A-04367-922	06-08	23	A-04371-223	02-01	2
A-04367-923	06-08	24	A-04371-258	07-01	9
A-04367-924	06-08	25	A-04371-800	07-01	6
A-04367-930	06-08	12	A-04391-700	01-02	1

PART NO.	FIG NO.	INDEX
A-04392-210	04-01	21
A-04392-211	04-01	30
A-04392-212	04-01	22
A-04392-712	04-01	2
A-04392-713	04-01	26
A-04399-702	02-02	37
A-04399-703	02-07	27
A-08013-702	01-06	22
A-08013-703	01-06	4
A-08063-701	05-02	9
FS1804-20-20-FG	06-04	19
FS6504-06-06	01-07	21
M85900401	05-02	10

MST-2200VDR PARTS LIST

Document No. MA2200VDRT4F-00P

First Edition: February, 2017

Issued by: Morooka America, LLC
10487 Washington Hwy.
Glen Allen, VA 23059
USA

No part of this manual can be reproduced in any form without permission.

