



# New Holland C 175


Compact Track Loader

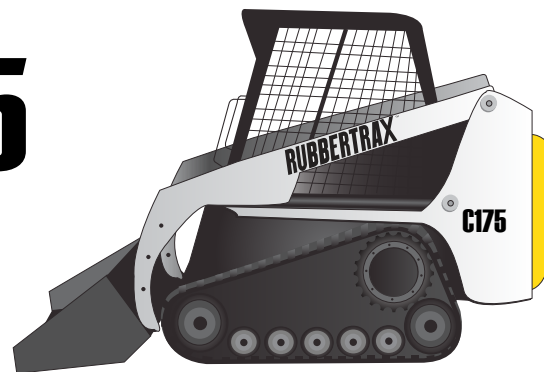

## RUBBER TRACKS

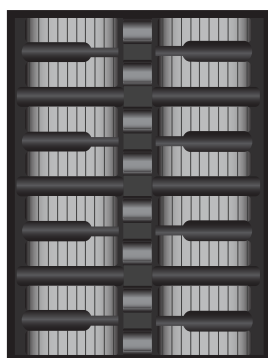

RT\_3

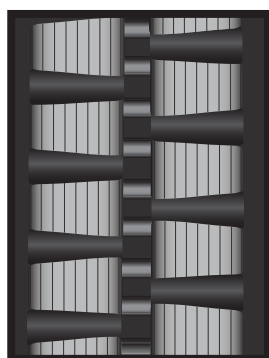

RT\_4



RT\_4  
(staggered block)

## PARTS



front idler



rear idler



sprocket



roller

Check with your sales representative for more options.

Call Toll Free:  
1-866-431-5305




Visit Us Online:  
[www.Rubbertrax.com](http://www.Rubbertrax.com)


You may not modify, copy, distribute, transmit, display, perform, reproduce, publish, license, create derivative works from, transfer, or sell any information, software, products or services obtained from this pdf.

# New Holland C 185


Compact Track Loader

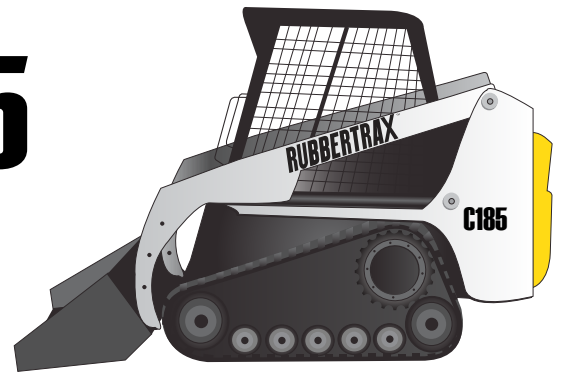


## RUBBER TRACKS

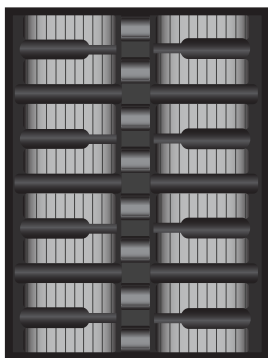


RT\_3

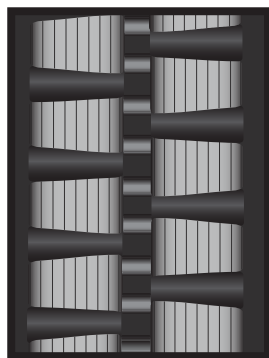

RT\_4

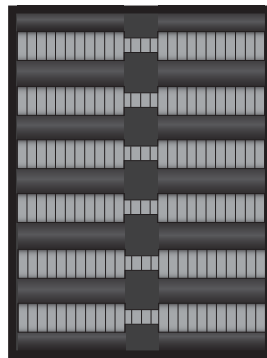

RT\_38

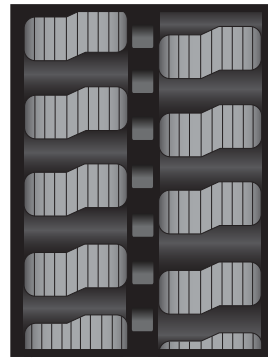

RT\_44

## PARTS



front idler



rear idler



sprocket



roller

Check with your sales representative for more options.

Call Toll Free:  
1-866-431-5305




Visit Us Online:  
[www.Rubbertrax.com](http://www.Rubbertrax.com)


You may not modify, copy, distribute, transmit, display, perform, reproduce, publish, license, create derivative works from, transfer, or sell any information, software, products or services obtained from this pdf.

# New Holland C 190


Compact Track Loader

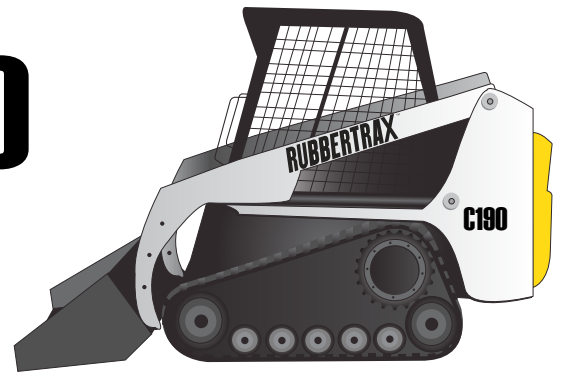


## RUBBER TRACKS

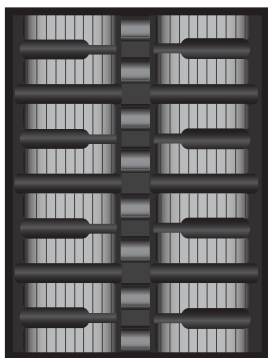


RT\_3

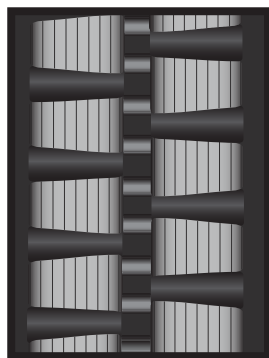

RT\_4

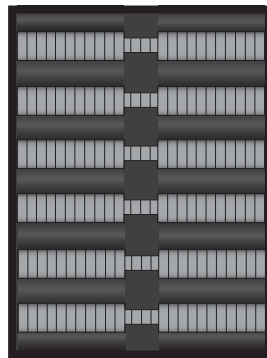

RT\_38

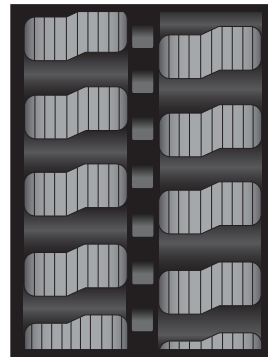

RT\_44

## PARTS



front idler



rear idler



sprocket



roller

Check with your sales representative for more options.

Call Toll Free:  
1-866-431-5305



Visit Us Online:  
[www.Rubbertrax.com](http://www.Rubbertrax.com)

You may not modify, copy, distribute, transmit, display, perform, reproduce, publish, license, create derivative works from, transfer, or sell any information, software, products or services obtained from this pdf.